


Whirlpool IFR42000 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Model: IFR42000
(White)

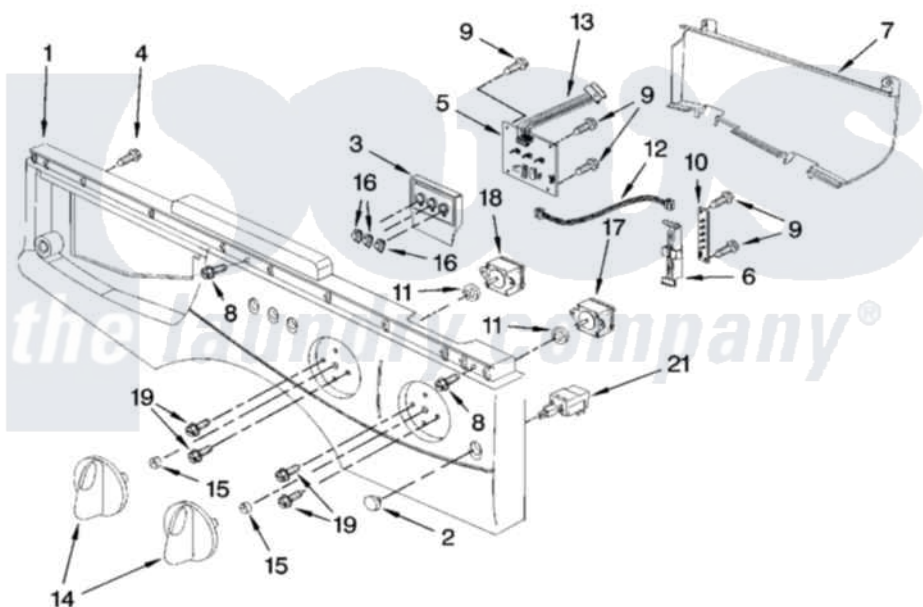

W10113923

3

Whirlpool [Residential Whirlpool IFR42000 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|------------------|
| 1 | 8183122 | | Not Available | Control Panel |
| 2 | 8182725 | | | Button |
| 3 | 8182350 | | | Housing |
| 4 | 8182720 | | | Screw |
| 5 | 8182351 | | | Control, Pcb |
| 6 | 8182353 | | | Support |
| 7 | 8182354 | | | Shield |
| 8 | 8182355 | 98006631 | | Screw |
| 9 | 8182352 | W10253196 | | Screw |
| 10 | 8183123 | | Not Available | LED, PCB |
| 11 | 8182357 | | | Gasket |
| 12 | 8182358 | | | Cable |
| 13 | 8182359 | | | Cable, Ribbon |
| 14 | 8183124 | | Not Available | Knob (2) |
| 15 | 8182361 | | | Spring, Knob |
| 16 | 8182362 | | | Push Button |

| | | |
|----|-------------------------|--|
| 17 | 8182723 | Switch, Spin Speed |
| 18 | 8182723 | Switch, Spin Speed |
| 19 | 8182345 | 8169479 Screw, Grille |
| 21 | 8182395 | Switch And Button Assembly |

