


Whirlpool IGD4400SQ0 01 - TOP AND CONSOLE PARTS

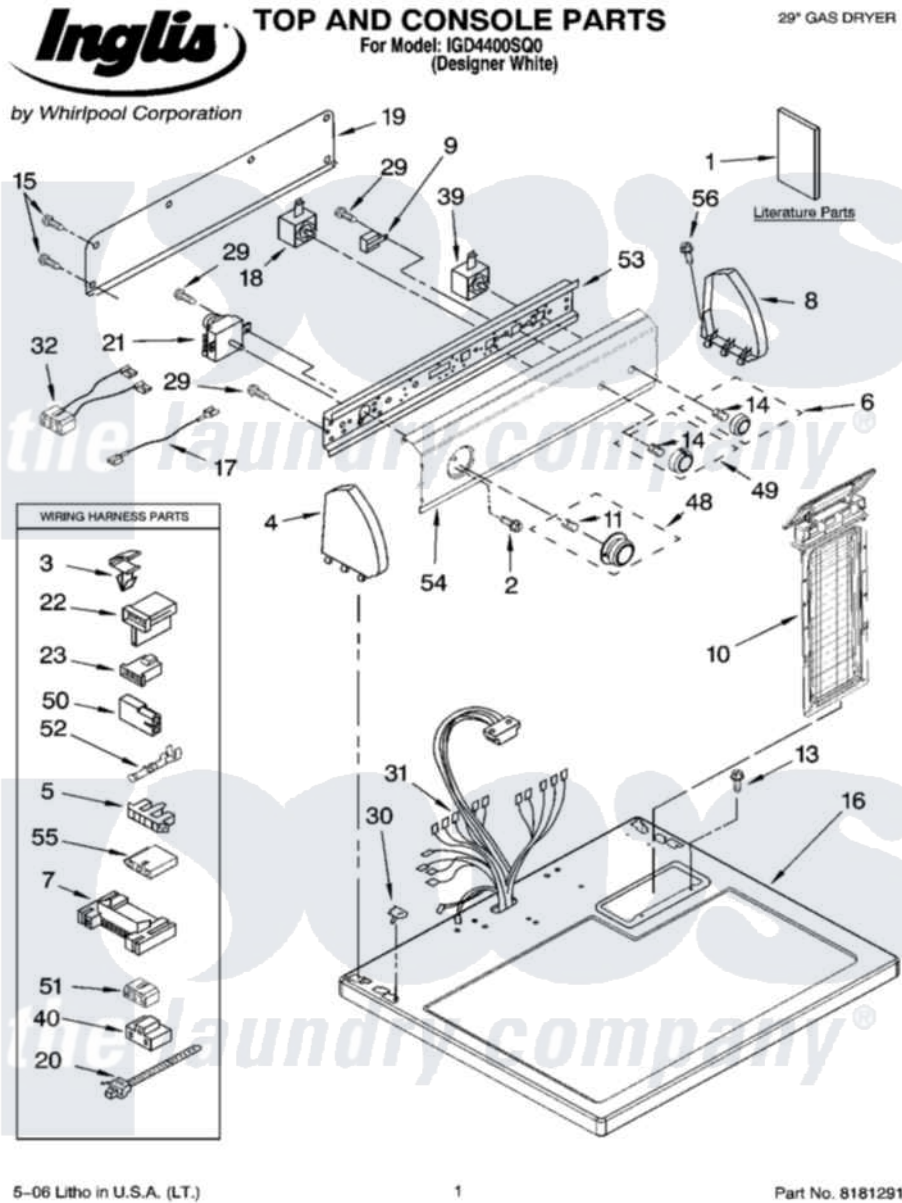

5-06 Litho in U.S.A. (LT.)

1

Part No. 8181291

Whirlpool Residential Whirlpool IGD4400SQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	W10042990		Not Available	Sheet, Cycle Feature
"	8578202		Not Available	Guide, Use & Care
"	8528190		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8274437	279960		Endcap
5	3397269			Connector, Timer
6	8538959			Knob, Push-To-Start
7	3395683			Receptacle, Multi-Terminal
8	8274434	279960		Endcap
9	694419			Mini-Buzzer

10	8558463		Handle And Lint Screen Assembly
11	688805		Clip, Spring Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3401668		Wire, Jumper
18	3399639		Switch, Rotary Temperature
19	8274261		Do-It-Yourself Repair Manuals
20	3391249		Cable Tie, Push Mount
21	8299765		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299878		Harness, Wiring
32	8539893		Wire, Jumper
39	3398094		Switch, Push To Start
40	3401144		Connector
48	8538953		Timer Knob Assembly
49	8538957		Knob, Control
50	717252		Receptacle, Terminal
51	3347243		Block, Disconnect
52	94614		Terminal
53	8271418		Bracket, Control
54	8578967		Panel, Control
55	3936144		Do-It-Yourself Repair Manuals
56	388326		Screw, 8-18 X 1.25

