


Whirlpool IGD4400TQ0 01 - TOP AND CONSOLE PARTS

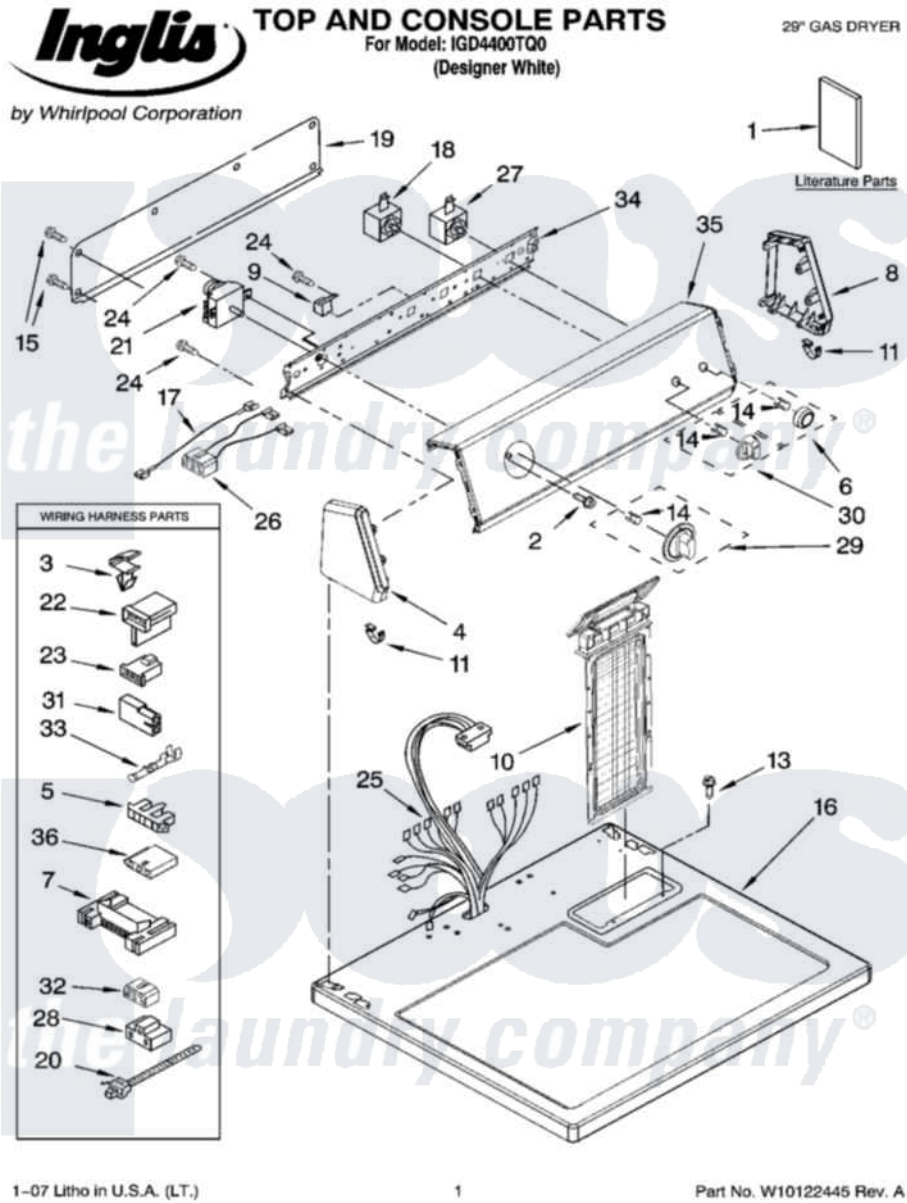

1-07 Litho in U.S.A. (L.T.)

1

Part No. W10122445 Rev. A

Whirlpool Residential Whirlpool IGD4400TQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10088971		Not Available	Instructions, Installation
"	W10042990		Not Available	Sheet, Cycle Feature
"	8578202		Not Available	Guide, Use & Care
"	8576817		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8579674	8579686		Endcap
5	3397269			Connector, Timer
6	W10110066			Knob, Push-To-Start
7	3395683			Receptacle, Multi-Terminal
8	8579673	8579685		Endcap
9	694419			Mini-Buzzer

10	8558463		HAndle And Lint Screen Assembly
11	8312709		Clip-Console
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	3401684		Jumper, Wire
18	3399639		Switch, Rotary Temperature
19	8274261		Do-It-Yourself Repair Manuals
20	3391249		Cable Tie, Push Mount
21	8299765		Timer Assembly
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
24	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	8299878		Harness, Wiring
26	8539893		Wire, Jumper
27	3398095		Switch, Push-To-Start
28	3401144		Connector
29	W10110064		Timer Knob Assembly
30	W10110063		Knob, Control
31	717252		Receptacle, Terminal
32	3347243		Block, Disconnect
33	94614		Terminal
34	8579672		Bracket, Control
35	W10114902		Panel, Control
36	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]