


Whirlpool IJ70002 01 - TOP AND CONSOLE PARTS

Inglis

TOP AND CONSOLE PARTS

For Model: IJ70002
(Designer White)

29" GAS DRYER

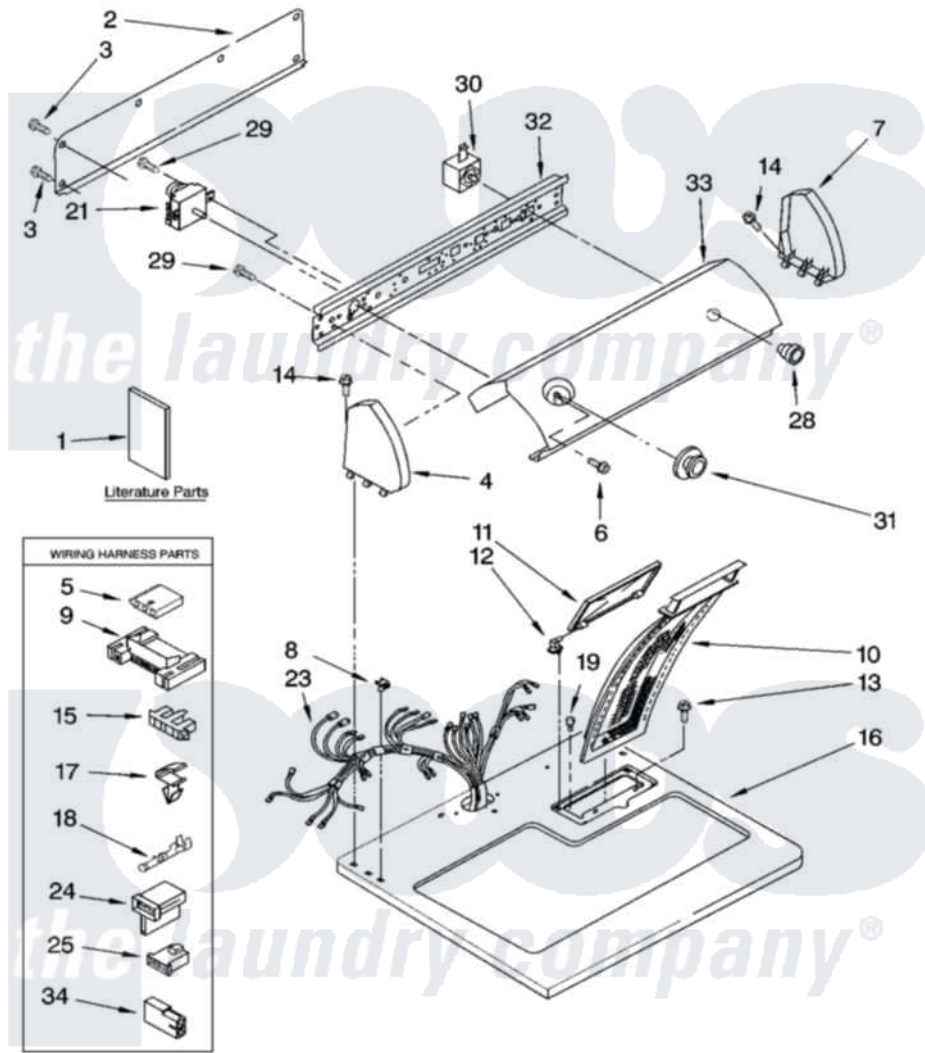

10-02 Litho in U.S.A. (djc)

1

Part No. 8179711

Whirlpool Residential Whirlpool IJ70002 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8314836		Not Available	Literature Parts (Use & Care Guide)
"	LIT3978907		Not Available	Instructions, Installation
"	LIT8528189		Not Available	Literature Parts (Label, Wiring Diagram)
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274261			Do-It-Yourself Repair Manuals
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3400859			Screw, Grounding
7	8271359	279962		Endcap
8	357213			Nut, Push-In
9	3395683			Receptacle, Multi-Terminal

10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8271390	8521918	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	297535	17258	Bumper
21	3976584		Timer Assembly
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
28	8271341	3957804	Knob, Push-To-Start
29	3390646	W10139210	Screw, 8-18 X 5/16
30	3977456		Switch, Push-To-Start
31	8312687	3957754	Timer Knob Assembly
32	8271418		Bracket, Control
33	3977840	Not Available	Panel, Control
34	717252		Receptacle, Terminal
"	BLANK	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

