


# Whirlpool IM42000 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: IM42000  
(White)

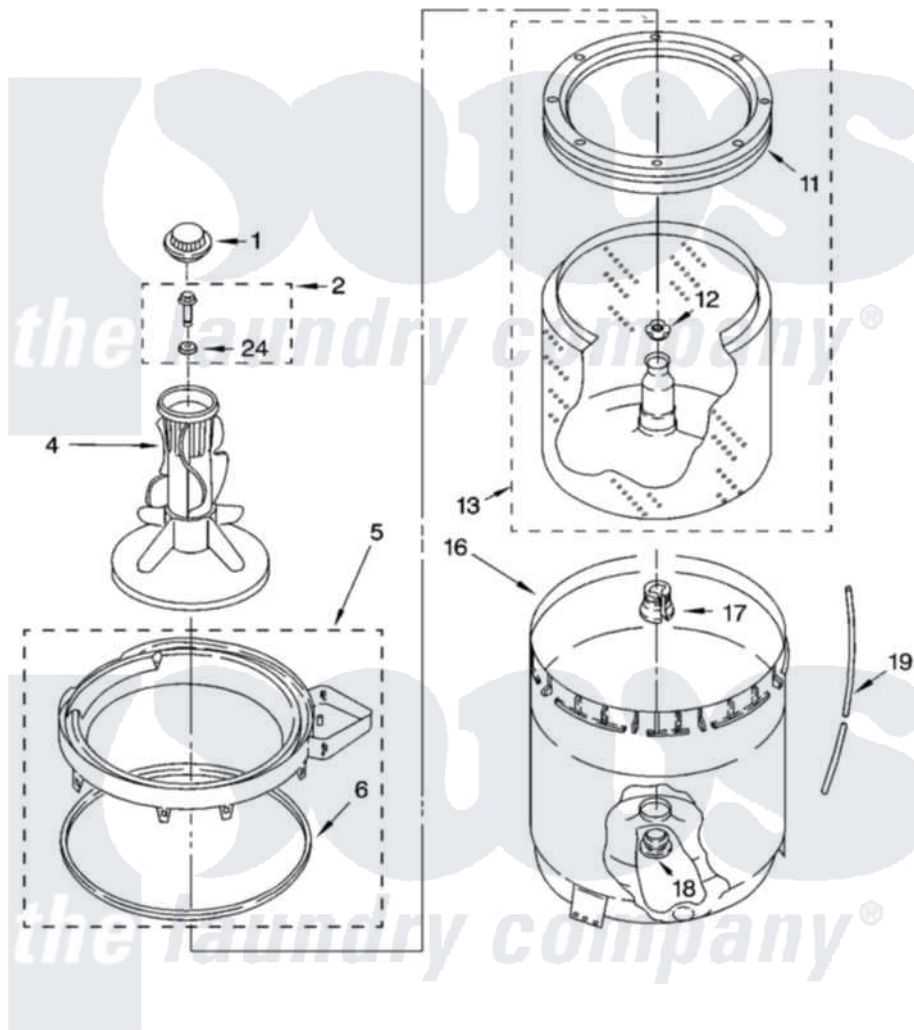

8180109

5

Whirlpool Residential Whirlpool IM42000 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
4	<a href="#">63235</a>			Agitator Assembly
5	8528150	<a href="#">W10445870</a>		Ring-Tub
6	<a href="#">3976308</a>			Gasket, Tub Ring
11	8519788	<a href="#">387240</a>		Ring, Balance
12	<a href="#">21366</a>			Nut, Spanner
13	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
16	<a href="#">63849</a>			Strain Relief, Power Cord
17	<a href="#">389140</a>			Tub Block, Basket Drive
18	<a href="#">383727</a>			Gasket, Centerpod
19	3347780	<a href="#">353244</a>		Hose, Pressure Switch
24	<a href="#">3949550</a>			Washer