


Whirlpool IM42001 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: IM42001
(White)

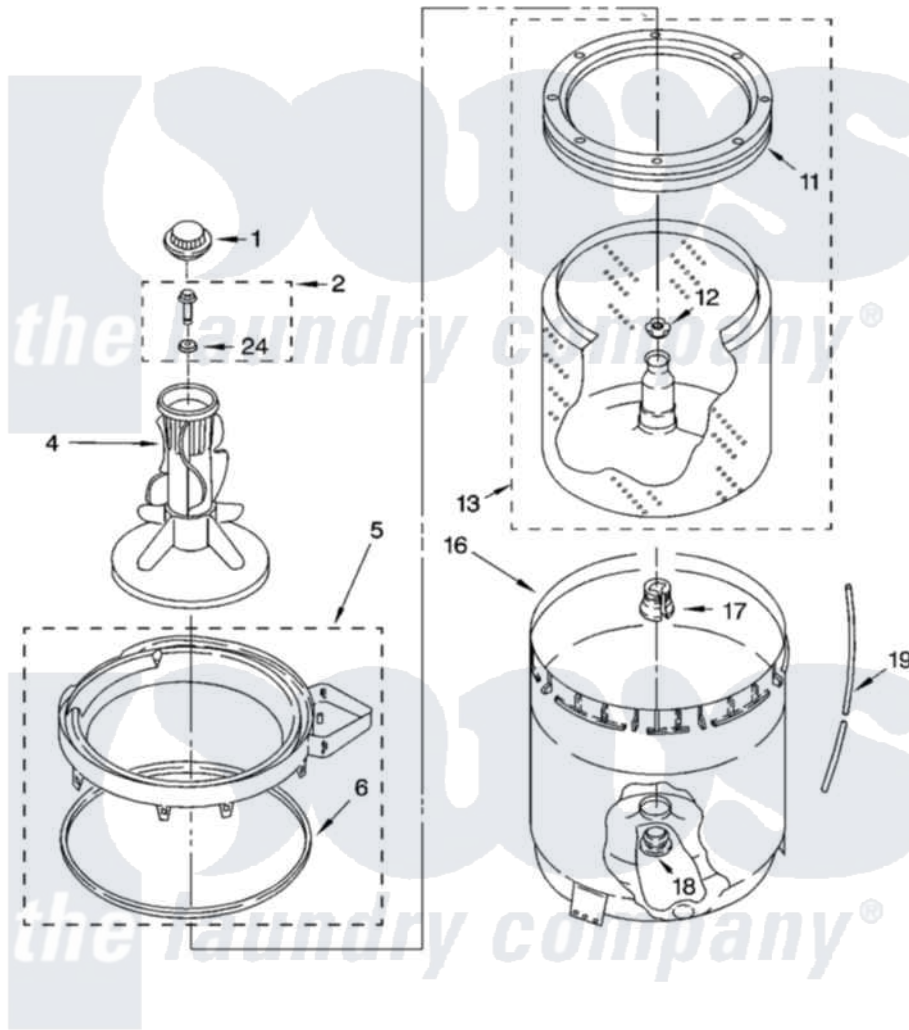

8180200

5

Whirlpool Residential Whirlpool IM42001 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
4	63235			Agitator Assembly
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
11	8519788	387240		Ring, Balance
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive
18	383727			Gasket, Centerpod
19	3347780	353244		Hose, Pressure Switch
24	3949550			Washer