


**Whirlpool IM42001 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS
(NOT INCLUDED)**

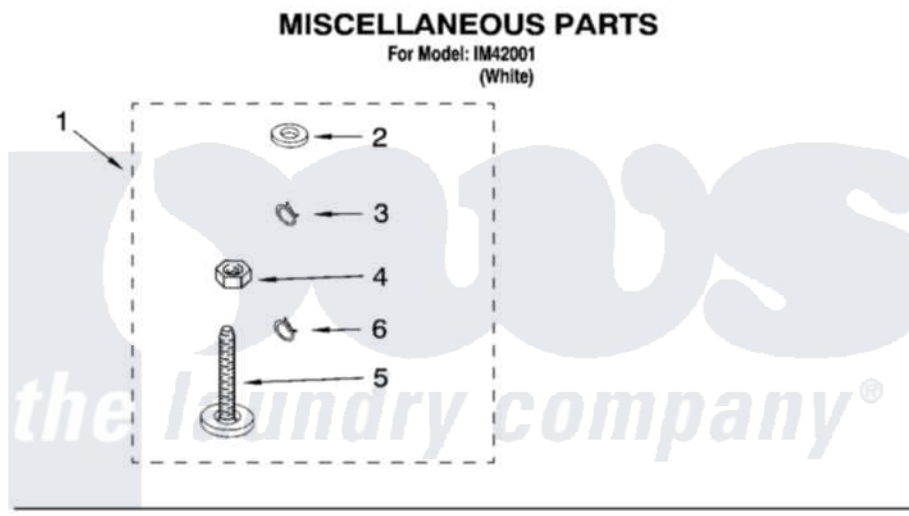

Whirlpool [Residential Whirlpool IM42001 Washer Parts](#) Parts Diagram 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976263	285654		Parts-Misc
2	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
3	3366912	356138		Clamp, Hose
4	3359452			Nut, Lock
5	389102	W10001130		Foot, Leveling
6	3366913	3357331		Clamp, Drain
	72017			Paint, Touch-Up
"	350938			Paint, Pressurized Spray B
"	350930			Paint, Pressurized Spray B
"	799344			Paint, Touch-Up)
"	BLANK		Not Available	OIL
"	350572			Oil
"	BLANK		Not Available	LUBRICANT

"	285208		Lubricant
"	BLANK	Not Available	SEALER
"	285195		Sealer Sealer, Gasket
"	BLANK	Not Available	ACCESSORY PARTS
"	63580		Dispenser, Fabric Softener
"	367031		Water System Parts
"	285320		Water System Parts

