


Whirlpool IM43000 02 - CONTROLS AND REAR PANEL PARTS

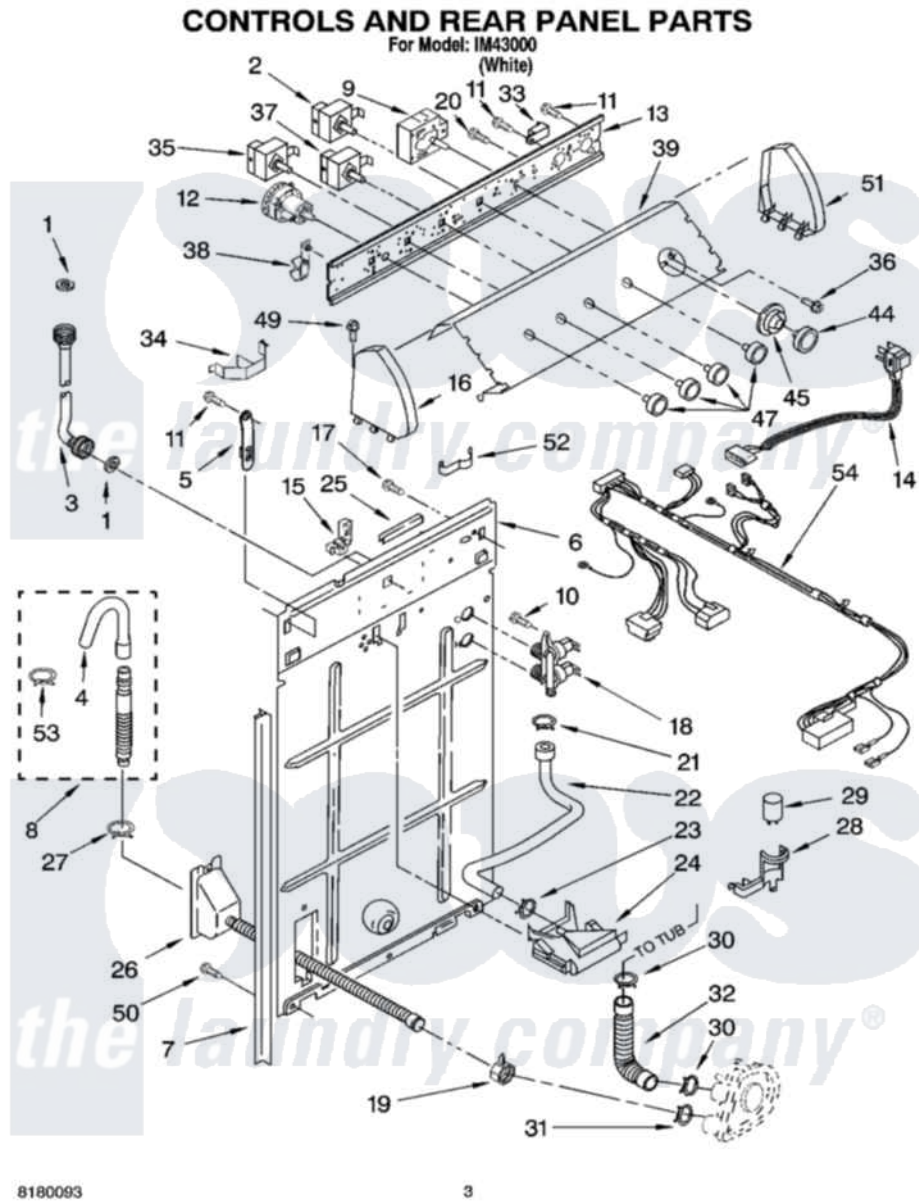

Whirlpool Residential Whirlpool IM43000 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3949187	W10168262		Switch, Rotary
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8541942			Timer, Control
10	9740848			Screw, Mixing Valve Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366846	W10335056	Switch-WL
13	3948608		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	3351614		Screw, Gearcase Cover Mounting
18	3955673	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	3400073		Screw, Ground
21	370451	596669	Clamp, Manifold
22	3357328		Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	3347034		Break, Vacuum
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8318201	8318046	Clip, Capacitor
29	661606	8572717	Capacitor, Motor Start
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	694419		Mini-Buzzer
34	8055003		Clip, Harness And Pressure Switch
35	661614		Switch, Water Temperature
36	3400818		Screw, Timer Mounting
37	3949180	W10168257	Switch, Rotary
38	8317975		Restraint, Harness
39	3954236	Not Available	Panel, Console
44	8271345	3957824	Knob, Timer
45	8271351	3957849	Dial, Timer
47	8271339	3957799	Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
52	3347812	8528351	Clip
53	3366913	3357331	Clamp, Drain
54	3956653	Not Available	Wiring, Harness (For Detail See Page 9 & 10)

the laundry company[®]