


**Whirlpool IM44000 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS  
(NOT INCLUDED)**

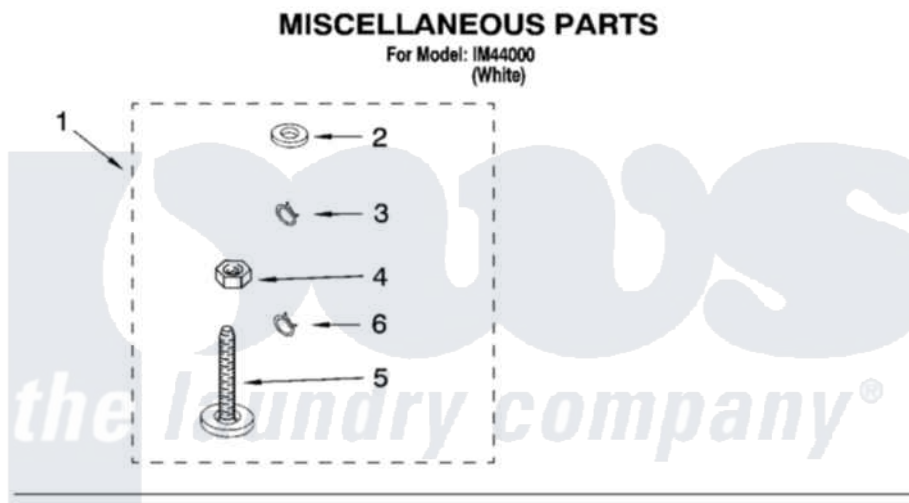

Whirlpool [Residential Whirlpool IM44000 Washer Parts](#) Parts Diagram 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976263	<a href="#">285654</a>		Parts-Misc
2	3976300	<a href="#">16123</a>		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
3	3366912	<a href="#">356138</a>		Clamp, Hose
4	<a href="#">3359452</a>			Nut, Lock
5	389102	<a href="#">W10001130</a>		Foot, Leveling
6	3366913	<a href="#">3357331</a>		Clamp, Drain
	<a href="#">72017</a>			Paint, Touch-Up
"	<a href="#">350938</a>			Paint, Pressurized Spray B
"	<a href="#">350930</a>			Paint, Pressurized Spray B
"	<a href="#">799344</a>			Paint, Touch-Up )
"	BLANK		Not Available	OIL
"	<a href="#">350572</a>			Oil
"	BLANK		Not Available	LUBRICANT

"	<a href="#">285208</a>		Lubricant
"	BLANK	Not Available	SEALER
"	<a href="#">285195</a>		Sealer Sealer, Gasket
"	BLANK	Not Available	ACCESSORY PARTS
"	<a href="#">63580</a>		Dispenser, Fabric Softener
"	<a href="#">367031</a>		Water System Parts
"	<a href="#">285320</a>		Water System Parts

