


# Whirlpool IM46000 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: IM46000  
(White)

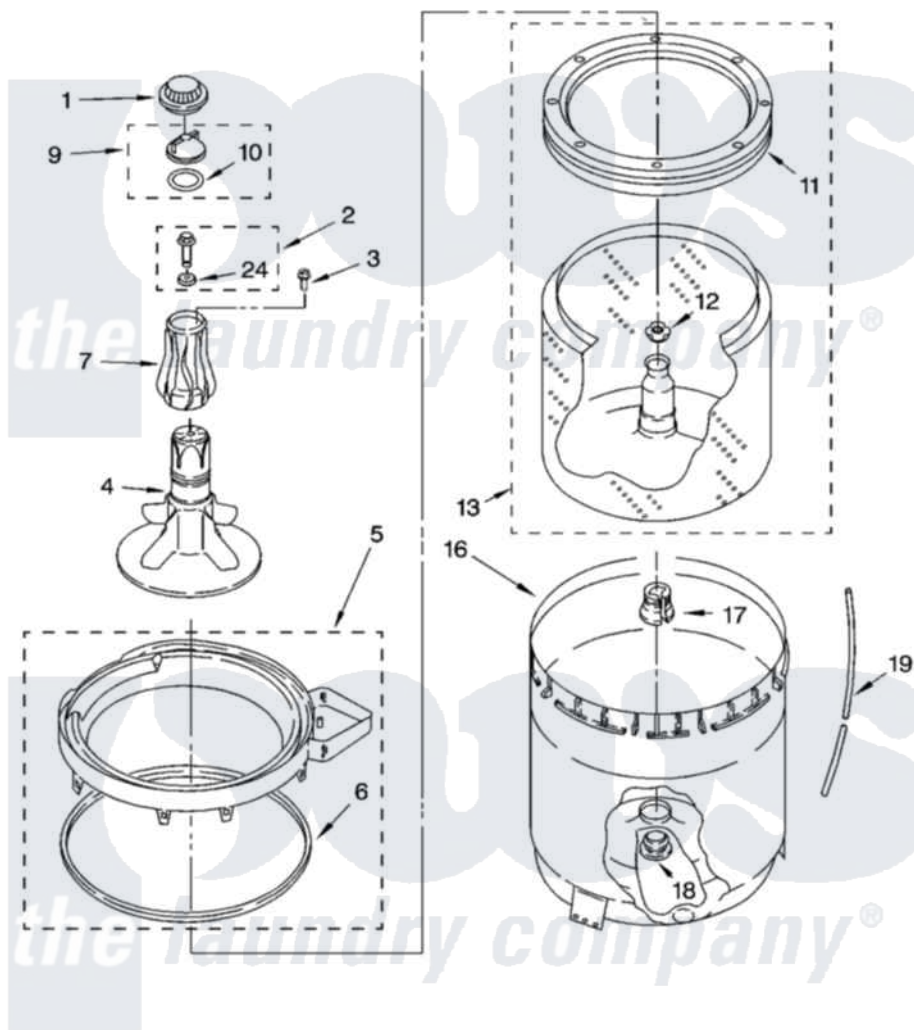

8180175

5

Whirlpool [Residential Whirlpool IM46000 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
3	63027	<a href="#">W10109200</a>		Screw, Baffle Mounting
4	<a href="#">64214</a>			Agitator
5	8528150	<a href="#">W10445870</a>		Ring-Tub
6	<a href="#">3976308</a>			Gasket, Tub Ring
7	<a href="#">64210</a>			Extension, Agitator
9	3354733	<a href="#">W10074580</a>		Cap, Barrier
10	3348855	<a href="#">W10072840</a>		Fabric Softener
11	8519788	<a href="#">387240</a>		Ring, Balance
12	<a href="#">21366</a>			Nut, Spanner
13	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly
16	<a href="#">63849</a>			Strain Relief, Power Cord
17	<a href="#">389140</a>			Tub Block, Basket Drive
18	<a href="#">383727</a>			Gasket, Centerpod
19	3347780	<a href="#">353244</a>		Hose, Pressure Switch

