


# Whirlpool IP70000 01 - TOP AND CONSOLE PARTS

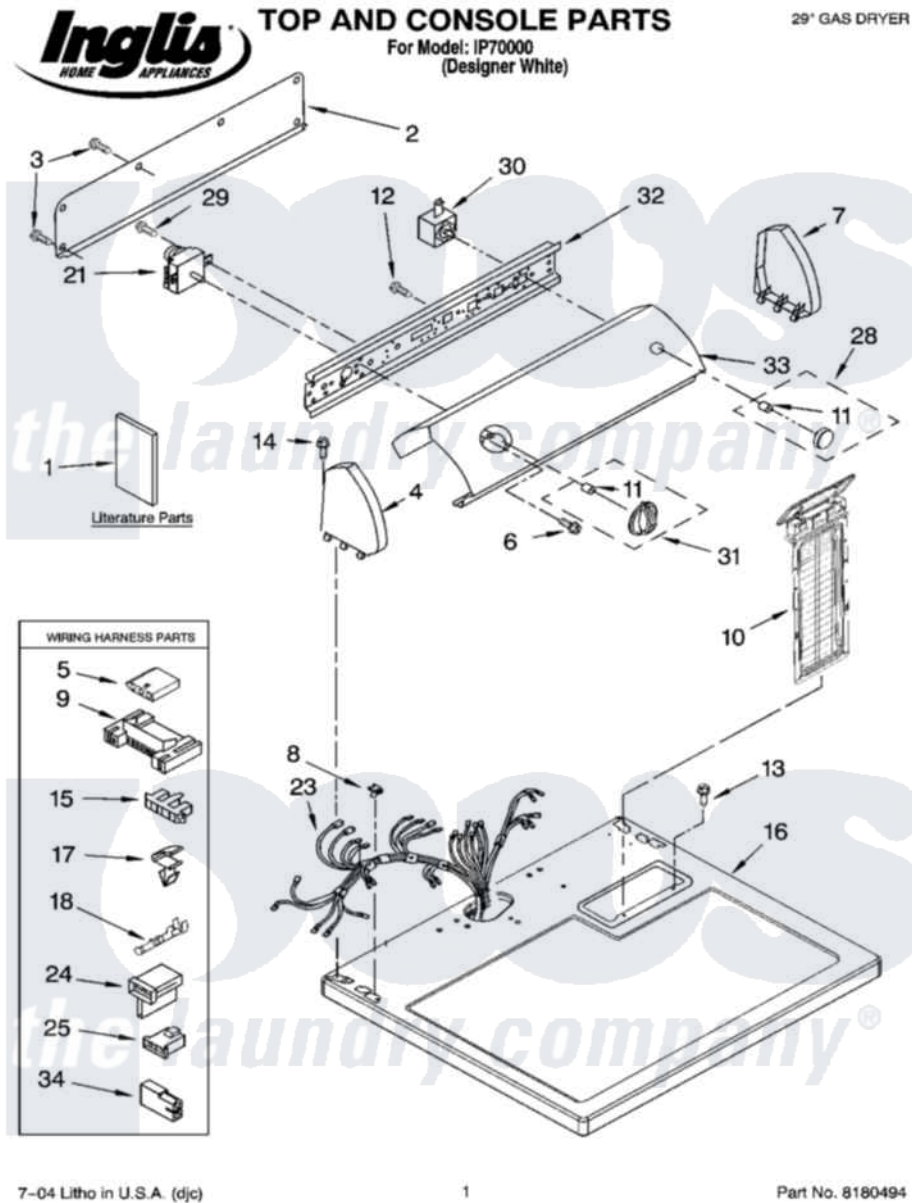

7-04 Litho in U.S.A. (djc)

1

Part No. 8180494

Whirlpool Residential Whirlpool IP70000 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8557472		Not Available	Use & Care Guide
"	8533784		Not Available	Sheet, Cycle Feature
"	8562584		Not Available	Instructions, Installation
"	8528189		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	<a href="#">693995</a>			Screw, Hex Head
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	8533951	<a href="#">3400859</a>		Screw, Grounding
7	8271359	<a href="#">279962</a>		Endcap
8	<a href="#">357213</a>			Nut, Push-In
9	<a href="#">3395683</a>			Receptacle, Multi-Terminal

10	<a href="#">8558467</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">388326</a>		Screw, 8-18 X 1.25
15	<a href="#">3397269</a>		Connector, Timer
16	8557930	<a href="#">8563985</a>	Top
17	<a href="#">3394427</a>		Clip-Harness
18	<a href="#">94614</a>		Terminal
21	<a href="#">3976584</a>		Timer Assembly
23	<a href="#">8299876</a>		Harness, Wiring
24	<a href="#">3403499</a>		Connector, 2-Postion
25	<a href="#">3403498</a>		Connector, 3-Position
28	<a href="#">8544941</a>		Knob, Push-To-Start
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">3977456</a>		Switch, Push-To-Start
31	8543273	Not Available	Timer Knob Assembly (Grey)
32	<a href="#">8271418</a>		Bracket, Control
33	8557463	Not Available	Panel, Control
34	<a href="#">717252</a>		Receptacle, Terminal

