


# Whirlpool IP82001 02 - TOP AND CONSOLE PARTS

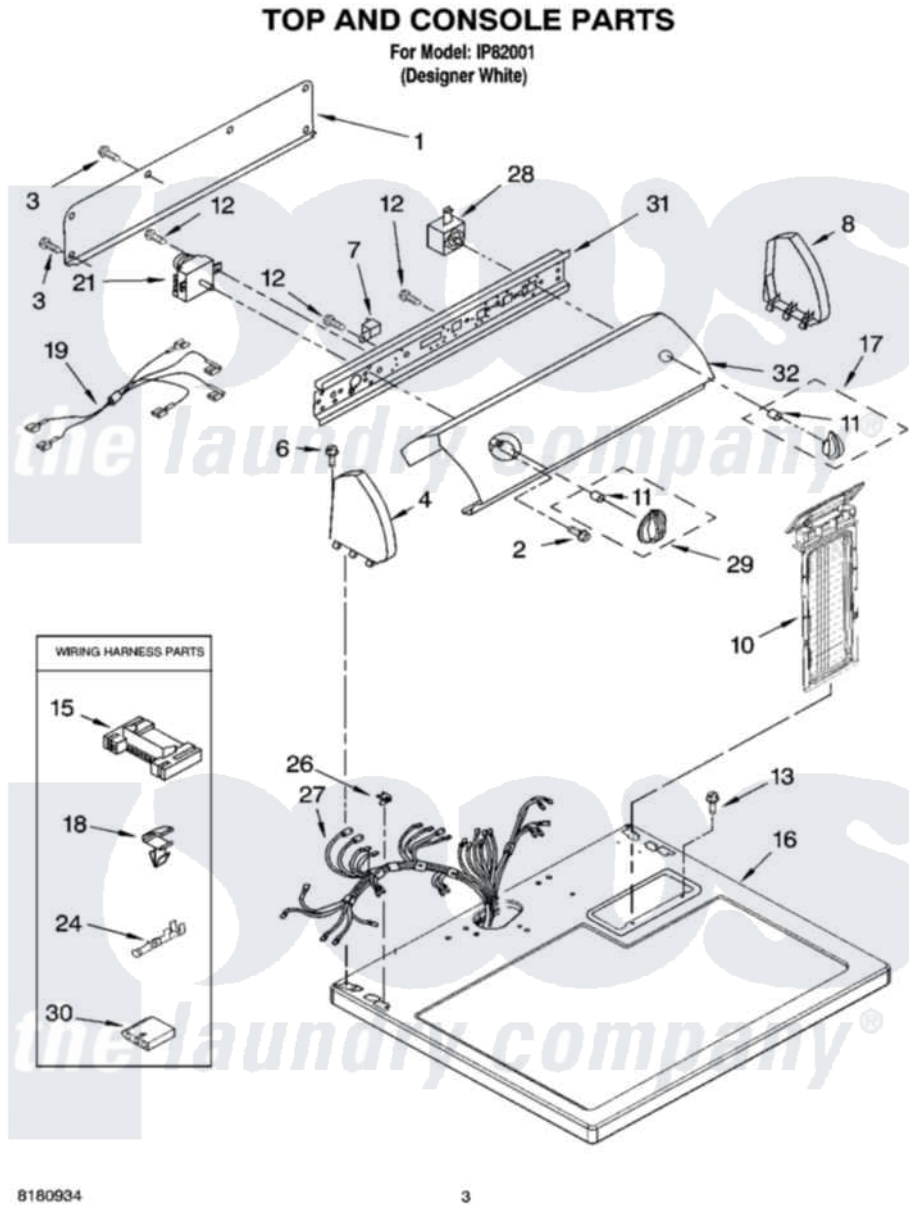

Whirlpool [Residential Whirlpool IP82001 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
2	8533951	<a href="#">3400859</a>		Screw, Grounding
3	<a href="#">693995</a>			Screw, Hex Head
4	8271365	<a href="#">279962</a>		Endcap
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	<a href="#">694419</a>			Mini-Buzzer
8	8271359	<a href="#">279962</a>		Endcap
10	<a href="#">8558463</a>			HANdle And Lint Screen Assembly
11	<a href="#">8536939</a>			Clip, Knob
12	8533971	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
15	<a href="#">3395683</a>			Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>		Top
17	8543270		Not Available	Knob, Control (3) (Grey)

18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">8539888</a>		Jumper, Wire
21	<a href="#">8299778</a>		Timer, 60 Hz
24	<a href="#">94614</a>		Terminal
26	<a href="#">357213</a>		Nut, Push-In
27	8299870	Not Available	Harness, Wiring
28	<a href="#">8543274</a>		Switch, Push-To-Start
29	8543273	Not Available	Timer Knob Assembly (Grey)
30	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
31	<a href="#">8271418</a>		Bracket, Control
32	8557464	Not Available	Panel, Control

