


# Whirlpool IS42000 01 - TOP AND CABINET PARTS

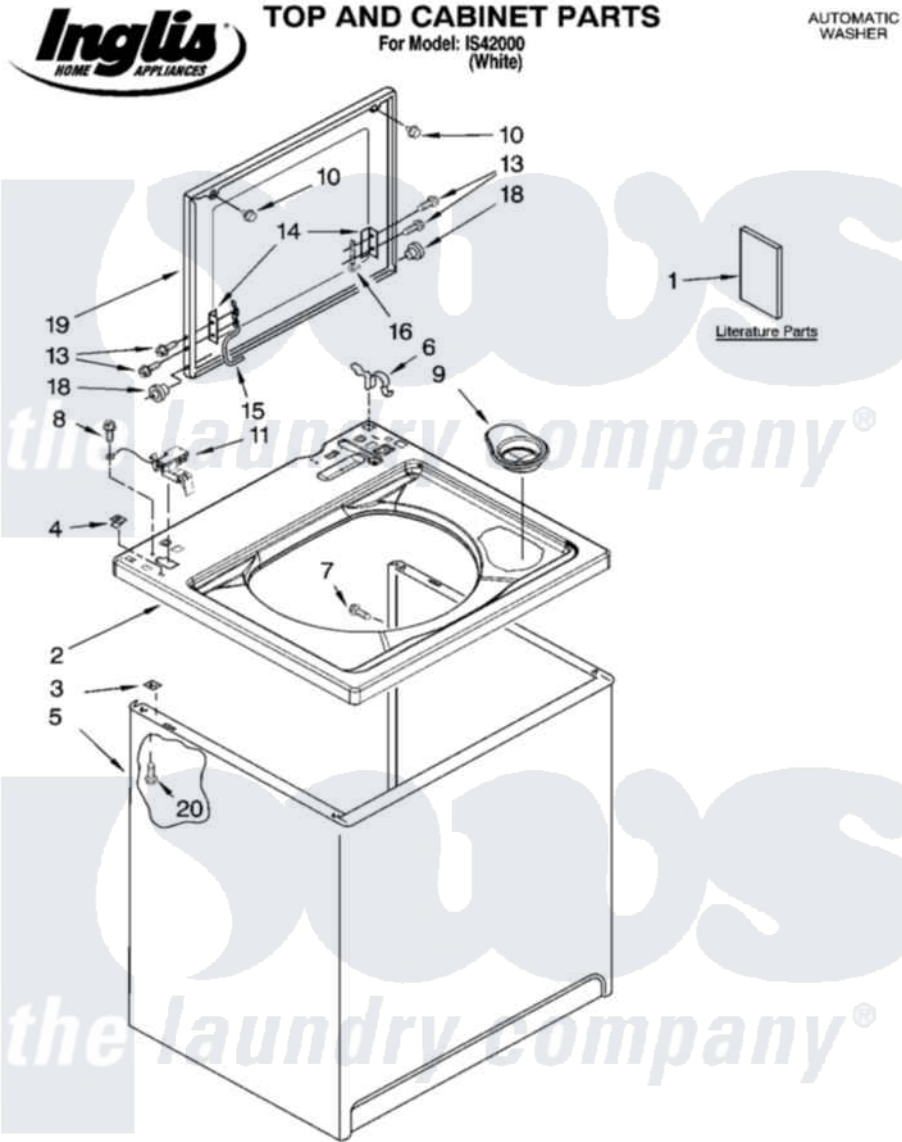

Whirlpool Residential Whirlpool IS42000 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">W10044800</a>			Installation Instructions
"	W10096020		Not Available	Feature Sheet
"	8578236		Not Available	Use & Care Guide
"	8578912		Not Available	Wiring Diagram
2	8543451	<a href="#">8543447</a>		Top
3	62750			Spacer, Cabinet To Top (4)
4	<a href="#">357213</a>			Nut, Push-In
5	<a href="#">63424</a>			Cabinet
6	<a href="#">62780</a>			Clip, Top And Cabinet And Rear Panel
7	3357011	<a href="#">308685</a>		Side Trim )
8	<a href="#">3351614</a>			Screw, Gearcase Cover Mounting
9	<a href="#">8566266</a>			Dispenser, Bleach
10	<a href="#">9724509</a>			Bumper, Lid
11	<a href="#">8318084</a>			Switch, Lid
13	355274	<a href="#">W10119828</a>		Screw, Lid Hinge Mounting

14	<a href="#">21097</a>		Pad, Lid Hinge
15	8559336	<a href="#">W10225136</a>	Hinge 7 Pad Assembly
16	<a href="#">91770</a>		Hinge, Lid
18	<a href="#">8319539</a>		Bearing, Lid Hinge
19	8580057	<a href="#">W10193861</a>	Lid
20	<a href="#">3390631</a>		Screw, 10-16 X 3/8

