


Whirlpool IS72000 01 - TOP AND CONSOLE PARTS

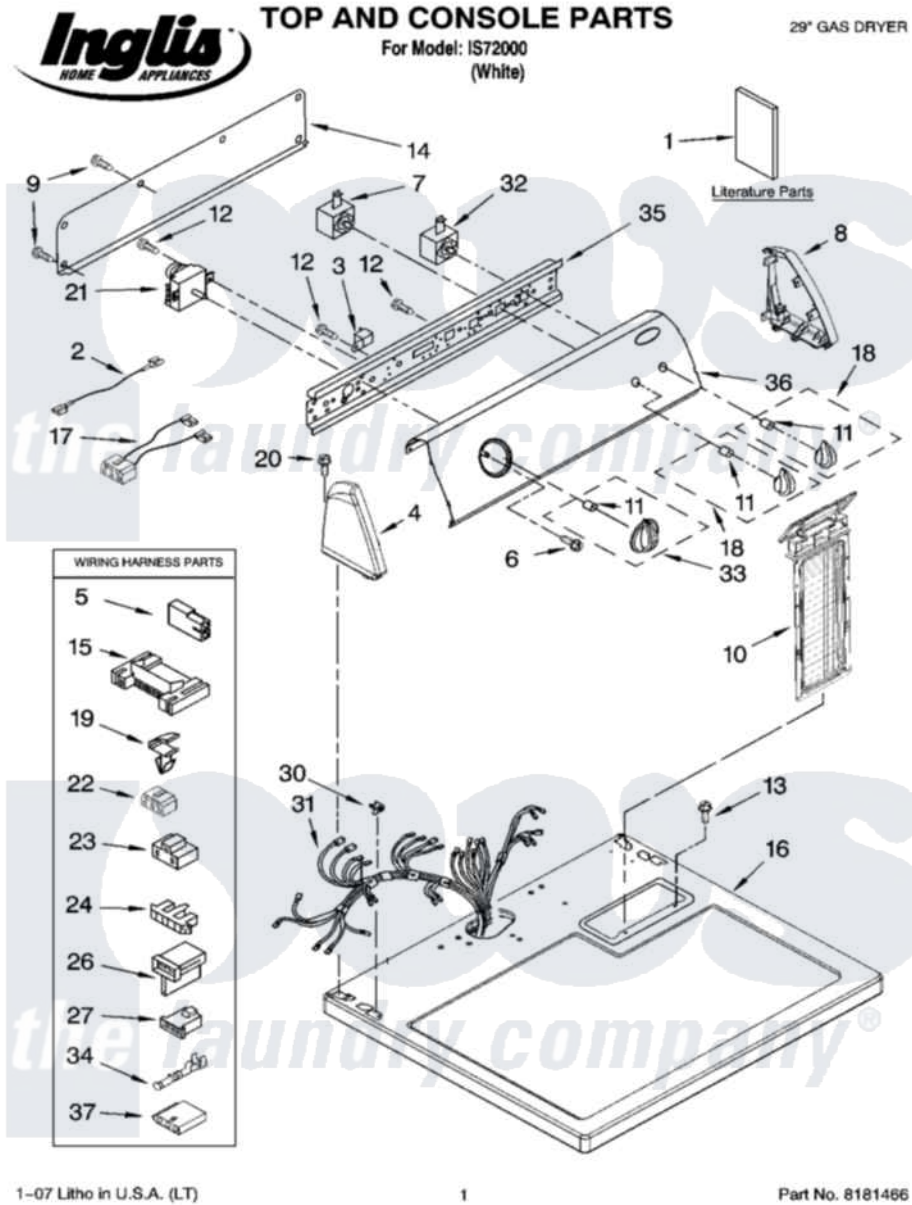

1-07 Litho in U.S.A. (LT)

1

Part No. 8181466

Whirlpool Residential Whirlpool IS72000 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562584		Not Available	Instructions, Installation
"	W10110133		Not Available	Sheet, Cycle Feature
"	8578197		Not Available	Use & Care Guide
"	8528191		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	717252			Receptacle, Terminal
6	8533951	3400859		Screw, Grounding
7	3399639			Switch, Rotary Temperature
8	8271359	279962		Endcap
9	693995			Screw, Hex Head

10	8558463		Handle And Lint Screen Assembly
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8274261		Do-It-Yourself Repair Manuals
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
17	8539893		Wire, Jumper
18	8543270	Not Available	Knob, Control (3) (Grey)
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299765		Timer Assembly
22	3347243		Block, Disconnect
23	3401144		Connector
24	3397269		Connector, Timer
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
30	357213		Nut, Push-In
31	8299879		Harness, Wiring
32	3398095		Switch, Push-To-Start
33	8543273	Not Available	Timer Knob Assembly (Grey)
34	94614		Terminal
35	8271418		Bracket, Control
36	8578960	Not Available	Panel, Control
37	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]