


Whirlpool IS80000 01 - TOP AND CONSOLE PARTS

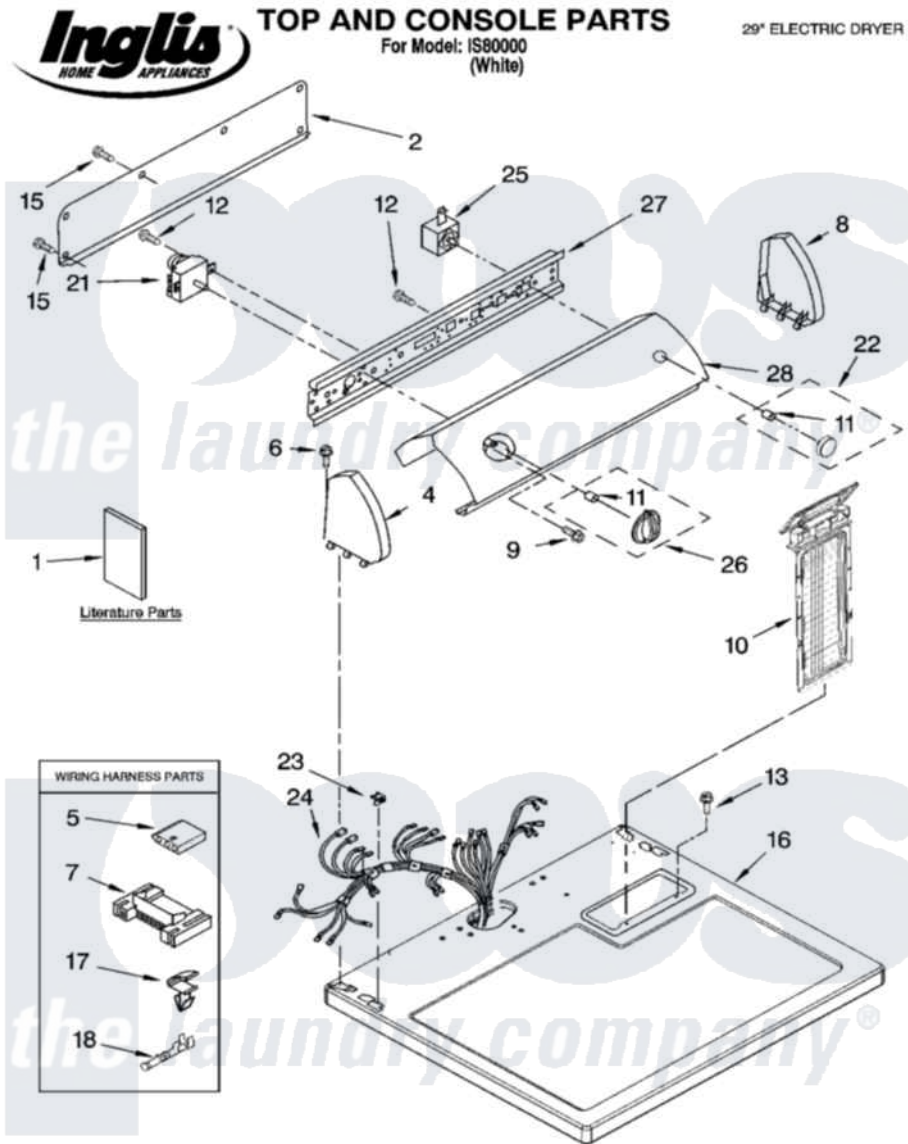

7-06 Litho in U.S.A. (drd)

1

Part No. 8181452

Whirlpool Residential Whirlpool IS80000 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578197		Not Available	Use & Care Guide
"	8535831		Not Available	Instructions, Installation
"	W10110133		Not Available	Sheet, Cycle Feature
"	8528189		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274261			Do-It-Yourself Repair Manuals
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	8533951	3400859		Screw, Grounding
10	8558467			Screen, Lint

11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	94614		Terminal
21	8299778		Timer, 60 Hz
22	8544941		Knob, Push-To-Start
23	357213		Nut, Push-In
24	8299868	Not Available	Harness, Wiring
25	3977456		Switch, Push-To-Start
26	8543273	Not Available	Timer Knob Assembly (Grey)
27	8271418		Bracket, Control
28	8578959	Not Available	Panel, Control

