


Whirlpool IT42000 03 - AGITATOR, BASKET AND TUB PARTS

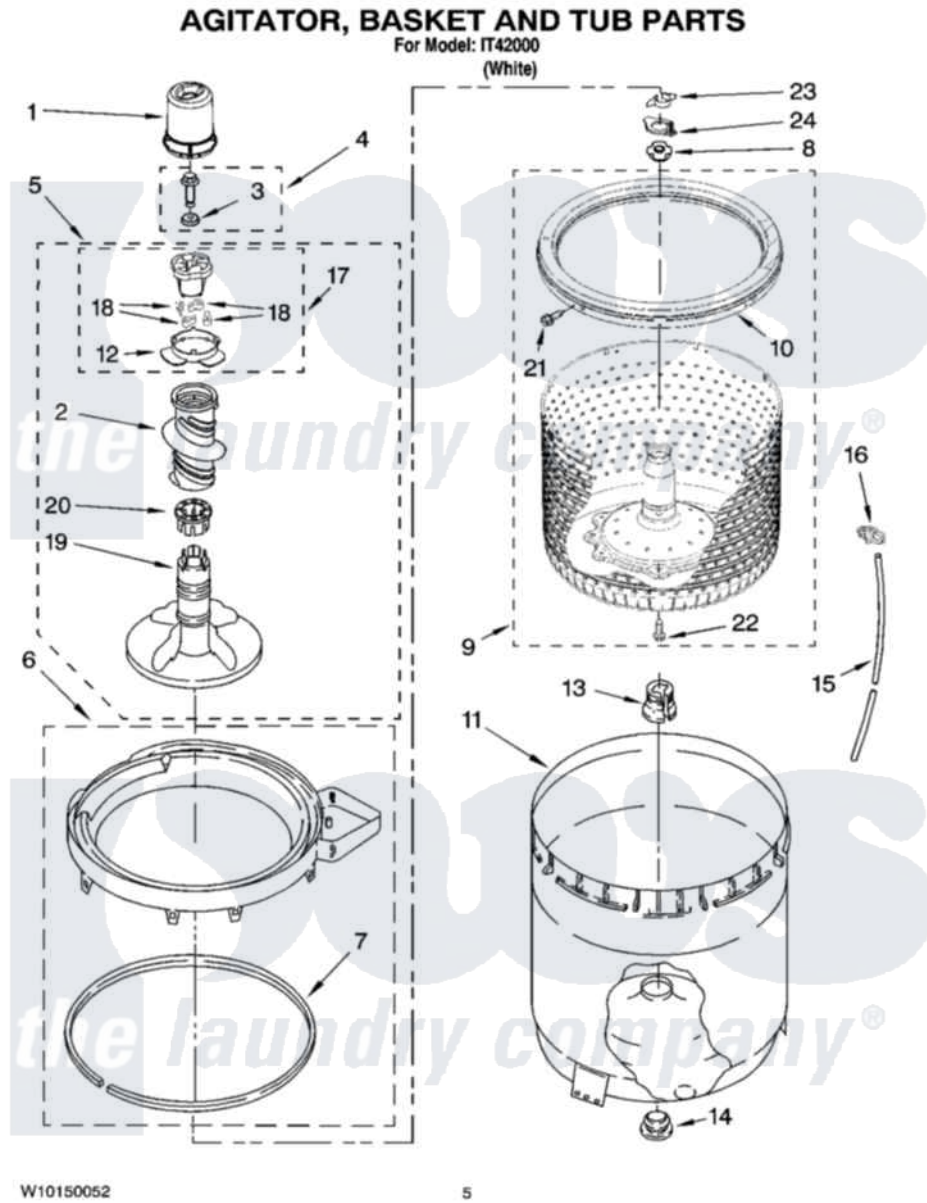

Whirlpool [Residential Whirlpool IT42000 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8559760			Dispenser, Fabric Softener
2	3360824			Auger, Agitator
3	3949550			Washer
4	358237			Screw And Washer
5	W10093671			Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	W10042080			Basket And Balance Ring
10	W10116946			Balance Ring
11	63849			Strain Relief, Power Cord
12	3363661			Bearing, Driven Cam
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpod
15	3347780	353244		Hose, Pressure Switch
16	2219077			Clip, Pressure Switch Hose

17	3363662	285748	Cam-Agitator
18	3366877	80040	Dog-Agitator
19	W10093670		Agitator
20	3350389	285587	Washer
21	W10112540		Screw, Balance Ring
22	W10112537		Screw, Adapter Assembly
23	3354845		Clip, Agitator
24	8543666		Washer, Agitator

