


Whirlpool ITW4300SQ2 03 - AGITATOR, BASKET AND TUB PARTS

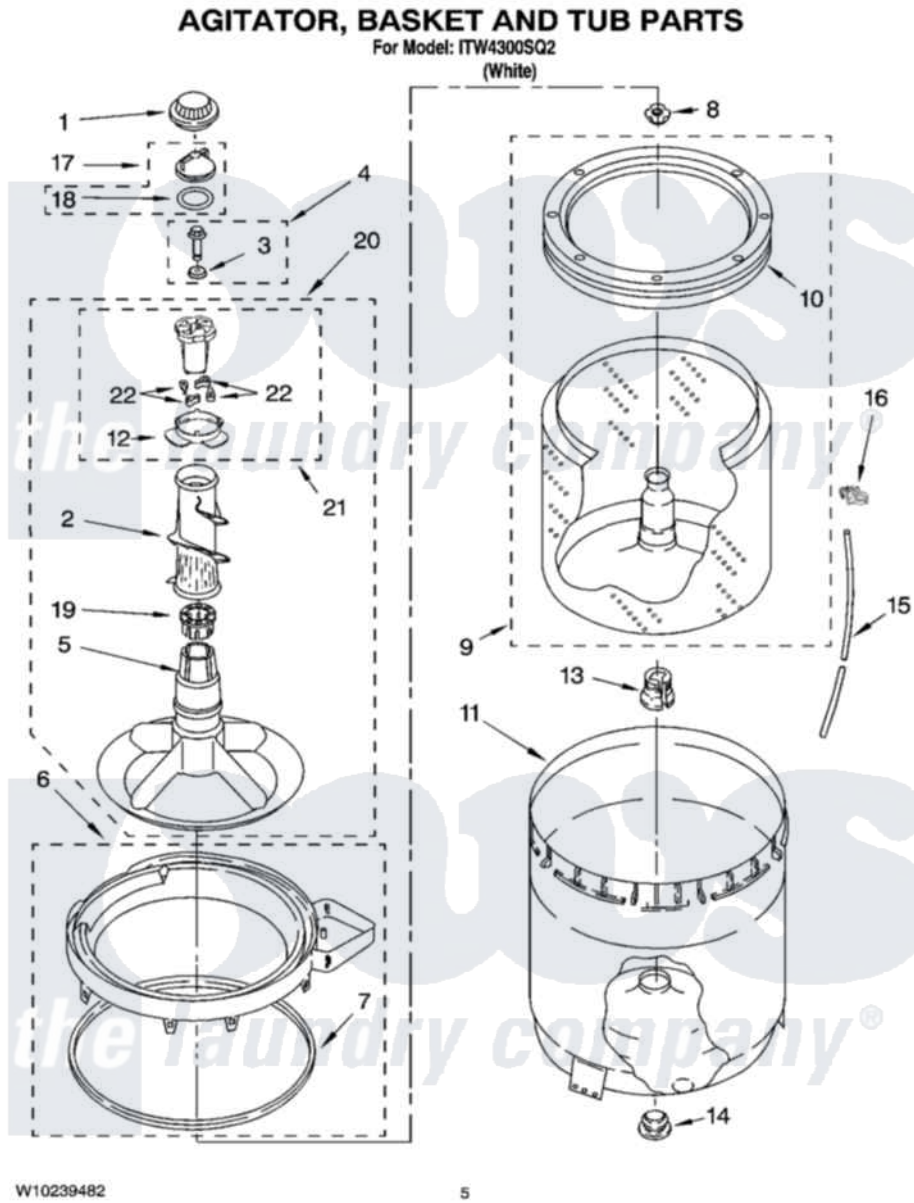

Whirlpool Residential Whirlpool ITW4300SQ2 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	3348752			Mover, Clothes
3	3949550			Washer
4	358237			Screw And Washer
5	3347288			Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526017	W10389329		Clothes Container, Assembly
10	387240			Ring, Balance
11	63849			Strain Relief, Power Cord
12	3363661			Bearing, Driven Cam
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpodt
15	3347780	353244		Hose, Pressure Switch
16	2219077			Clip, Pressure Switch Hose

17	3354733	W10074580	Cap, Barrier
18	W10072840		Fabric Softener
19	3350389	285587	Washer
20	3348117	285565	Agitator
21	3363663	285811	Cam-Agitator
22	3366877	80040	Dog-Agitator

