


# Whirlpool ITW4300SQ3 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: ITW4300SQ3

(White)

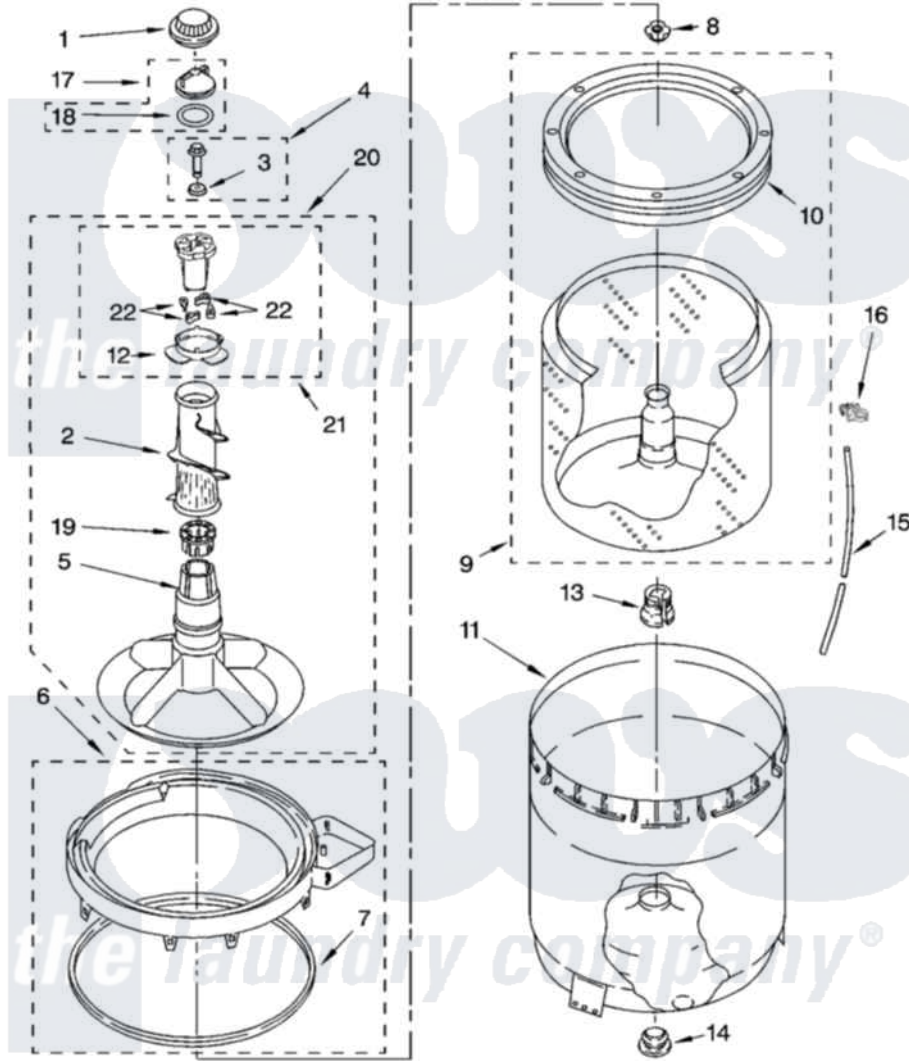

W10243098

5

Whirlpool Residential Whirlpool ITW4300SQ3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">3348752</a>			Mover, Clothes
3	<a href="#">3949550</a>			Washer
4	<a href="#">358237</a>			Screw And Washer
5	<a href="#">3347288</a>			Agitator
6	8528150	<a href="#">W10445870</a>		Ring-Tub
7	<a href="#">3976308</a>			Gasket, Tub Ring
8	<a href="#">21366</a>			Nut, Spanner
9	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly
10	<a href="#">387240</a>			Ring, Balance
11	<a href="#">63849</a>			Strain Relief, Power Cord
12	<a href="#">3363661</a>			Bearing, Driven Cam
13	<a href="#">389140</a>			Tub Block, Basket Drive
14	<a href="#">383727</a>			Gasket, Centerpodt
15	3347780	<a href="#">353244</a>		Hose, Pressure Switch
16	<a href="#">2219077</a>			Clip, Pressure Switch Hose

17	3354733	<a href="#">W10074580</a>	Cap, Barrier
18	<a href="#">W10072840</a>		Fabric Softener
19	3350389	<a href="#">285587</a>	Washer
20	3348117	<a href="#">285565</a>	Agitator
21	3363663	<a href="#">285811</a>	Cam-Agitator
22	3366877	<a href="#">80040</a>	Dog-Agitator

