


# Whirlpool IV45001 02 - CONTROLS AND REAR PANEL PARTS

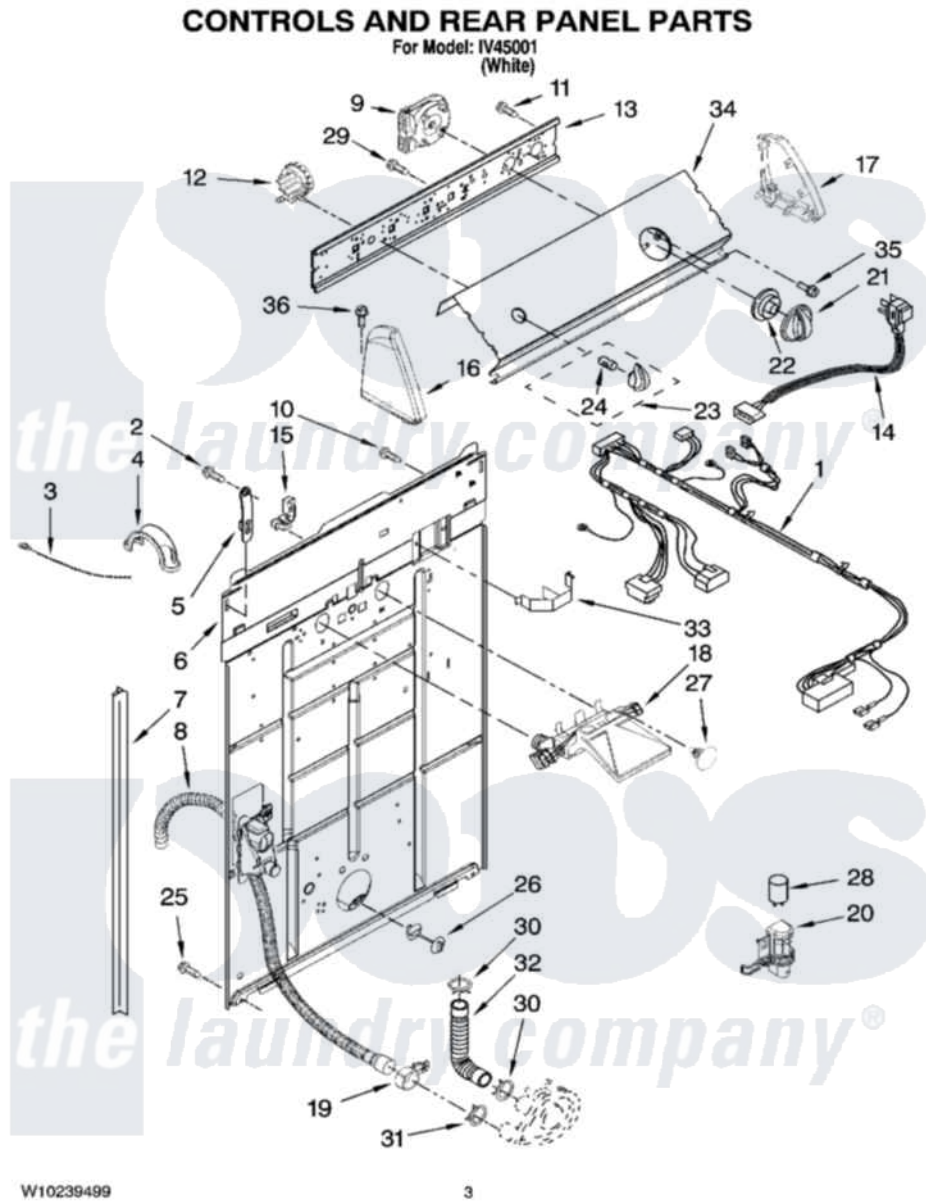

Whirlpool [Residential Whirlpool IV45001 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10220027		Not Available	Harness, Wiring (For Detail See Pages 9 & 10)
2	<a href="#">9740848</a>			Screw, Mixing Valve Mounting
3	3347868	<a href="#">W10339879</a>		Tie, Cable
4	<a href="#">8577378</a>			U-Bend, Drain Hose
5	<a href="#">8568314</a>			Strap, Console
6	<a href="#">W10194450</a>			Panel, Rear
7	<a href="#">62747</a>			Pad, Rear Panel
8	<a href="#">W10189267</a>			Drain Hose Assembly
9	<a href="#">W10199989</a>			Timer, Control
10	<a href="#">3351614</a>			Screw, Gearcase Cover Mounting
11	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
12	8577844	<a href="#">W10339251</a>		Switch-WL
13	<a href="#">3948608</a>			Bracket, Control
14	8578842	<a href="#">285800</a>		Cord-Power

15	3952821	<a href="#">285777</a>	Relief-Str
16	8271365	<a href="#">279962</a>	Endcap
17	8271359	<a href="#">279962</a>	Endcap
18	<a href="#">W10140917</a>		Valve, Water Inlet W/Bi-Metal And Vacuum Break
19	<a href="#">8541668</a>		Clamp, Hose
20	<a href="#">8318046</a>		Clip, Capacitor
21	8543272	Not Available	Knob, Timer
22	<a href="#">8544947</a>		Dial, Timer
23	8543270	Not Available	Knob, Control (3) (Grey)
24	<a href="#">8536939</a>		Clip, Knob
25	62863	<a href="#">3390631</a>	Screw, 10-16 X 3/8
26	<a href="#">8519200</a>		Support, Rear Panel
27	W10000080	<a href="#">8282566</a>	Clip, Pine Tree
28	<a href="#">8572717</a>		Capacitor, Motor Start
29	<a href="#">3400073</a>		Screw, Ground
30	3363366	<a href="#">616099</a>	Clamp
31	8317496	<a href="#">285655</a>	Clamp, Hose
32	3951449	<a href="#">285871</a>	Hose
33	<a href="#">8055003</a>		Clip, Harness And Pressure Switch
34	W10200865	Not Available	Panel, Console
35	<a href="#">3400818</a>		Screw, Timer Mounting
36	<a href="#">388326</a>		Screw, 8-18 X 1.25

