


Whirlpool IV46001 03 - AGITATOR, BASKET AND TUB PARTS

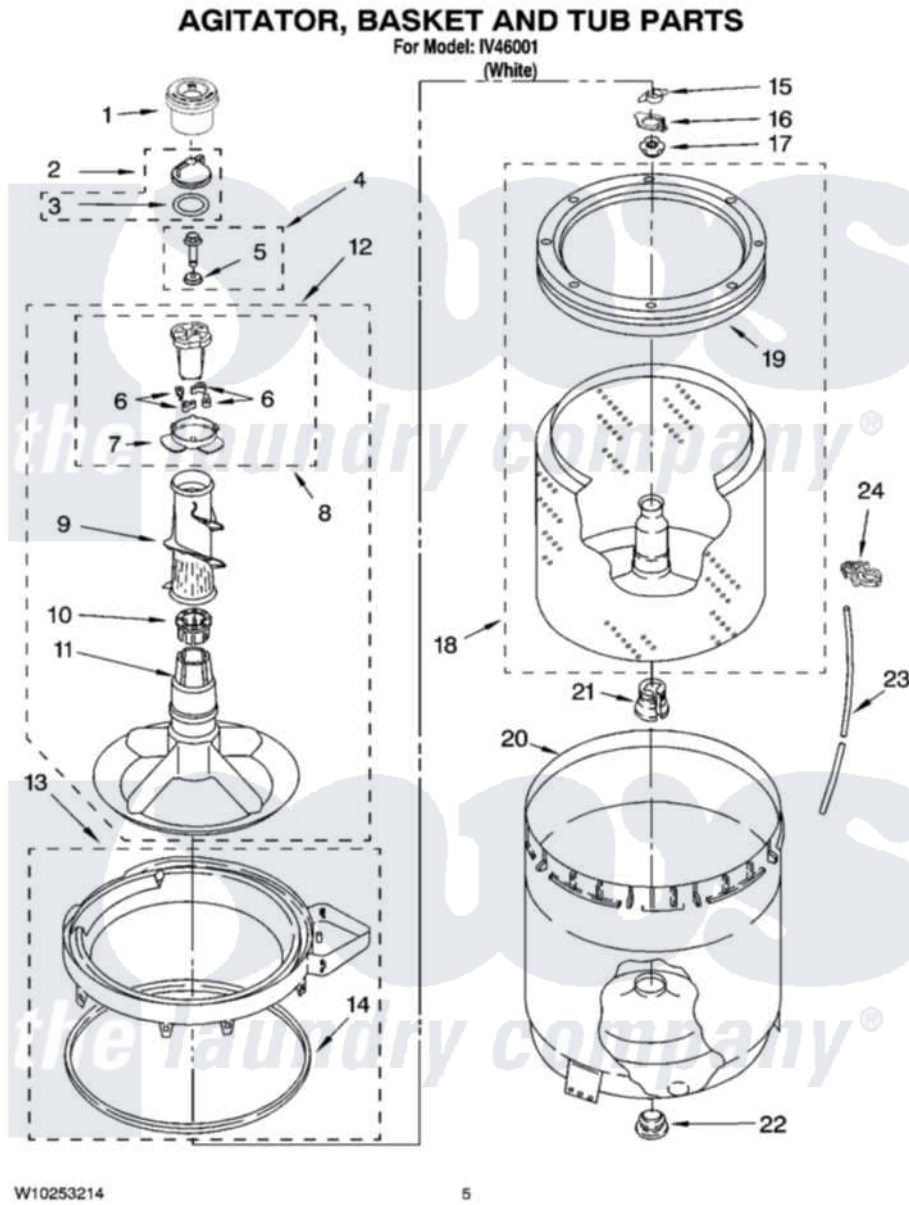

W10253214

5

Whirlpool [Residential Whirlpool IV46001 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	3354733	W10074580		Cap, Barrier
3	W10072840			Fabric Softener
4	358237			Screw And Washer
5	3949550			Washer
6	3366877	80040		Dog-Agitator
7	3363661			Bearing, Driven Cam
8	3363663	285811		Cam-Agitator
9	3348752			Mover, Clothes
10	3350389	285587		Washer
11	3347288			Agitator
12	3348117	285565		Agitator
13	8528150	W10445870		Ring-Tub
14	3976308			Gasket, Tub Ring
15	3354845			Clip, Agitator
16	8543666			Washer, Agitator

17	21366		Nut, Spanner
18	8526016	W10389328	Clothes Container, Assembly
19	387240		Ring, Balance
20	63849		Strain Relief, Power Cord
21	389140		Tub Block, Basket Drive
22	383727		Gasket, Centerpodt
23	3347780	353244	Hose, Pressure Switch
24	2219077		Clip, Pressure Switch Hose

