


# Whirlpool IV48000 03 - AGITATOR, BASKET AND TUB PARTS

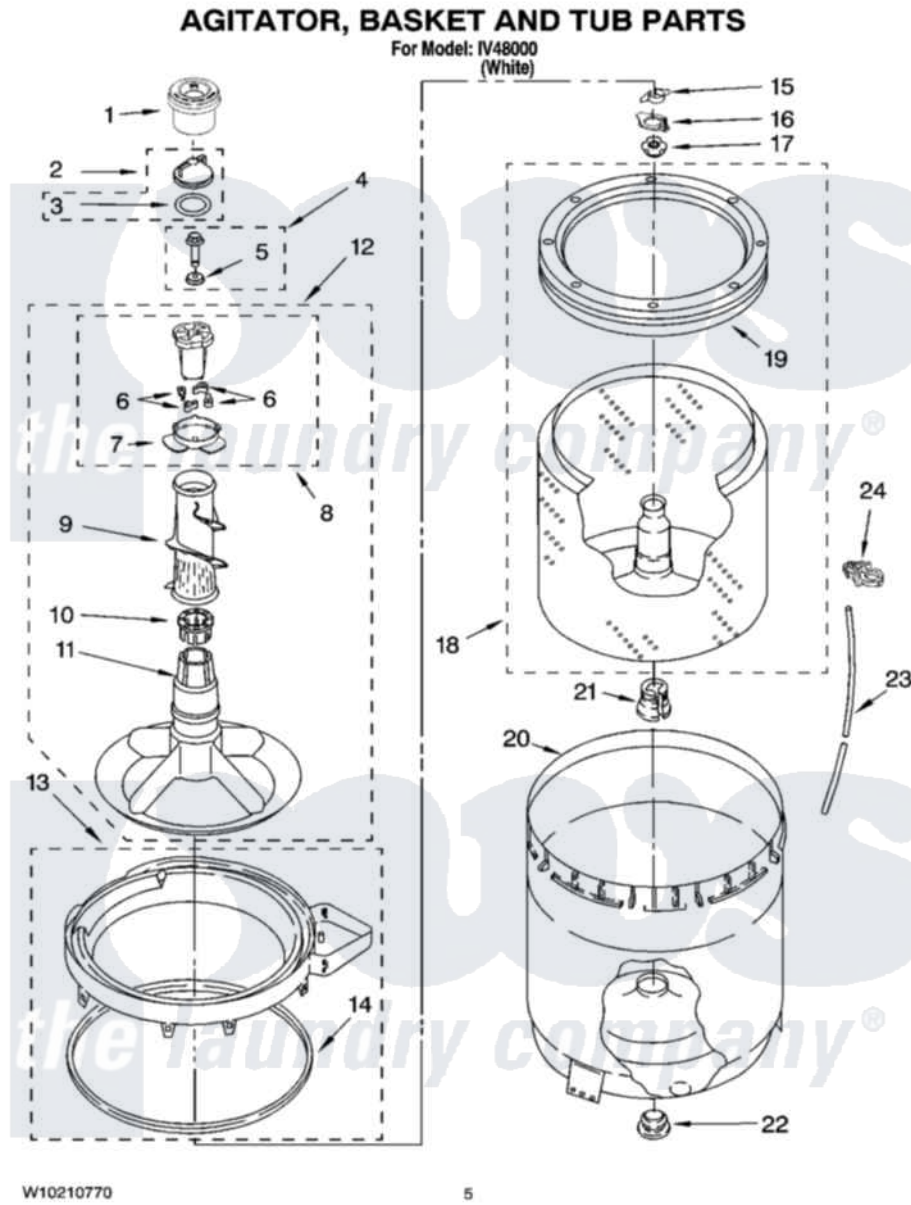

Whirlpool [Residential Whirlpool IV48000 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	<a href="#">8575076A</a>		Dispenser
2	3354733	<a href="#">W10074580</a>		Cap, Barrier
3	<a href="#">W10072840</a>			Fabric Softener
4	<a href="#">358237</a>			Screw And Washer
5	<a href="#">3949550</a>			Washer
6	3366877	<a href="#">80040</a>		Dog-Agitator
7	<a href="#">3363661</a>			Bearing, Driven Cam
8	3363663	<a href="#">285811</a>		Cam-Agitator
9	<a href="#">3348752</a>			Mover, Clothes
10	3350389	<a href="#">285587</a>		Washer
11	<a href="#">3347288</a>			Agitator
12	3348117	<a href="#">285565</a>		Agitator
13	8528150	<a href="#">W10445870</a>		Ring-Tub
14	<a href="#">3976308</a>			Gasket, Tub Ring
15	<a href="#">3354845</a>			Clip, Agitator
16	<a href="#">8543666</a>			Washer, Agitator

17	<a href="#">21366</a>		Nut, Spanner
18	8526016	<a href="#">W10389328</a>	Clothes Container, Assembly
19	<a href="#">387240</a>		Ring, Balance
20	<a href="#">63849</a>		Strain Relief, Power Cord
21	<a href="#">389140</a>		Tub Block, Basket Drive
22	<a href="#">383727</a>		Gasket, Centerpodt
23	3347780	<a href="#">353244</a>	Hose, Pressure Switch
24	<a href="#">2219077</a>		Clip, Pressure Switch Hose

