


Whirlpool IV87000 01 - CABINET PARTS

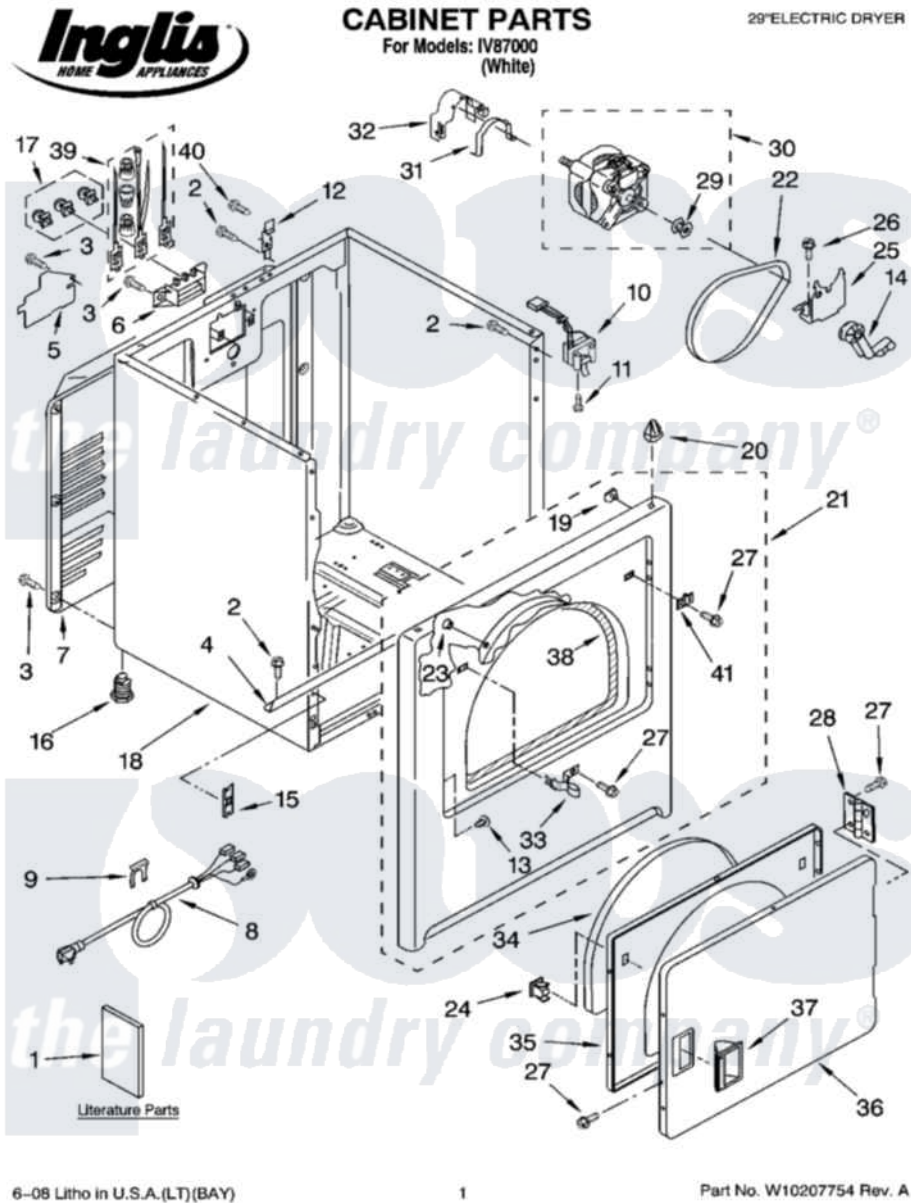

6-08 Litho in U.S.A.(LT)(BAY)

1

Part No. W10207754 Rev. A

Whirlpool [Residential Whirlpool IV87000 Dryer Parts](#) Parts Diagram 01 - CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8535831		Not Available	Instructions, Installation
"	W10110133		Not Available	Sheet, Cycle Feature
"	W10151578		Not Available	Use & Care Guide
"	8578217		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	8541400			Bracket, Cabinet
5	3394202		Not Available	Cover, Terminal Block
6	3397659			Block, Terminal
7	3396805	280043		Panel-Rear
8	3394208			Cord, Power
9	694415			Clip, Strain Relief

10	3406107		Door Switch Assembly
11	697773	3395530	Screw
12	8066217		Hinge, Top
13	3404413		Plug, Hinge Hole
14	691366		Idler And Pulley Assembly
15	3394083		Clip, Front Panel
16	3392100	49621	Feet-Leveling
"	279810		Foot-Optional
17	279318		Terminal Tinned And Brass Panel
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	3403444	279852	Panel
22	W10131364	341241	Belt
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	348780		Base, Motor
26	3400500		Bolt, 3405245 5/16-18 X 3/4
27	342055	488627	Screw
28	3405514	W10362431	Hinge And Pin Assembly
29	8066184		Pulley, Motor
30	8066206	279827	Motor-Drve
31	660658		Clamp, Motor Mounting 343481 685441
32	3404162		Clamp, Motor
33	3403431		Strike, Panel
34	3405246		Seal, Door Push-To-Start
35	3402341		Door, Inner
36	3402335		Door, Front
37	3405184		Handle, Door
38	3406129		Seal And Bearing Assembly
39	279393		Terminal Block Screw Kit
40	697776	4331106	Screw, No.10-32 X 7/16
41	3403630		Plug, Strike Hole

