


# Whirlpool KAWS750LT0 03 - AGITATOR, BASKET AND TUB PARTS

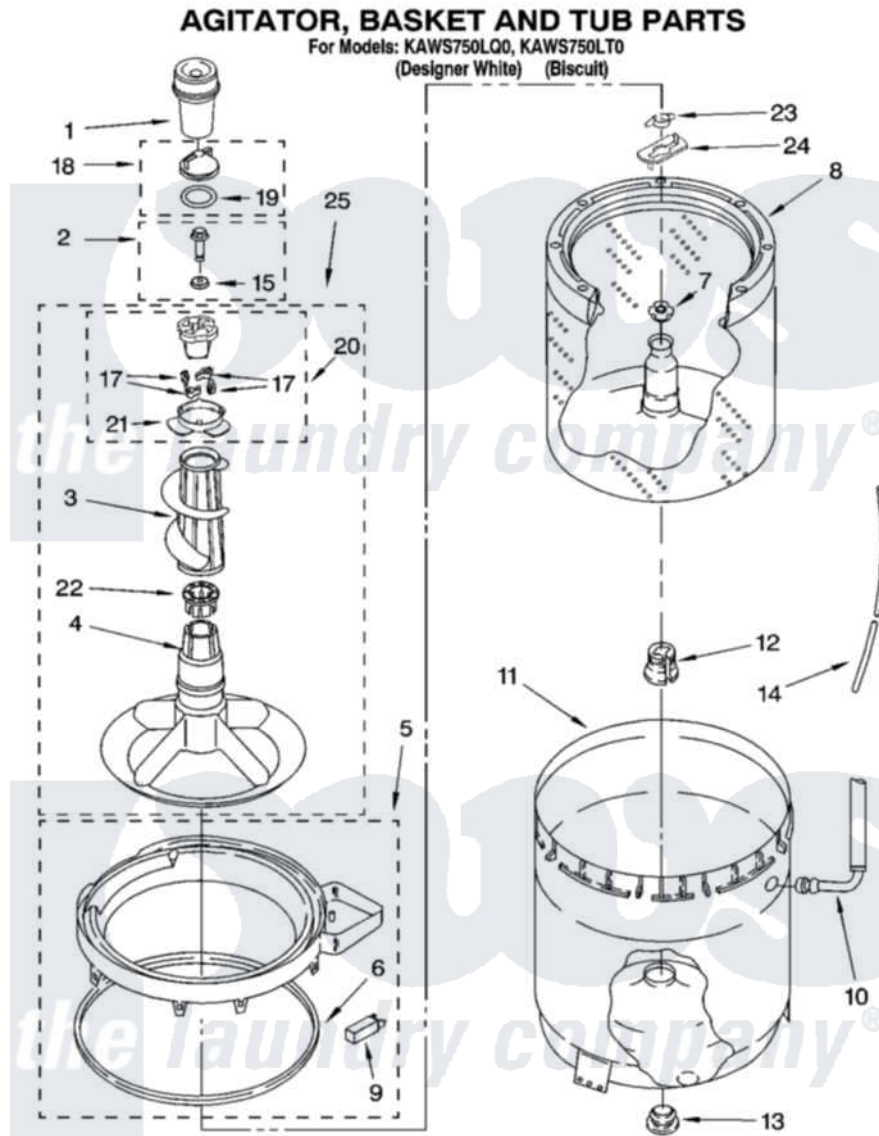

8179011

5

Whirlpool [Residential Whirlpool KAWS750LT0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

| Item | Original Part Number    | Replaced By               | Status | Part Description            |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1    | <a href="#">63580</a>   |                           |        | Dispenser, Fabric Softener  |
| 2    | <a href="#">358237</a>  |                           |        | Screw And Washer            |
| 3    | <a href="#">3950581</a> |                           |        | Clothes Mover               |
| 4    | <a href="#">3950580</a> |                           |        | Agitator                    |
| 5    | 3954507                 | <a href="#">W10213410</a> |        | Ring-Tub                    |
| 6    | 3359585                 | <a href="#">3976308</a>   |        | Gasket, Tub Ring            |
| 7    | <a href="#">21366</a>   |                           |        | Nut, Spanner                |
| 8    | 3951983                 | <a href="#">W10389328</a> |        | Clothes Container, Assembly |
| 9    | 8318246                 | <a href="#">W10213410</a> |        | Ring-Tub                    |
| 10   | <a href="#">3948705</a> |                           |        | Hose, Bleach                |
| 11   | <a href="#">8283125</a> |                           |        | Tub                         |
| 12   | <a href="#">389140</a>  |                           |        | Tub Block, Basket Drive     |
| 13   | <a href="#">383727</a>  |                           |        | Gasket, Centerpod           |
| 14   | 3347780                 | <a href="#">353244</a>    |        | Hose, Pressure Switch       |
| 15   | <a href="#">3949550</a> |                           |        | Washer                      |
| 17   | 3366877                 | <a href="#">80040</a>     |        | Dog-Agitator                |

|    |                         |                           |                     |
|----|-------------------------|---------------------------|---------------------|
| 18 | 3354733                 | <a href="#">W10074580</a> | Cap, Barrier        |
| 19 | 3348855                 | <a href="#">W10072840</a> | Fabric Softener     |
| 20 | 3363663                 | <a href="#">285811</a>    | Cam-Agitator        |
| 21 | <a href="#">3363661</a> |                           | Bearing, Driven Cam |
| 22 | 3350389                 | <a href="#">285587</a>    | Washer              |
| 23 | <a href="#">3354845</a> |                           | Clip, Agitator      |
| 24 | 3355921                 | <a href="#">8543666</a>   | Washer, Agitator    |
| 25 | <a href="#">3950579</a> |                           | Agitator            |

