


# Whirlpool KAWS750LT2 03 - AGITATOR, BASKET AND TUB PARTS

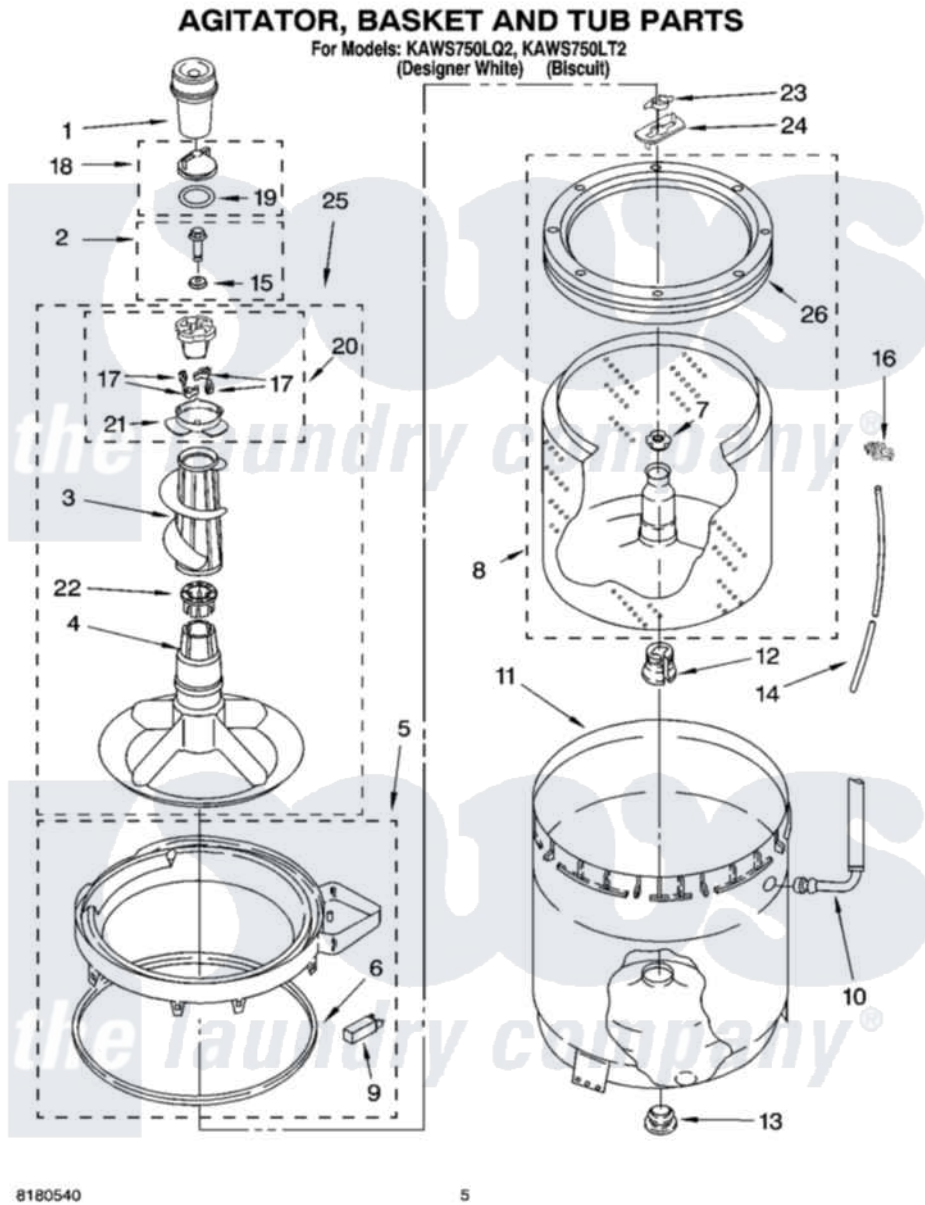

8180540

5

Whirlpool Residential Whirlpool KAWS750LT2 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">63580</a>			Dispenser, Fabric Softener
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3950581</a>			Clothes Mover
4	<a href="#">3950580</a>			Agitator
5	3954507	<a href="#">W10213410</a>		Ring-Tub
6	3359585	<a href="#">3976308</a>		Gasket, Tub Ring
7	<a href="#">21366</a>			Nut, Spanner
8	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
9	8318246	<a href="#">W10213410</a>		Ring-Tub
10	<a href="#">3948705</a>			Hose, Bleach
11	<a href="#">8283125</a>			Tub
12	<a href="#">389140</a>			Tub Block, Basket Drive
13	<a href="#">383727</a>			Gasket, Centerpod
14	3347780	<a href="#">353244</a>		Hose, Pressure Switch
15	<a href="#">3949550</a>			Washer
16	<a href="#">2219077</a>			Clip, Pressure Switch Hose

17	3366877	<a href="#">80040</a>	Dog-Agitator
18	3354733	<a href="#">W10074580</a>	Cap, Barrier
19	3348855	<a href="#">W10072840</a>	Fabric Softener
20	3363663	<a href="#">285811</a>	Cam-Agitator
21	<a href="#">3363661</a>		Bearing, Driven Cam
22	3350389	<a href="#">285587</a>	Washer
23	<a href="#">3354845</a>		Clip, Agitator
24	3355921	<a href="#">8543666</a>	Washer, Agitator
25	<a href="#">3950579</a>		Agitator
26	8519788	<a href="#">387240</a>	Ring, Balance

