


Whirlpool KAWS750LT2 06 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: KAWS750LQ2, KAWS750LT2
(Designer White) (Biscuit)

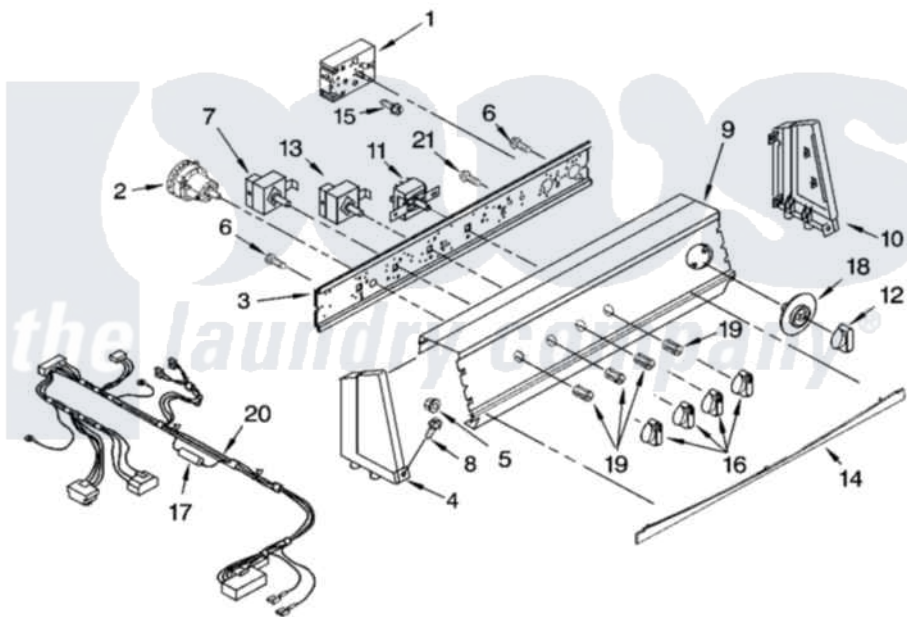

8180540

9

Whirlpool [Residential Whirlpool KAWS750LT2 Washer Parts](#) Parts Diagram 06 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|---|
| 1 | 8563594 | | | Timer, Control |
| 2 | 3950420 | W10339326 | | Switch-WL |
| 3 | 3948608 | | | Bracket, Control |
| 4 | 8274353 | 285858 | | Endcap |
| " | 8274355 | 285859 | | Endcap |
| 5 | 8533828 | | | Nut, 3/16 |
| 6 | 90767 | | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 7 | 661614 | | | Switch, Water Temperature |
| 8 | 388326 | | | Screw, 8-18 X 1.25 |
| 9 | 3956120 | | | Console, Panel |
| " | 3956121 | | | Console, Panel |
| 10 | 8274349 | 285858 | | Endcap |
| " | 8274351 | 285859 | | Endcap |
| 11 | 3952577 | | | Switch, Rotary |
| 12 | 3956179 | | | Knob, Timer |
| " | 3956180 | | | Knob, Timer |

| | | | |
|----|-------------------------|---------------------------|-----------------------|
| 13 | 3949180 | W10168257 | Switch, Rotary |
| 14 | 8536941 | | Spacer, Console |
| " | 8536942 | | Spacer, Console |
| 15 | 3400818 | | Screw, Timer Mounting |
| 16 | 3956182 | | Knob, Control |
| " | 3956183 | | Knob, Control |
| 17 | 8317387 | W10213410 | Ring-Tub |
| 18 | 3956230 | | Dial, Timer |
| " | 3956231 | | Dial, Timer |
| 19 | 8536939 | | Clip, Knob |
| 20 | 3957251 | | Harness, Wire |
| 21 | 3400073 | | Screw, Ground |

the laundry company[®]

the laundry company[®]

the laundry company[®]