


Whirlpool KAWS750LT4 03 - AGITATOR, BASKET AND TUB PARTS

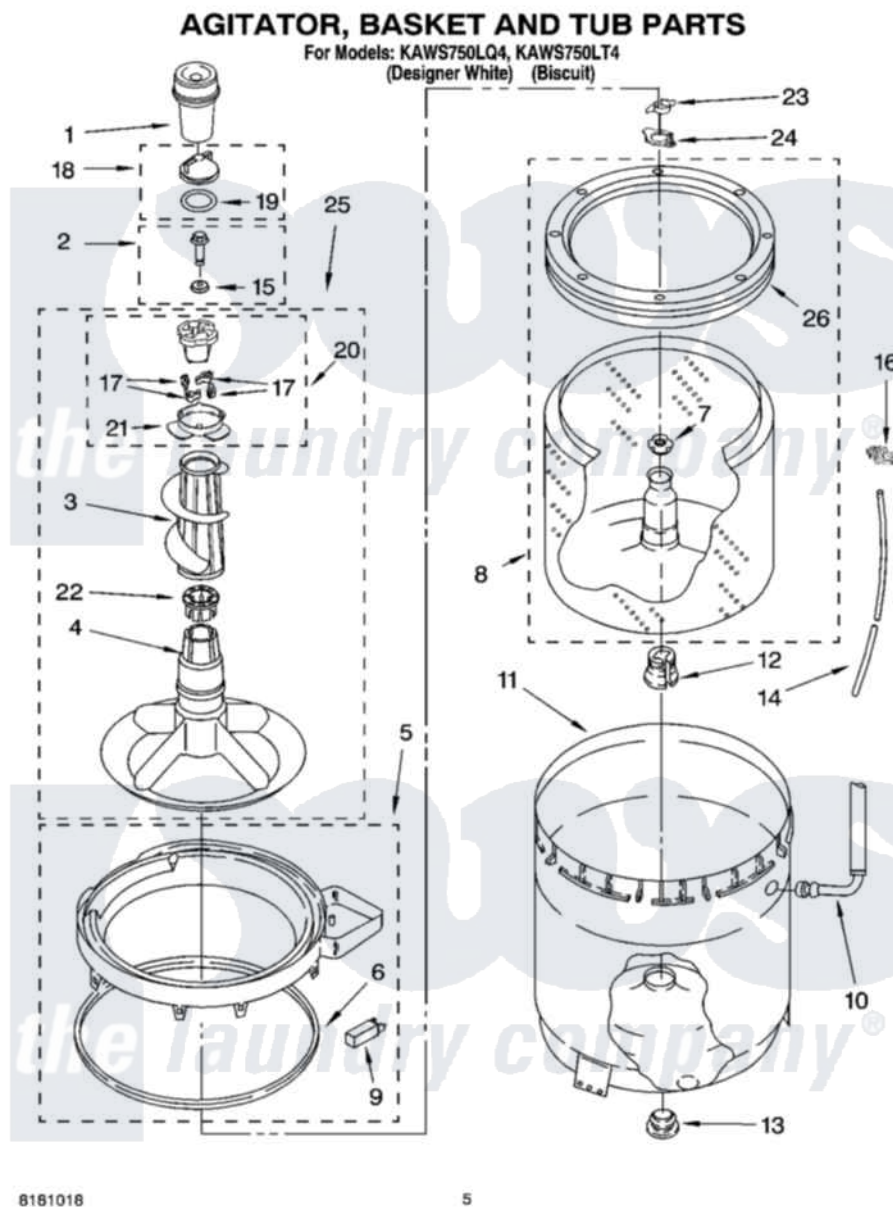

Whirlpool Residential Whirlpool KAWS750LT4 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3950581			Clothes Mover
4	3950580			Agitator
5	3954507	W10213410		Ring-Tub
6	3359585	3976308		Gasket, Tub Ring
7	21366			Nut, Spanner
8	8526016	W10389328		Clothes Container, Assembly
9	8318246	W10213410		Ring-Tub
10	3948705			Hose, Bleach
11	8283125			Tub
12	389140			Tub Block, Basket Drive
13	383727			Gasket, Centerpod
14	3347780	353244		Hose, Pressure Switch
15	3949550			Washer
16	2219077			Clip, Pressure Switch Hose

17	3366877	80040	Dog-Agitator
18	3354733	W10074580	Cap, Barrier
19	3348855	W10072840	Fabric Softener
20	3363663	285811	Cam-Agitator
21	3363661		Bearing, Driven Cam
22	3350389	285587	Washer
23	3354845		Clip, Agitator
24	8543666		Washer, Agitator
25	3950579		Agitator
26	8519788	387240	Ring, Balance

pos
the laundry company®

pos
the laundry company®

pos
the laundry company®