


Whirlpool KAWS750LT4 06 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: KAWS750LQ4, KAWS750LT4
(Designer White) (Biscuit)

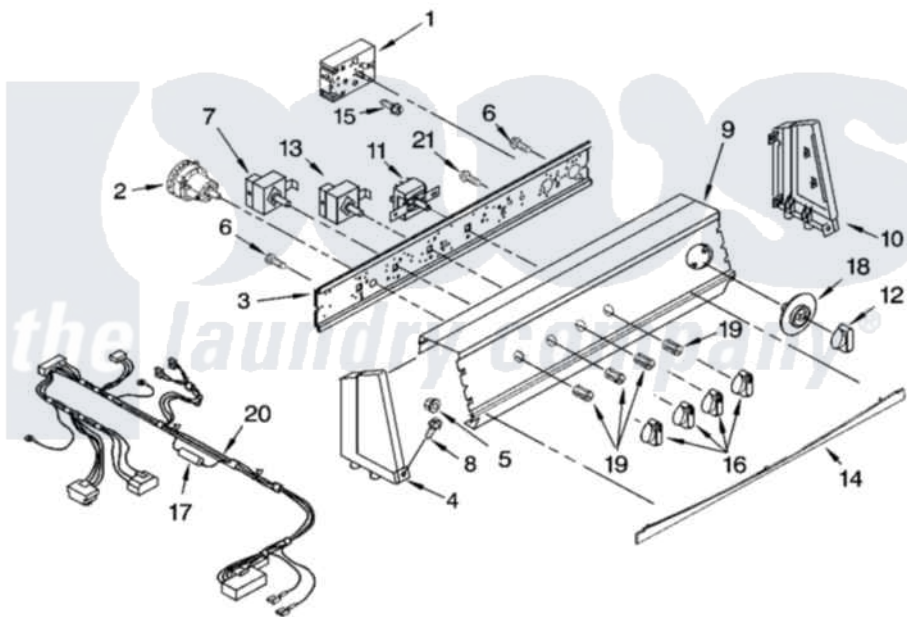

8181018

9

Whirlpool [Residential Whirlpool KAWS750LT4 Washer Parts](#) Parts Diagram 06 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8563594			Timer, Control
2	3950420	W10339326		Switch-WL
3	3948608			Bracket, Control
4	8274353	285858		Endcap
"	8274355	285859		Endcap
5	8533828			Nut, 3/16
6	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
7	661614			Switch, Water Temperature
8	388326			Screw, 8-18 X 1.25
9	3956120			Console, Panel
"	3956121			Console, Panel
10	8274349	285858		Endcap
"	8274351	285859		Endcap
11	3952577			Switch, Rotary
12	3956179			Knob, Timer
"	3956180			Knob, Timer

13	3949180	W10168257	Switch, Rotary
14	8536941		Spacer, Console
"	8536942		Spacer, Console
15	3400818		Screw, Timer Mounting
16	3956182		Knob, Control
"	3956183		Knob, Control
17	8317387	W10213410	Ring-Tub
18	3956230		Dial, Timer
"	3956231		Dial, Timer
19	8536939		Clip, Knob
20	3957251		Harness, Wire
21	3400073		Screw, Ground

the laundry company[®]

the laundry company[®]

the laundry company[®]