


Whirlpool KAWS850LQ2 03 - AGITATOR, BASKET AND TUB PARTS

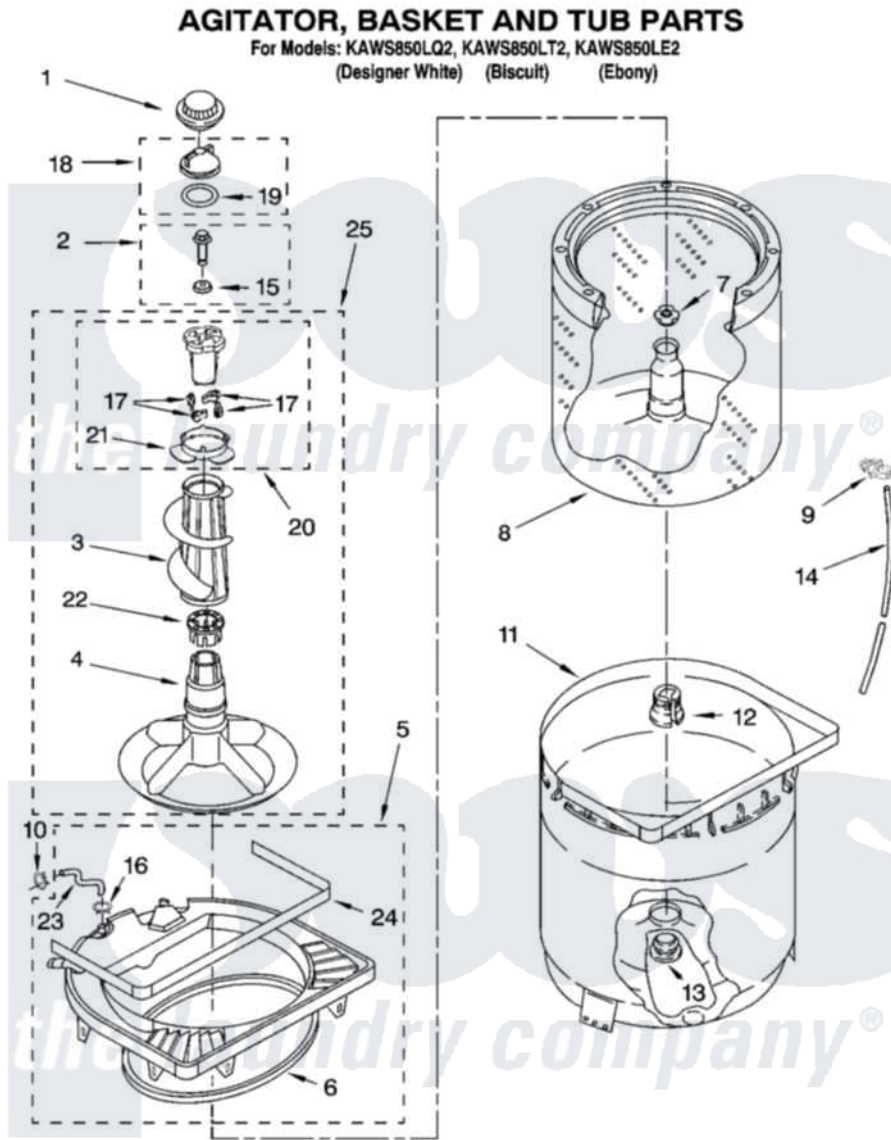

6181019

5

Whirlpool Residential Whirlpool KAWS850LQ2 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
3	3950581			Clothes Mover
4	3950580			Agitator
5	8271852	285831		Ring-Tub
6	8054355			Gasket, Tub Ring
7	21366			Nut, Spanner
8	3951983	W10389328		Clothes Container, Assembly
9	2219077			Clip, Pressure Switch Hose
10	3955674	596669		Clamp, Manifold
11	8055061			Tub
12	389140			Tub Block, Basket Drive
13	383727			Gasket, Centerpod
14	3347780	353244		Hose, Pressure Switch
15	3949550			Washer
16	301958	596669		Clamp, Manifold

17	3366877	80040	Dog-Agitator
18	3354733	W10074580	Cap, Barrier
19	3348855	W10072840	Fabric Softener
20	3363663	285811	Cam-Agitator
21	3363661		Bearing, Driven Cam
22	3350389	285587	Washer
23	8526793		Hose, Bleach Outlet
24	8054357		Shield, Splash
25	3950579		Agitator

