


Whirlpool KAWS850LQ2 06 - CONTROL PANEL PARTS

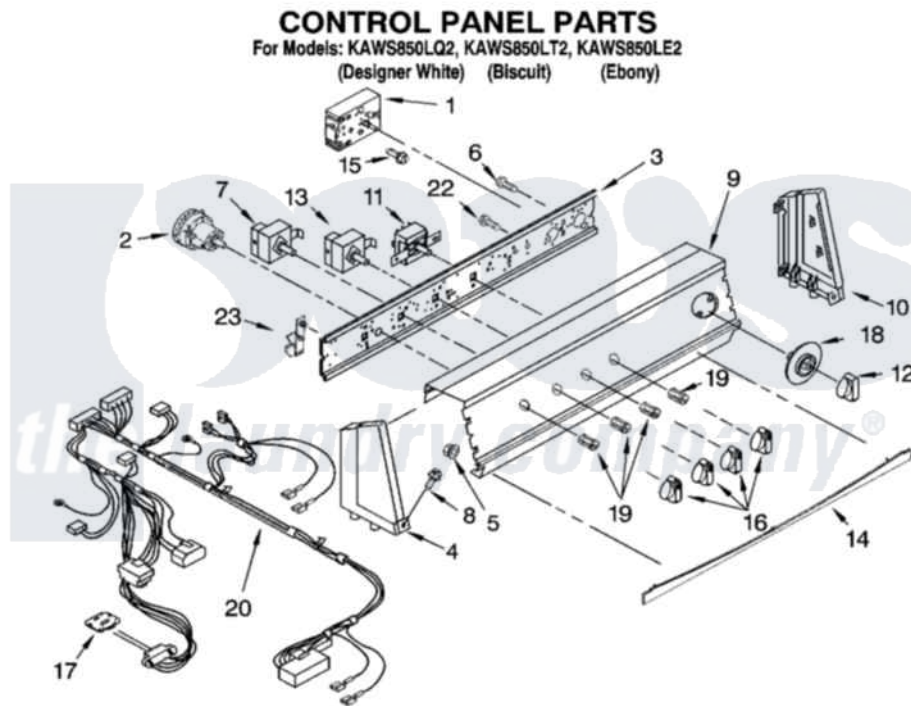

6181019

9

Whirlpool [Residential Whirlpool KAWS850LQ2 Washer Parts](#) Parts Diagram 06 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3955761			Timer, Control
2	3950420	W10339326		Switch-WL
3	3948608			Bracket, Control
4	8274353	285858		Endcap
"	8274355	285859		Endcap
"	3954772	285860		Baffle - Oven Top
5	8533828			Nut, 3/16
6	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
7	3950354			Switch, Water Temperature
8	388326			Screw, 8-18 X 1.25
9	3956122			Panel, Console
"	3956123			Panel, Console
"	3956142			Panel, Console
10	8274349	285858		Endcap
"	8274351	285859		Endcap
"	3954771	285860		Baffle - Oven Top

11	3952578		Switch, Rotary
12	3956179		Knob, Timer
"	3956180		Knob, Timer
"	3956181		Knob, Timer
13	3949180	W10168257	Switch, Rotary
14	8536941		Spacer, Console
"	8536942		Spacer, Console
"	8536943		Spacer, Console
15	3400818		Screw, Timer Mounting
16	3956182		Knob, Control
"	3956183		Knob, Control
"	3956184		Knob, Control
17	8541388	3407155	Control-Atc
18	3956230		Dial, Timer
"	3956231		Dial, Timer
"	3956232	Not Available	Dial, Timer (Black)
19	8536939		Clip, Knob
20	3956131		Harness, Wire
22	3400073		Screw, Ground
23	8317975		Restraint, Harness

