


# Whirlpool KAWS850LT2 06 - CONTROL PANEL PARTS

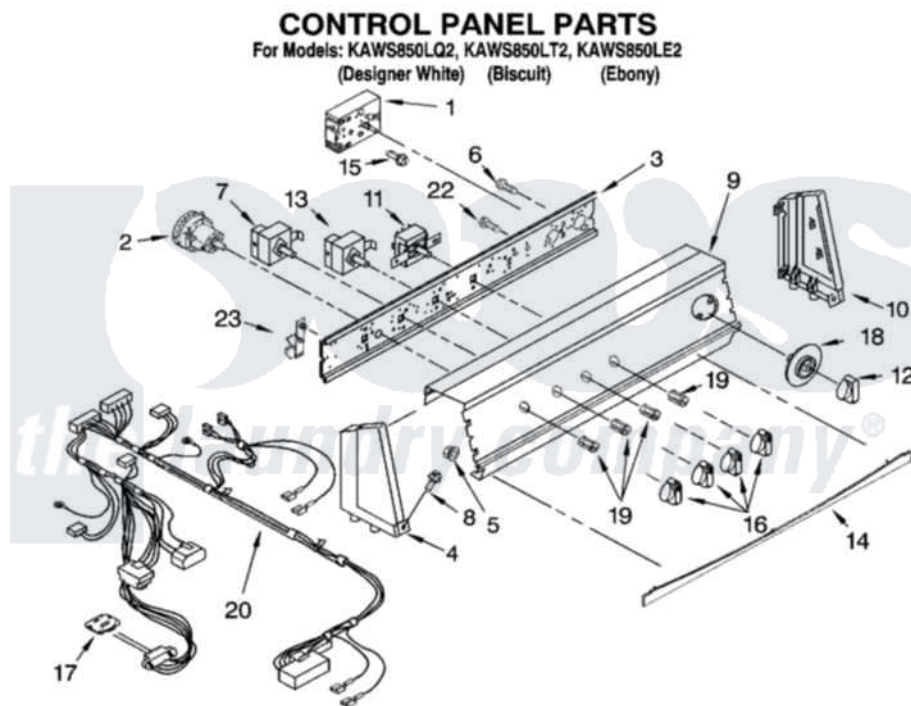

6181019

9

Whirlpool Residential Whirlpool KAWS850LT2 Washer Parts Parts Diagram 06 - CONTROL PANEL PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3955761</a>			Timer, Control
2	3950420	<a href="#">W10339326</a>		Switch-WL
3	<a href="#">3948608</a>			Bracket, Control
4	8274353	<a href="#">285858</a>		Endcap
"	8274355	<a href="#">285859</a>		Endcap
"	3954772	<a href="#">285860</a>		Baffle - Oven Top
5	<a href="#">8533828</a>			Nut, 3/16
6	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">3950354</a>			Switch, Water Temperature
8	<a href="#">388326</a>			Screw, 8-18 X 1.25
9	<a href="#">3956122</a>			Panel, Console
"	<a href="#">3956123</a>			Panel, Console
"	<a href="#">3956142</a>			Panel, Console
10	8274349	<a href="#">285858</a>		Endcap
"	8274351	<a href="#">285859</a>		Endcap
"	3954771	<a href="#">285860</a>		Baffle - Oven Top

11	<a href="#">3952578</a>		Switch, Rotary
12	<a href="#">3956179</a>		Knob, Timer
"	<a href="#">3956180</a>		Knob, Timer
"	<a href="#">3956181</a>		Knob, Timer
13	3949180	<a href="#">W10168257</a>	Switch, Rotary
14	<a href="#">8536941</a>		Spacer, Console
"	<a href="#">8536942</a>		Spacer, Console
"	<a href="#">8536943</a>		Spacer, Console
15	<a href="#">3400818</a>		Screw, Timer Mounting
16	<a href="#">3956182</a>		Knob, Control
"	<a href="#">3956183</a>		Knob, Control
"	<a href="#">3956184</a>		Knob, Control
17	8541388	<a href="#">3407155</a>	Control-Atc
18	<a href="#">3956230</a>		Dial, Timer
"	<a href="#">3956231</a>		Dial, Timer
"	3956232	Not Available	Dial, Timer (Black)
19	<a href="#">8536939</a>		Clip, Knob
20	<a href="#">3956131</a>		Harness, Wire
22	<a href="#">3400073</a>		Screw, Ground
23	<a href="#">8317975</a>		Restraint, Harness

