


Whirlpool KEYS750LQ1 01 - TOP AND CONSOLE PARTS

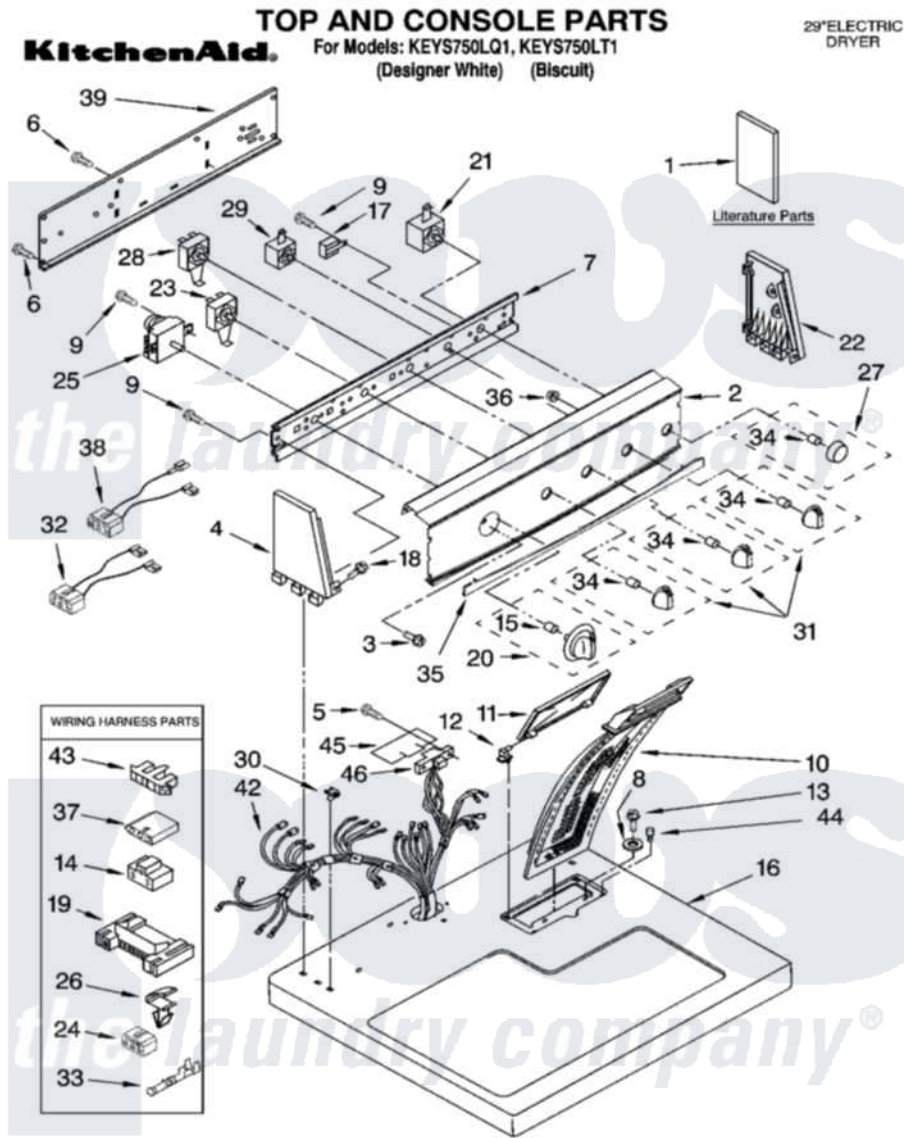

02-04 Litho in U.S.A. (djc)

1

Part No. 6180256

Whirlpool [Residential Whirlpool KEYS750LQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535888		Not Available	Literature Parts (Instructions, Installation)
"	LIT8535887			Literature Parts
"	LIT3406699		Not Available	Literature Parts (Wiring Diagram)
"	LIT8535890		Not Available	Literature Parts (Sheet, Cycle Feature)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3977976	280013		Panel-Control
"	3977977	280014		Panel-Control
3	3400859			Screw, Grounding
4	8274353	285858		Endcap
"	8274355	285859		Endcap
5	337686		Not Available	SCREW, 8-18 X .500
6	693995			Screw, Hex Head

7	8271418		Bracket, Control
8	237446	487596	Washer
9	3390646	W10139210	Screw, 8-18 X 5/16
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401144		Connector
15	688805		Clip, Spring Knob
16	8274386	8521923	Top
"	8274387	8521924	Top
17	694419		Mini-Buzzer
18	388326		Screw, 8-18 X 1.25
19	3395683		Receptacle, Multi-Terminal
20	3956185		Knob, Timer
"	3956186		Knob, Timer
21	3398094		Switch, Push To Start
22	8274349	285858	Endcap
"	8274351	285859	Endcap
23	3399639		Switch, Rotary Temperature
24	3347243		Block, Disconnect
25	3976570		Timer, 60 Hz
26	3394427		Clip-Harness
27	8536921		Knob, Push To Start
"	8536922		Knob, Push To Start
28	3405156		Switch, Rotary
29	3399638		Switch, Temperature
30	357213		Nut, Push-In
31	3956182		Knob, Control
"	3956183		Knob, Control
32	8283289	8539893	Wire, Jumper
33	94614		Terminal
34	8536939		Clip, Knob
35	8536944		Spacer, Console
"	8536945		Spacer, Console
36	8533828		Nut, 3/16
37	3936144		Do-It-Yourself Repair Manuals
38	3401695		Wire, Jumper Buzzer
"	8283276		Wire, Jumper
39	8274261		Do-It-Yourself Repair Manuals
42	8299880	8576504	Harns-Wire
43	3397269		Connector, Timer
44	297535	17258	Bumper
45	3390537	8558178	Control, Electronic
46	3391885		Connector, Edge
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts

"	72017	Paint, Touch-Up
"	4392899	Paint, Touch-Up
"	350930	Paint, Pressurized Spray B
"	4392901	Paint, Pressurized Spray
"	350938	Paint, Pressurized Spray B
"	799344	Paint, Touch-Up)
"	4392900	Paint, Bulk)

