


Whirlpool KEYS850LQ1 01 - TOP AND CONSOLE PARTS

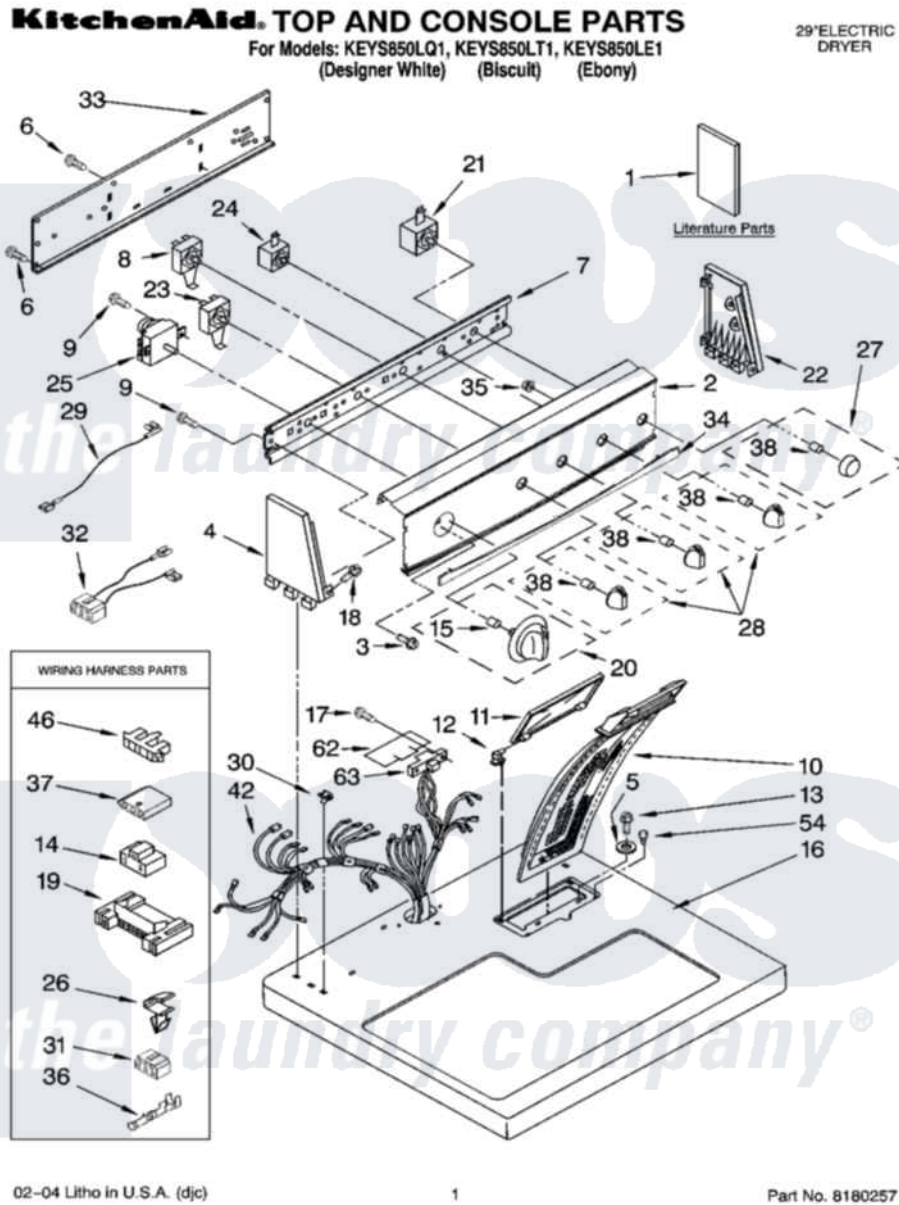

02-04 Litho in U.S.A. (djc)

1

Part No. 8180257

Whirlpool [Residential Whirlpool KEYS850LQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535888		Not Available	Literature Parts (Instructions, Installation)
"	LIT8535890		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8535887			Literature Parts
"	LIT3406681		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3977978	280015		Panel-Control
"	3977979	280016		Panel-Control
"	3977980	280017		Panel-Control
3	3400859			Screw, Grounding
4	8274353	285858		Endcap
"	8274355	285859		Endcap
"	3954772	285860		Baffle - Oven Top

5	237446	487596	Washer
6	693995		Screw, Hex Head
7	8271418		Bracket, Control
8	3405156		Switch, Rotary
9	3390646	W10139210	Screw, 8-18 X 5/16
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
"	3979324		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401144		Connector
15	688805		Clip, Spring Knob
16	8274386	8521923	Top
"	8274387	8521924	Top
"	3978787	8521925	Top
17	337686	Not Available	SCREW, 8-18 X .500
18	388326		Screw, 8-18 X 1.25
19	3395683		Receptacle, Multi-Terminal
20	3956185		Knob, Timer
"	3956186		Knob, Timer
"	3956187		Knob, Timer
21	3398094		Switch, Push To Start
22	8274349	285858	Endcap
"	8274351	285859	Endcap
"	3954771	285860	Baffle - Oven Top
23	3406246	3406244	Switch-A and H
24	3398093		Buzzer, Adjustable
25	3976570		Timer, 60 Hz
26	3394427		Clip-Harness
27	8536921		Knob, Push To Start
"	8536922		Knob, Push To Start
"	8536923		Knob, Push-To-Start
28	3956182		Knob, Control
"	3956183		Knob, Control
"	3956184		Knob, Control
29	3401668		Wire, Jumper
30	357213		Nut, Push-In
31	3347243		Block, Disconnect
32	8283276		Wire, Jumper
33	8274261		Do-It-Yourself Repair Manuals
34	8536944		Spacer, Console
"	8536945		Spacer, Console
"	8536946		Spacer, Console
35	8533828		Nut, 3/16
36	94614		Terminal
37	3936144		Do-It-Yourself Repair Manuals
38	8536939		Clip, Knob
42	8299895	8576507	Harns-Wire
46	3397269		Connector, Timer

54

297535

[17258](#)

Bumper

62

3390537

[8558178](#)

Control, Electronic

63

[3391885](#)

Connector, Edge

