


Whirlpool KEYS850LQ2 01 - TOP AND CONSOLE PARTS

KitchenAid. TOP AND CONSOLE PARTS

For Models: KEYS850LQ2, KEYS850LT2, KEYS850LE2
(Designer White) (Biscuit) (Ebony)

29" ELECTRIC DRYER

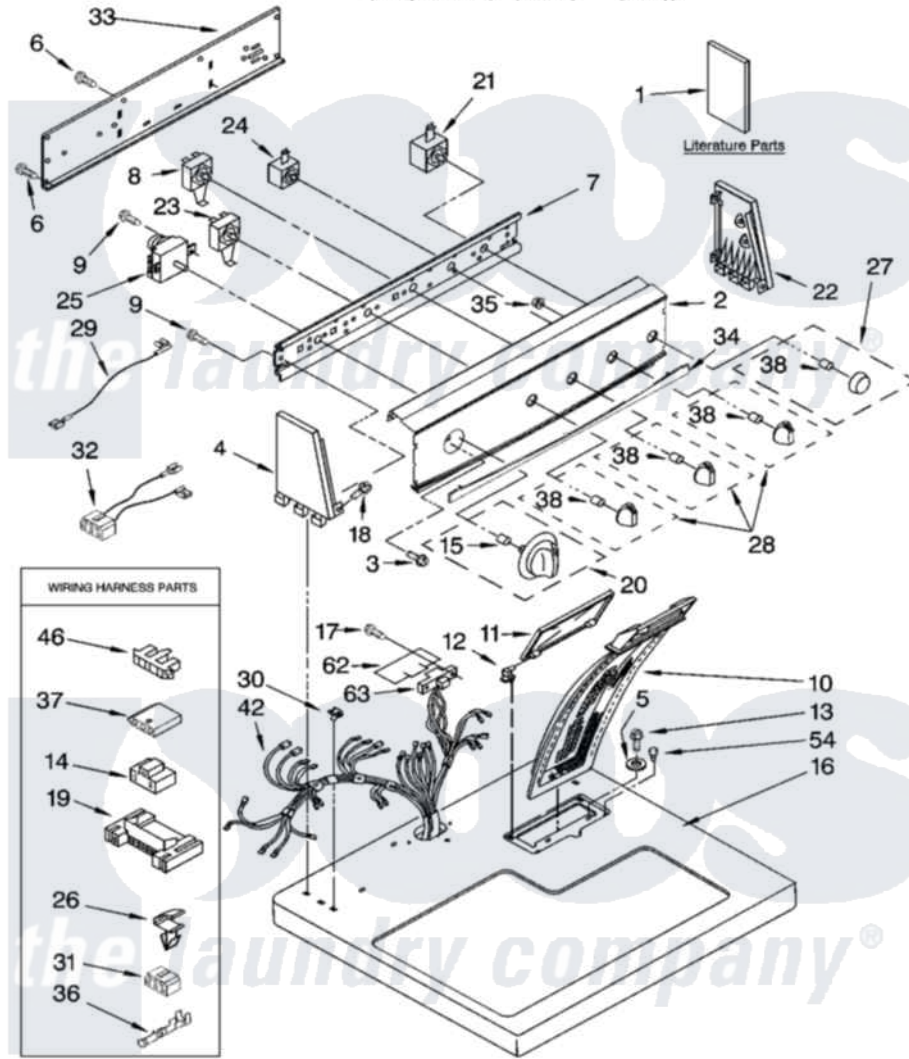

11-05 Litho in U.S.A. (LT)

1

Part No. 8181001

Whirlpool [Residential Whirlpool KEYS850LQ2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8577189		Not Available	Instructions, Installation
"	8535890		Not Available	Sheet, Cycle Feature
"	8578194		Not Available	Guide, Use & Care
"	3406681		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3977978	280015		Panel-Control
"	3977979	280016		Panel-Control
"	3977980	280017		Panel-Control
3	8533951	3400859		Screw, Grounding
4	8274353	285858		Endcap
"	8274355	285859		Endcap
"	3954772	285860		Baffle - Oven Top
5	237446	487596		Washer

6	693995		Screw, Hex Head
7	8271418		Bracket, Control
8	3405156		Switch, Rotary
9	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
"	3979324		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401144		Connector
15	688805		Clip, Spring Knob
16	8274386	8521923	Top
"	8274387	8521924	Top
"	3978787	8521925	Top
17	337686	Not Available	SCREW, 8-18 X .500
18	388326		Screw, 8-18 X 1.25
19	3395683		Receptacle, Multi-Terminal
20	3956185		Knob, Timer
"	3956186		Knob, Timer
"	3956187		Knob, Timer
21	3398094		Switch, Push To Start
22	8274349	285858	Endcap
"	8274351	285859	Endcap
"	3954771	285860	Baffle - Oven Top
23	3406246	3406244	Switch-A and H
24	3398093		Buzzer, Adjustable
25	3976570		Timer, 60 Hz
26	3394427		Clip-Harness
27	8536921		Knob, Push To Start
"	8536922		Knob, Push To Start
"	8536923		Knob, Push-To-Start
28	3956182		Knob, Control
"	3956183		Knob, Control
"	3956184		Knob, Control
29	3401668		Wire, Jumper
30	357213		Nut, Push-In
31	3347243		Block, Disconnect
32	8283276		Wire, Jumper
33	8274261		Do-It-Yourself Repair Manuals
34	8536944		Spacer, Console
"	8536945		Spacer, Console
"	8536946		Spacer, Console
35	8533828		Nut, 3/16
36	94614		Terminal
37	3936144		Do-It-Yourself Repair Manuals
38	8536939		Clip, Knob
42	8299895	8576507	Harns-Wire
46	3397269		Connector, Timer
54	297535	17258	Bumper

