


# Whirlpool KGHS01PMT1 01 - TOP AND CONSOLE PARTS

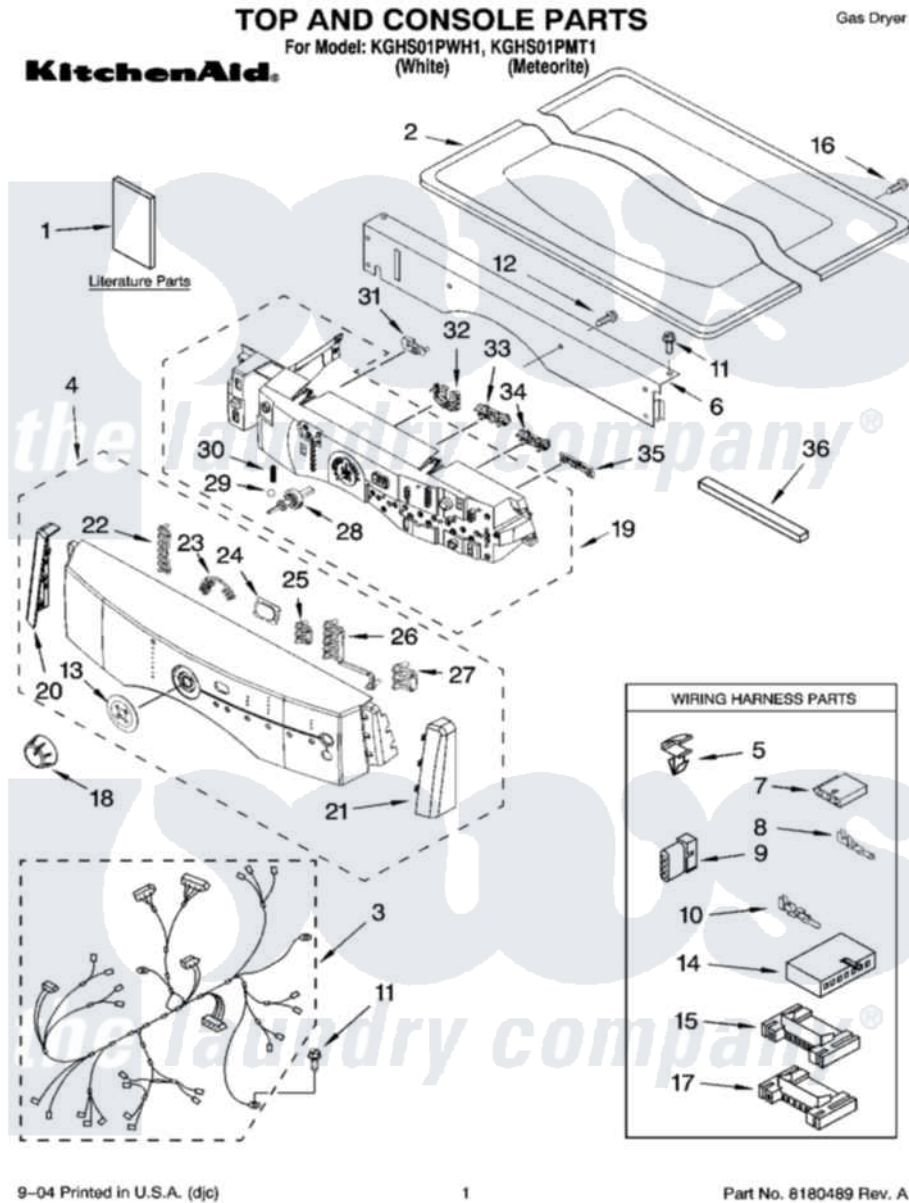

Whirlpool [Residential Whirlpool KGHS01PMT1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562593		Not Available	Use & Care Guide
"	8563817		Not Available	Tech Sheet
2	8519251	<a href="#">W10117263</a>		Top
"	8539266	<a href="#">8546089</a>		Top
3	<a href="#">8299950</a>			Harness, Main
4	8562599		Not Available	Panel, Console (Includes Bezel, Light Indicators & Endcaps) (White)
"	8542706	<a href="#">8546090</a>		Panel-Control
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8519271</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw
12	488886	<a href="#">488787</a>		Screw

13	<a href="#">8542690</a>	Bezel, Cycle
14	<a href="#">3936150</a>	Connector, 7-Circuit
15	<a href="#">3395683</a>	Receptacle, Multi-Terminal
16	<a href="#">8281225</a>	Screw, 8-18 X 1/2
17	<a href="#">2203186</a>	Connector, 5-Circuit
18	<a href="#">8542701</a>	Knob, Assembly
19	<a href="#">8558455</a>	User Interface
20	<a href="#">8562598</a>	Endcap
"	<a href="#">8542714</a>	Endcap
21	<a href="#">8562597</a>	Endcap
"	<a href="#">8542713</a>	Endcap
22	<a href="#">8542682</a>	Light Indicator
23	<a href="#">8542683</a>	Light Indicator
24	<a href="#">8542691</a>	Lens, Display
25	<a href="#">8542684</a>	Light Indicator
26	<a href="#">8542685</a>	Light Indicator
27	<a href="#">8542686</a>	Light Indicator
28	<a href="#">8542717</a>	Shaft, Cycle Selector
29	<a href="#">8542716</a>	Bearing, Knob
30	<a href="#">8542715</a>	Spring, Knob
31	<a href="#">8562606</a>	Pushbutton, )
"	<a href="#">8542711</a>	Pushbutton,
32	<a href="#">8562603</a>	Pushbutton,
"	<a href="#">8542708</a>	Pushbutton,
33	<a href="#">8562604</a>	Pushbutton,
"	<a href="#">8542709</a>	Pushbutton,
34	<a href="#">8562605</a>	Pushbutton,
"	<a href="#">8542710</a>	Pushbutton,
35	<a href="#">8558454</a>	Pushbutton, )
36	<a href="#">8066181</a>	Gasket, Console

