


Whirlpool KGHS01PWH1 01 - TOP AND CONSOLE PARTS

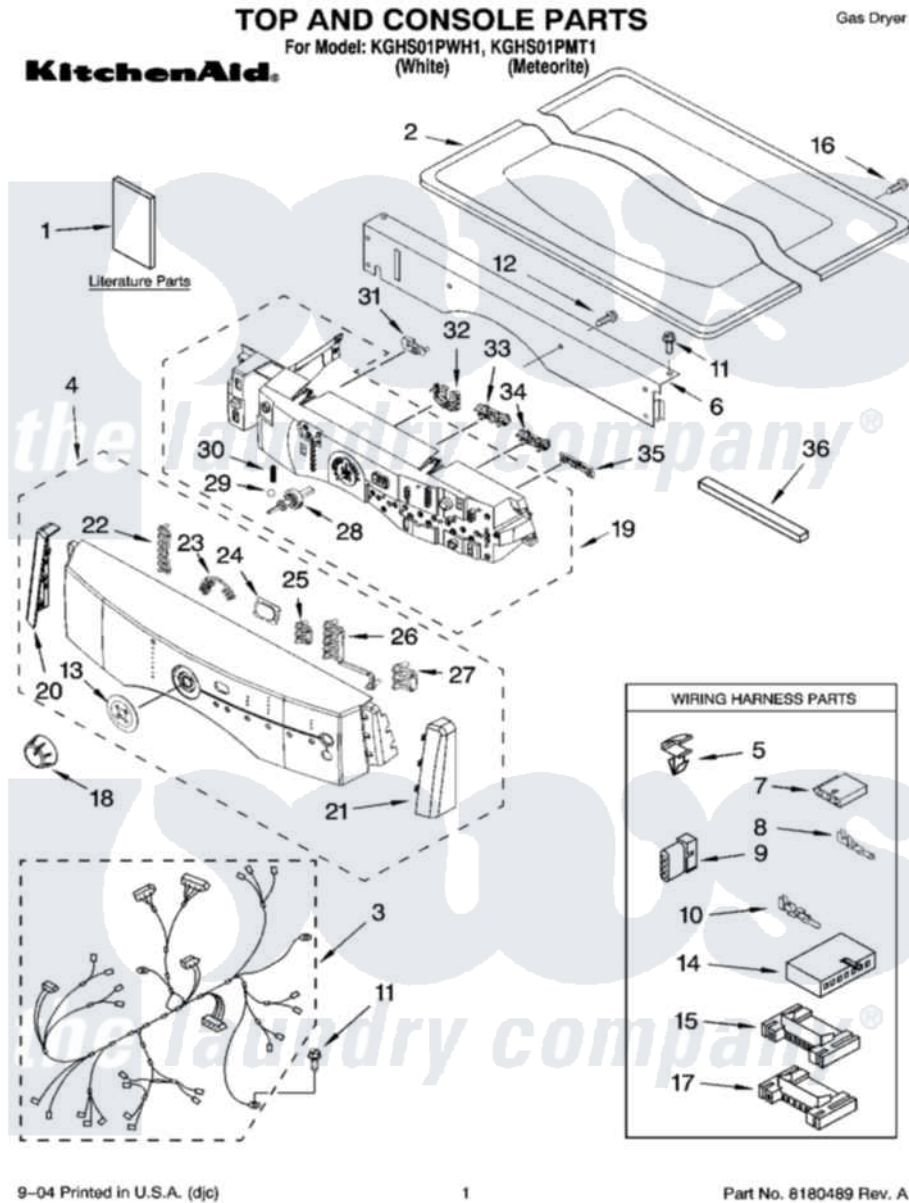

Whirlpool Residential Whirlpool KGHS01PWH1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562593		Not Available	Use & Care Guide
"	8563817		Not Available	Tech Sheet
2	8519251	W10117263		Top
"	8539266	8546089		Top
3	8299950			Harness, Main
4	8562599		Not Available	Panel, Console (Includes Bezel, Light Indicators & Endcaps) (White)
"	8542706	8546090		Panel-Control
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	488886	488787		Screw

13	8542690	Bezel, Cycle
14	3936150	Connector, 7-Circuit
15	3395683	Receptacle, Multi-Terminal
16	8281225	Screw, 8-18 X 1/2
17	2203186	Connector, 5-Circuit
18	8542701	Knob, Assembly
19	8558455	User Interface
20	8562598	Endcap
"	8542714	Endcap
21	8562597	Endcap
"	8542713	Endcap
22	8542682	Light Indicator
23	8542683	Light Indicator
24	8542691	Lens, Display
25	8542684	Light Indicator
26	8542685	Light Indicator
27	8542686	Light Indicator
28	8542717	Shaft, Cycle Selector
29	8542716	Bearing, Knob
30	8542715	Spring, Knob
31	8562606	Pushbutton,)
"	8542711	Pushbutton,
32	8562603	Pushbutton,
"	8542708	Pushbutton,
33	8562604	Pushbutton,
"	8542709	Pushbutton,
34	8562605	Pushbutton,
"	8542710	Pushbutton,
35	8558454	Pushbutton,)
36	8066181	Gasket, Console

