


Whirlpool KGHS01PWH3 01 - TOP AND CONSOLE PARTS

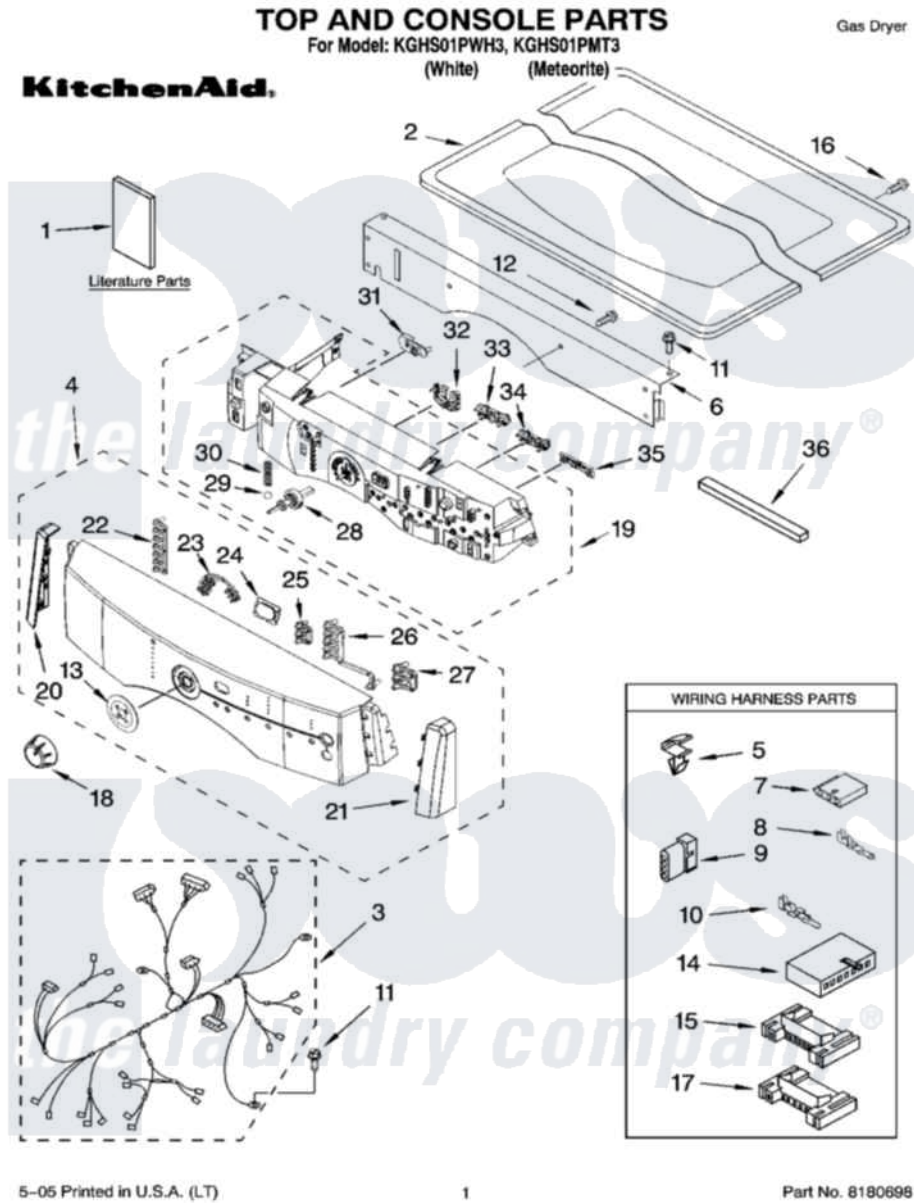

5-05 Printed in U.S.A. (LT)

1

Part No. 8180698

Whirlpool [Residential Whirlpool KGHS01PWH3 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562593		Not Available	Use & Care Guide
"	8563817		Not Available	Tech Sheet
"	8557330		Not Available	GUIDE, QUICK START
2	8519251	W10117263		Top
"	8539266	8546089		Top
3	8299950			Harness, Main
4	8562599		Not Available	Panel, Console (Includes Bezel, Light Indicators & Endcaps) (White)
"	8542706	8546090		Panel-Control
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw

12	488886	488787	Screw
13	8542690		Bezel, Cycle
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	8281225		Screw, 8-18 X 1/2
17	2203186		Connector, 5-Circuit
18	8542701		Knob, Assembly
19	8558455		User Interface
20	8562598		Endcap
"	8542714		Endcap
21	8562597		Endcap
"	8542713		Endcap
22	8542682		Light Indicator
23	8542683		Light Indicator
24	8542691		Lens, Display
25	8542684		Light Indicator
26	8542685		Light Indicator
27	8542686		Light Indicator
28	8542717		Shaft, Cycle Selector
29	8542716		Bearing, Knob
30	8542715		Spring, Knob
31	8562606		Pushbutton,)
"	8542711		Pushbutton,
32	8562603		Pushbutton,
"	8542708		Pushbutton,
33	8562604		Pushbutton,
"	8542709		Pushbutton,
34	8562605		Pushbutton,
"	8542710		Pushbutton,
35	8558454		Pushbutton,)
36	8066181		Gasket, Console

