


# Whirlpool KGHS02RMT2 01 - TOP AND CONSOLE PARTS

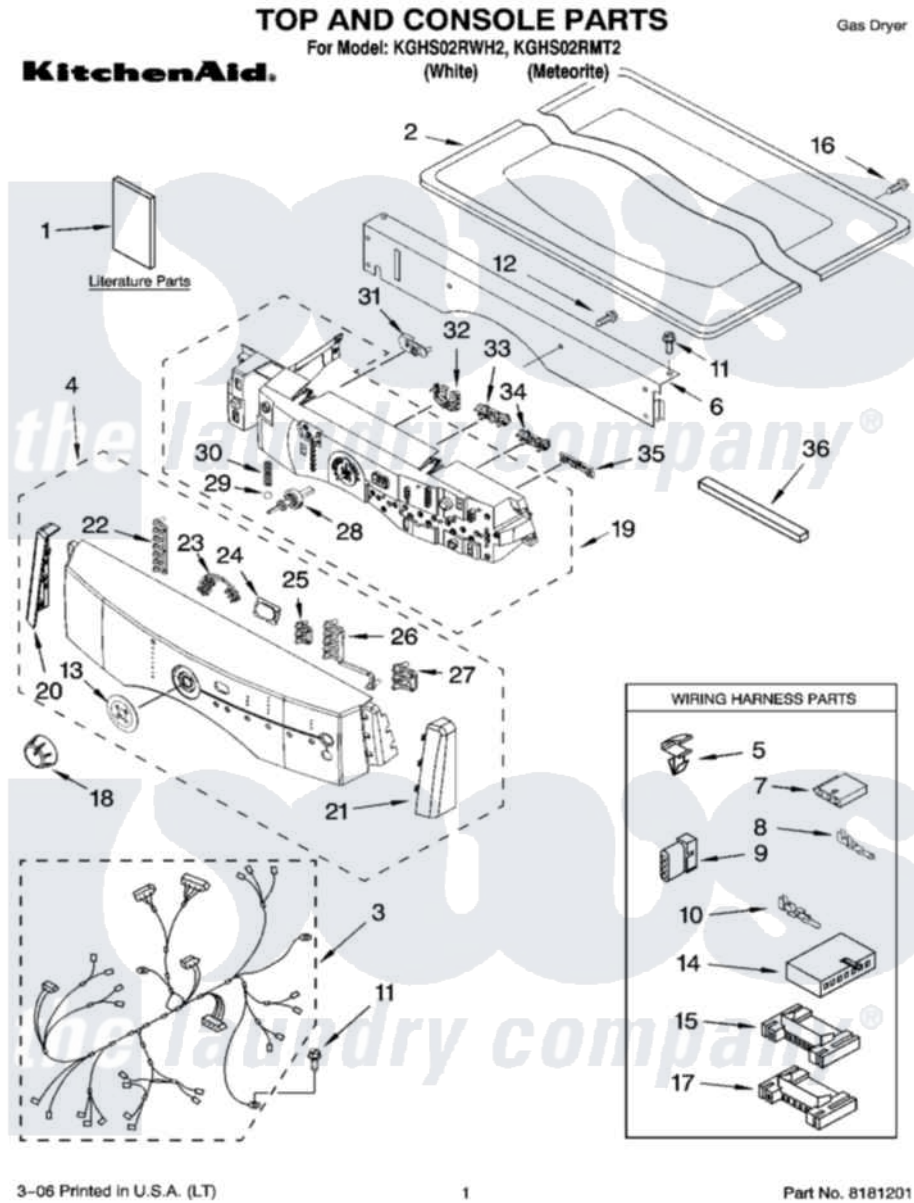

Whirlpool Residential Whirlpool KGHS02RMT2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578200		Not Available	Use & Care Guide
"	8563817		Not Available	Tech Sheet
"	8557330		Not Available	GUIDE, QUICK START
2	8519251	<a href="#">W10117263</a>		Top
"	8539266	<a href="#">8546089</a>		Top
3	<a href="#">8299950</a>			Harness, Main
4	8562599		Not Available	Panel, Console (Includes Bezel, Light Indicators & Endcaps) (White)
"	8542706	<a href="#">8546090</a>		Panel-Control
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8519271</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw

12	<a href="#">488886</a>	<a href="#">488787</a>	Screw
13	<a href="#">8542690</a>		Bezel, Cycle
14	<a href="#">3936150</a>		Connector, 7-Circuit
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">8281225</a>		Screw, 8-18 X 1/2
17	<a href="#">2203186</a>		Connector, 5-Circuit
18	<a href="#">8542701</a>		Knob, Assembly
19	<a href="#">8558455</a>		User Interface
20	<a href="#">8562598</a>		Endcap
"	<a href="#">8542714</a>		Endcap
21	<a href="#">8562597</a>		Endcap
"	<a href="#">8542713</a>		Endcap
22	<a href="#">8542682</a>		Light Indicator
23	<a href="#">8542683</a>		Light Indicator
24	<a href="#">8542691</a>		Lens, Display
25	<a href="#">8542684</a>		Light Indicator
26	<a href="#">8542685</a>		Light Indicator
27	<a href="#">8542686</a>		Light Indicator
28	<a href="#">8542717</a>		Shaft, Cycle Selector
29	<a href="#">8542716</a>		Bearing, Knob
30	<a href="#">8542715</a>		Spring, Knob
31	<a href="#">8562606</a>		Pushbutton, )
"	<a href="#">8542711</a>		Pushbutton,
32	<a href="#">8562603</a>		Pushbutton,
"	<a href="#">8542708</a>		Pushbutton,
33	<a href="#">8562604</a>		Pushbutton,
"	<a href="#">8542709</a>		Pushbutton,
34	<a href="#">8562605</a>		Pushbutton,
"	<a href="#">8542710</a>		Pushbutton,
35	<a href="#">8558454</a>		Pushbutton, )
36	<a href="#">8066181</a>		Gasket, Console

