


Whirlpool KGYS850LE1 01 - TOP AND CONSOLE PARTS

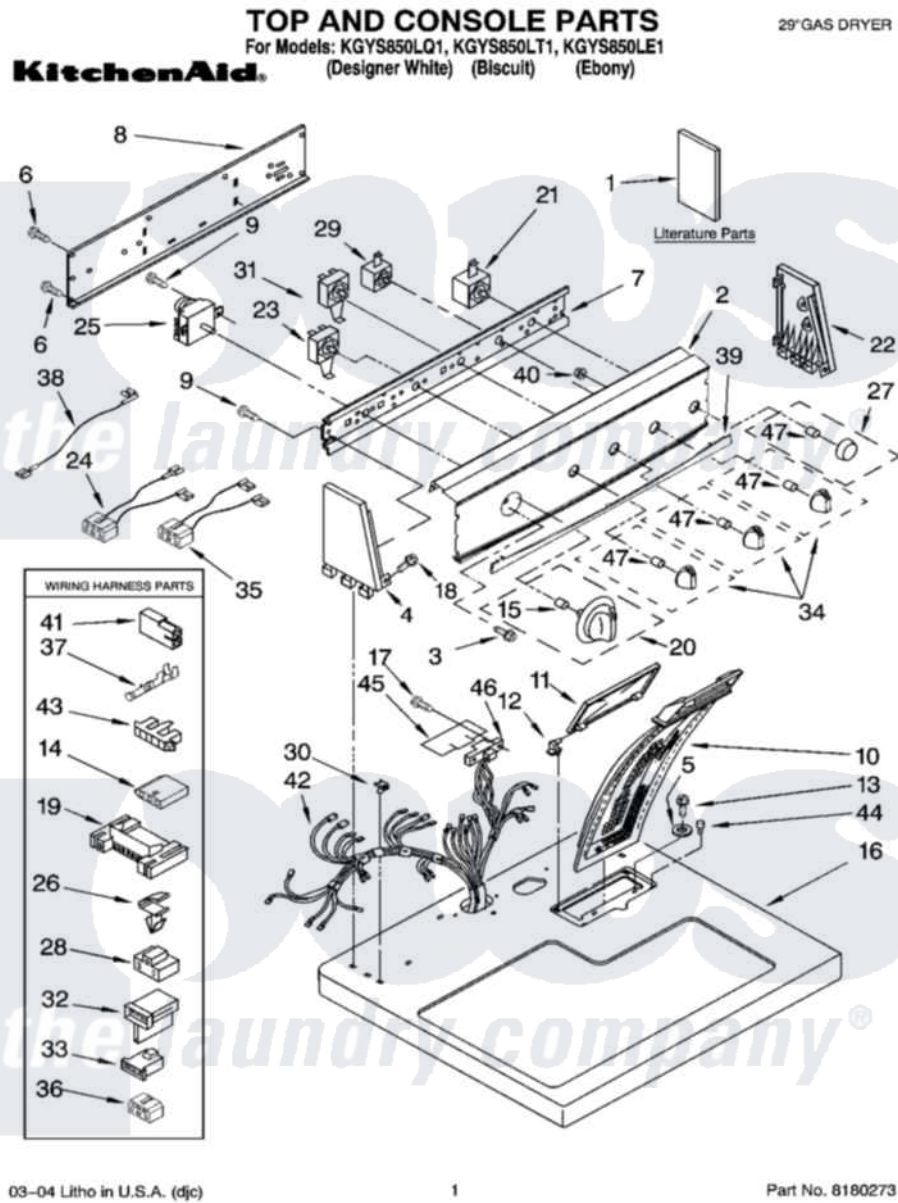

Whirlpool [Residential Whirlpool KGYS850LE1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535889		Not Available	Literature Parts (Instructions, Installation)
"	LIT8535890		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8535887			Literature Parts
"	LIT3979569		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3977978	280015		Panel-Control
"	3977979	280016		Panel-Control
"	3977980	280017		Panel-Control
3	3400859			Screw, Grounding
4	8274353	285858		Endcap
"	8274355	285859		Endcap
"	3954772	285860		Baffle - Oven Top

5	237446	487596	Washer
6	693995		Screw, Hex Head
7	8271418		Bracket, Control
8	8274261		Do-It-Yourself Repair Manuals
9	3390646	W10139210	Screw, 8-18 X 5/16
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
"	3979324		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3936144		Do-It-Yourself Repair Manuals
15	688805		Clip, Spring Knob
16	8274386	8521923	Top
"	8274387	8521924	Top
"	3978787	8521925	Top
17	337686	Not Available	SCREW, 8-18 X .500
18	388326		Screw, 8-18 X 1.25
19	3395683		Receptacle, Multi-Terminal
20	3956185		Knob, Timer
"	3956186		Knob, Timer
"	3956187		Knob, Timer
21	3398094		Switch, Push To Start
22	8274349	285858	Endcap
"	8274351	285859	Endcap
"	3954771	285860	Baffle - Oven Top
23	3399640		Switch, Rotary
24	8283276		Wire, Jumper
25	3976570		Timer, 60 Hz
26	3394427		Clip-Harness
27	8536921		Knob, Push To Start
"	8536922		Knob, Push To Start
"	8536923		Knob, Push-To-Start
28	3401144		Connector
29	3398093		Buzzer, Adjustable
30	357213		Nut, Push-In
31	3405156		Switch, Rotary
32	3403499		Connector, 2-Position
33	3403498		Connector, 3-Position
34	3956182		Knob, Control
"	3956183		Knob, Control
"	3956184		Knob, Control
35	8283279		Wire, Jumper
36	3347243		Block, Disconnect
37	94614		Terminal
38	3401668		Wire, Jumper
39	8536944		Spacer, Console
"	8536945		Spacer, Console
"	8536946		Spacer, Console
40	8533828		Nut, 3/16

41	717252		Receptacle, Terminal
42	8299881		Harness, Wiring
43	3397269		Connector, Timer
44	297535	17258	Bumper
45	3390537	8558178	Control, Electronic
46	3391885		Connector, Edge
47	8536939		Clip, Knob
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	72032		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	786020	Not Available	PAINT, PRESSURIZED SPRAY (12 oz.) (Black)
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)
"	786032		Refinishing Material

