


Whirlpool KGYS850LQ2 02 - CABINET PARTS

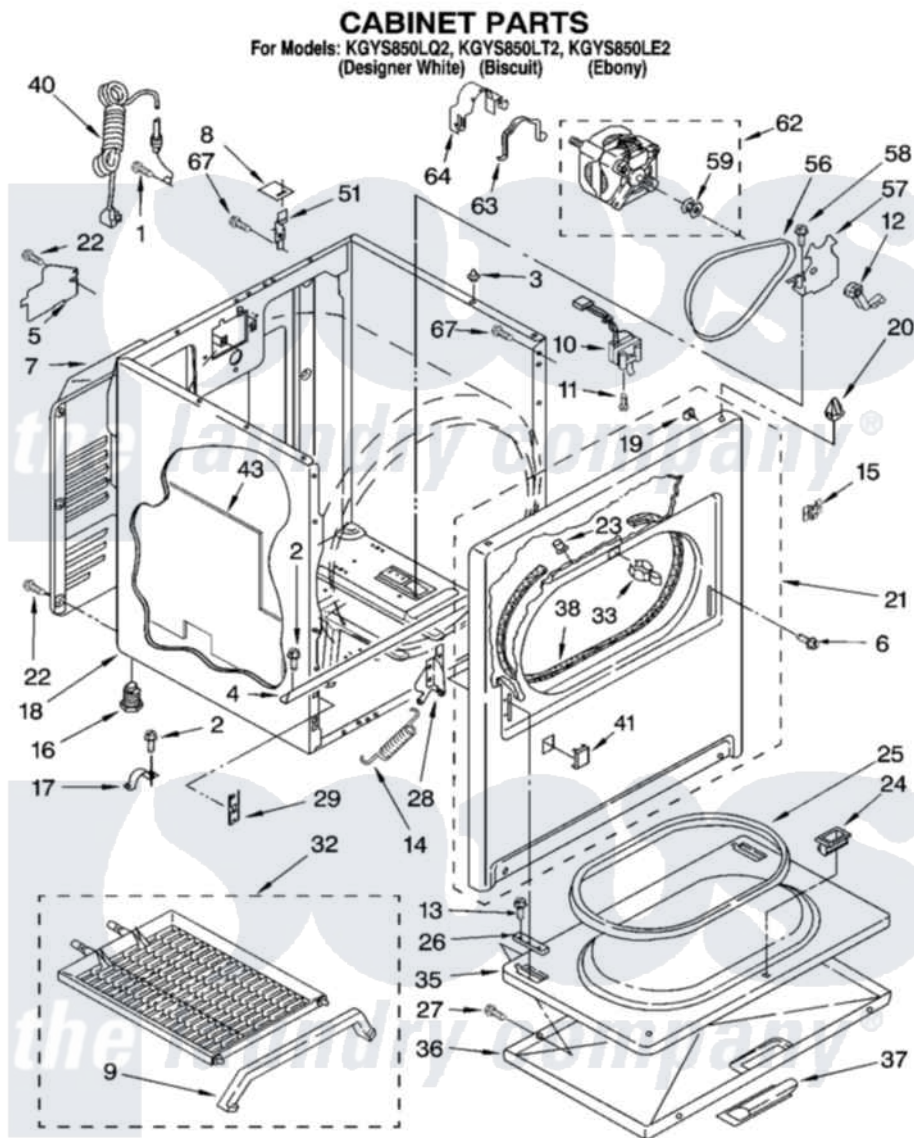

8181014

3

Whirlpool [Residential Whirlpool KGYS850LQ2 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	98669			Lock, Front Top
4	8541400			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	342043	486146		Screw
7	3396805	280043		Panel-Rear
8	18849			Pad, Top Hinge
9	692989			BRacket, Dry Rack
10	3406107			Door Switch Assembly
11	697773	3395530		Screw
12	691366			Idler And Pulley Assembly
13	3357011	308685		Side Trim)
14	8541401	W10041960		Spring, Door
15	8546676	W10041960		Spring, Door
16	3392100	49621		Feet-Leveling

"	279810		Foot-Optional
17	3980175		Clamp, Elbow
18	8530603	8533643	Cabinet
"	8530606	3977306	Cabinet
"	8530605		Cabinet
19	98234		Clip, U-Bend
20	18776		Lock, Front Top
21	3395197	279740	Panel
"	3977243	279890	Panel
"	3978796	280042	Panel
22	693995		Screw, Hex Head
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	3390731		Seal, Door
26	337189		Clip, Hinge
27	694091		Trim, Side Right Hand
28	8066056		Hinge, Door
"	8066057		Hinge, Door
29	3394083		Clip, Front Panel
32	3406839		Dry Rack Assembly
33	696144	279570	Latch
35	695737		Door, Rear
36	3393549		Door, Front
"	3977241		Door, Front
"	3403110		Door, Front
37	8536933		Handle, Door
"	8536934		Handle, Door
"	8536935		Handle, Door
38	3406129		Seal And Bearing Assembly
40	344020	3401402	Cord, Power
41	3394975		Plug, Front Panel
"	3394978		Plug, Front Panel
"	3394979		Plug, Front Panel
43	8564134		Board, Sound Dampening
51	238088	8066217	Hinge, Top
56	8066065	341241	Belt
57	348780		Base, Motor
58	3400500		Bolt, 3405245 5/16-18 X 3/4
59	3394341	W10299847	Pulley-Motor
62	8066206	279827	Motor-Drve
63	660658		Clamp, Motor Mounting 343481 685441
64	3404162		Clamp, Motor
67	337686	Not Available	SCREW, 8-18 X .500