


# Whirlpool KHWS02RMT2 03 - CONTROL PANEL PARTS

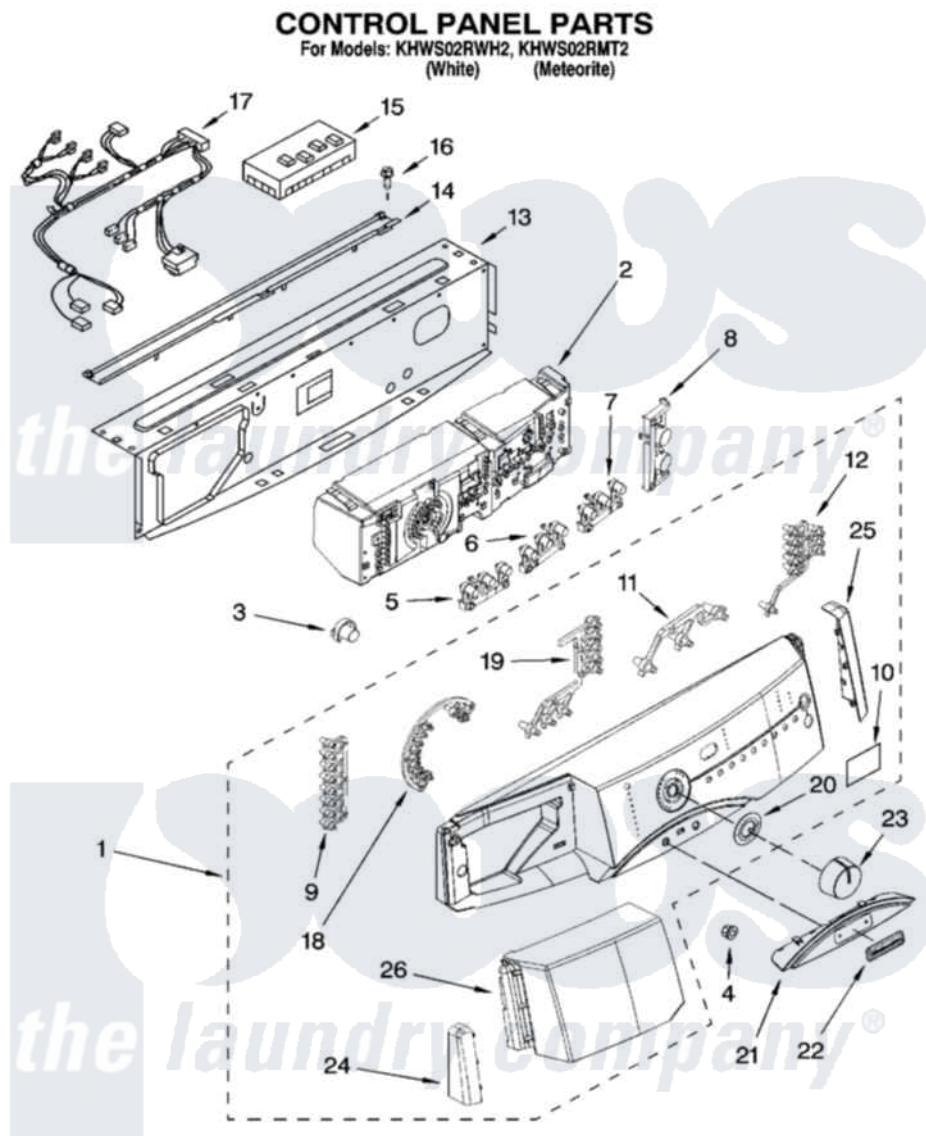

8181483

5

Whirlpool [Residential Whirlpool KHWS02RMT2 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8182597</a>			Panel, Control
"	<a href="#">8182626</a>			Panel, Control
2	<a href="#">8182150</a>			User Interface
3	<a href="#">8182601</a>			Button, Power
"	<a href="#">8182177</a>			Button, Power
4	8182183	<a href="#">2004333</a>		Nut
5	<a href="#">8182604</a>			Button Set, Left
"	<a href="#">8182178</a>			Button Set, Left
6	<a href="#">8182603</a>			Button Set, Middle
"	<a href="#">8182179</a>			Button Set, Middle
7	<a href="#">8182602</a>			Button Set, Right
"	<a href="#">8182176</a>			Button Set, Right
8	<a href="#">8182180</a>			Button Set, Start
9	<a href="#">8182166</a>			Light, Indicator
10	<a href="#">8182170</a>			Window, Display
11	<a href="#">8182168</a>			Light, Indicator

12	<a href="#">8182167</a>		Light, Indicator
13	8182224	Not Available	Brace, Front Top
14	<a href="#">8182800</a>		Channel, Water
15	8182774	<a href="#">W10137702</a>	Microcomputer, Machine Control
16	8181756	<a href="#">488729</a>	Screw
17	<a href="#">8182212</a>		Harness, Wiring
18	<a href="#">8182165</a>		Light, Indicator
19	<a href="#">8182169</a>		Light, Indicator
20	<a href="#">8182171</a>		Bezel, Knob
21	<a href="#">8182181</a>		Overlay, Door
22	8182182	<a href="#">9707516</a>	Medallion
23	8182175	<a href="#">W10163301</a>	Knob, Control
24	<a href="#">8182599</a>		Endcap, Left
"	8182174	Not Available	Endcap, Left (Meteorite)
25	<a href="#">8182600</a>		Endcap, Right
"	<a href="#">8182164</a>		Endcap, Right
26	8182598	Not Available	Handle, Drawer (Includes Illus. 24) (White)
"	8182172	Not Available	Handle, Drawer (Includes Illus. 24) (Meteorite)

