


Whirlpool KHWS02RMT3 03 - CONTROL PANEL PARTS

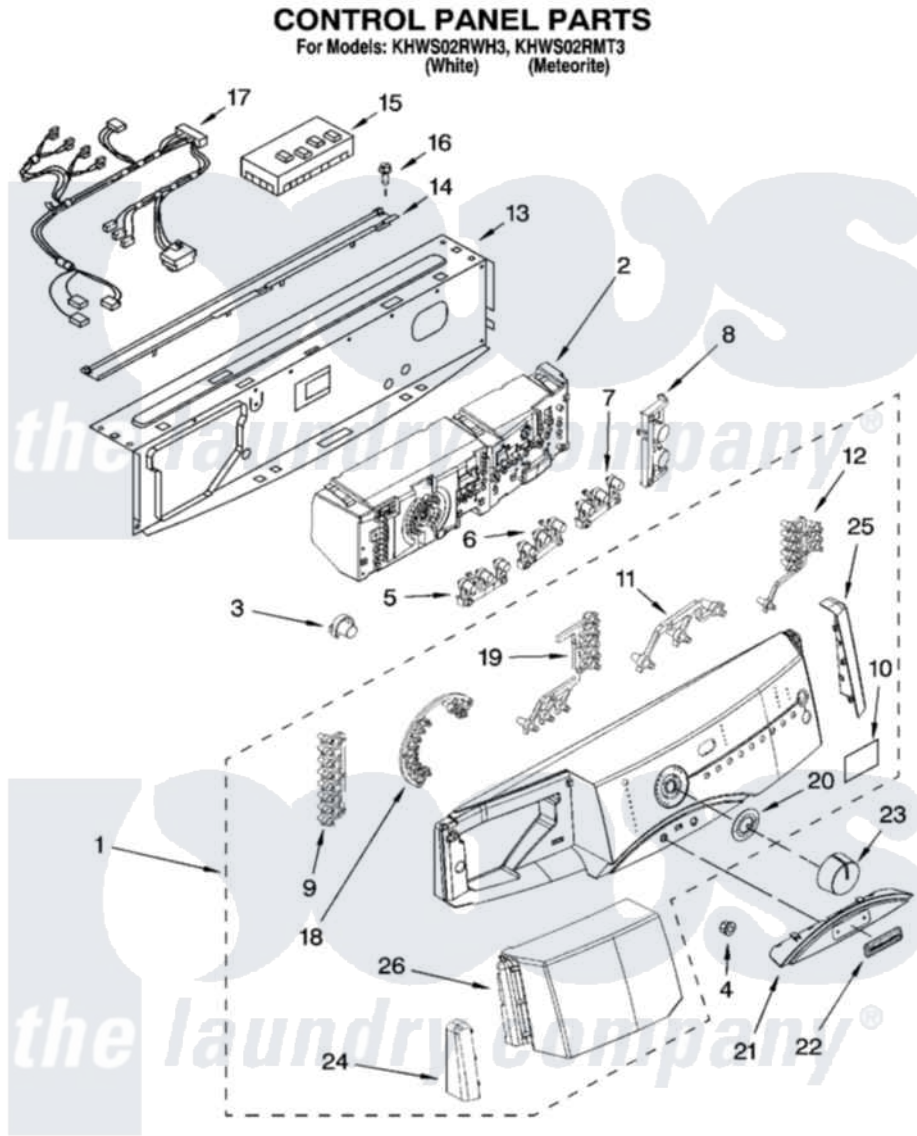

8181484

5

Whirlpool [Residential Whirlpool KHWS02RMT3 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182597			Panel, Control
"	8182626			Panel, Control
2	8182150			User Interface
3	8182601			Button, Power
"	8182177			Button, Power
4	8182183	2004333		Nut
5	8182604			Button Set, Left
"	8182178			Button Set, Left
6	8182603			Button Set, Middle
"	8182179			Button Set, Middle
7	8182602			Button Set, Right
"	8182176			Button Set, Right
8	8182180			Button Set, Start
9	8182166			Light, Indicator
10	8182170			Window, Display
11	8182168			Light, Indicator

12	8182167		Light, Indicator
13	8182224	Not Available	Brace, Front Top
14	8181640	8182800	Channel, Water
15	8182774	W10137702	Microcomputer, Machine Control
16	8181756	488729	Screw
17	8182212		Harness, Wiring
18	8182165		Light, Indicator
19	8182169		Light, Indicator
20	8182171		Bezel, Knob
21	8182181		Overlay, Door
22	8182182	9707516	Medallion
23	8182175	W10163301	Knob, Control
24	8182599		Endcap, Left
"	8182174	Not Available	Endcap, Left (Meteorite)
25	8182600		Endcap, Right
"	8182164		Endcap, Right
26	8182598	Not Available	Handle, Drawer (Includes Illus. 24) (White)
"	8182172	Not Available	Handle, Drawer (Includes Illus. 24) (Meteorite)

