


Whirlpool KHWS02RWH2 03 - CONTROL PANEL PARTS

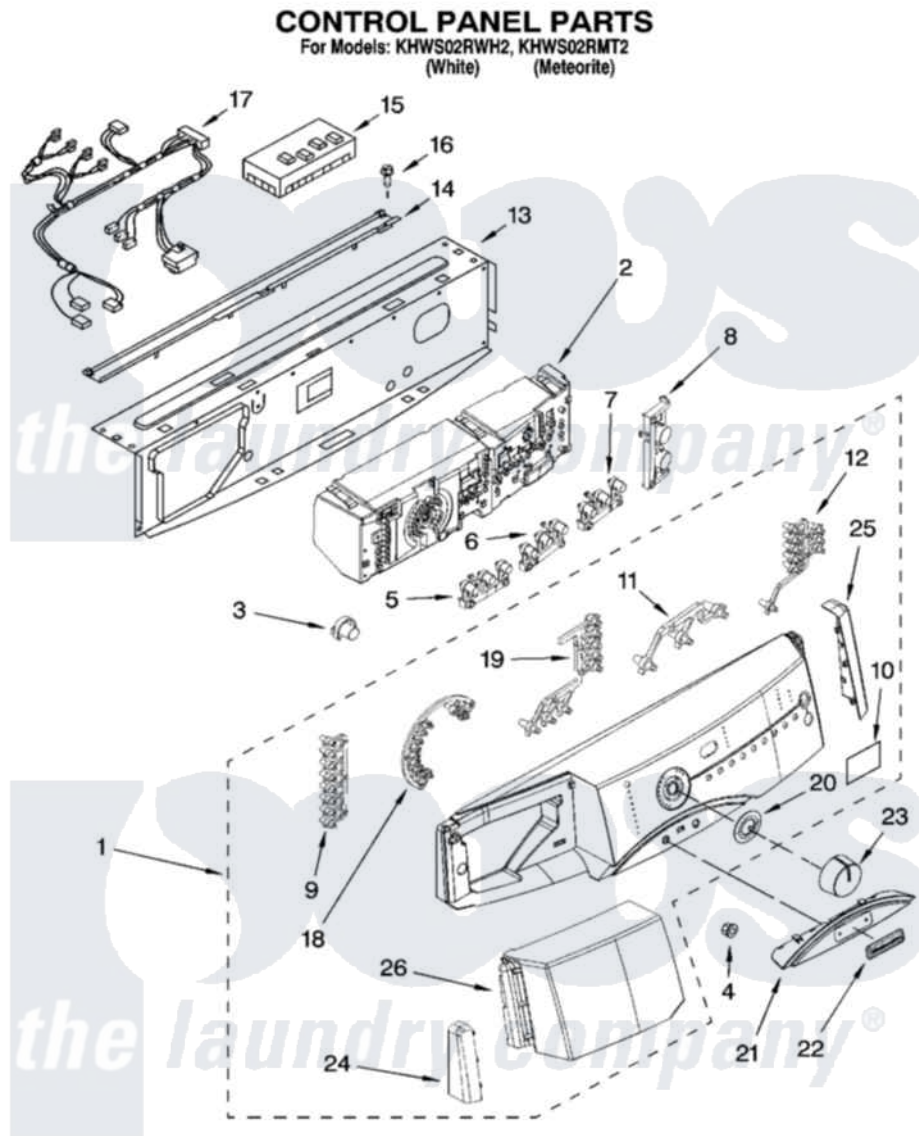

8181483

5

Whirlpool [Residential Whirlpool KHWS02RWH2 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|-------------------------|--------|--------------------|
| 1 | 8182597 | | | Panel, Control |
| " | 8182626 | | | Panel, Control |
| 2 | 8182150 | | | User Interface |
| 3 | 8182601 | | | Button, Power |
| " | 8182177 | | | Button, Power |
| 4 | 8182183 | 2004333 | | Nut |
| 5 | 8182604 | | | Button Set, Left |
| " | 8182178 | | | Button Set, Left |
| 6 | 8182603 | | | Button Set, Middle |
| " | 8182179 | | | Button Set, Middle |
| 7 | 8182602 | | | Button Set, Right |
| " | 8182176 | | | Button Set, Right |
| 8 | 8182180 | | | Button Set, Start |
| 9 | 8182166 | | | Light, Indicator |
| 10 | 8182170 | | | Window, Display |
| 11 | 8182168 | | | Light, Indicator |

| | | | |
|----|-------------------------|---------------------------|-------------------------------------------------|
| 12 | 8182167 | | Light, Indicator |
| 13 | 8182224 | Not Available | Brace, Front Top |
| 14 | 8182800 | | Channel, Water |
| 15 | 8182774 | W10137702 | Microcomputer, Machine Control |
| 16 | 8181756 | 488729 | Screw |
| 17 | 8182212 | | Harness, Wiring |
| 18 | 8182165 | | Light, Indicator |
| 19 | 8182169 | | Light, Indicator |
| 20 | 8182171 | | Bezel, Knob |
| 21 | 8182181 | | Overlay, Door |
| 22 | 8182182 | 9707516 | Medallion |
| 23 | 8182175 | W10163301 | Knob, Control |
| 24 | 8182599 | | Endcap, Left |
| " | 8182174 | Not Available | Endcap, Left (Meteorite) |
| 25 | 8182600 | | Endcap, Right |
| " | 8182164 | | Endcap, Right |
| 26 | 8182598 | Not Available | Handle, Drawer (Includes Illus. 24) (White) |
| " | 8182172 | Not Available | Handle, Drawer (Includes Illus. 24) (Meteorite) |

