


Whirlpool LBR4132PQ0 02 - CONTROL AND REAR PANEL PARTS

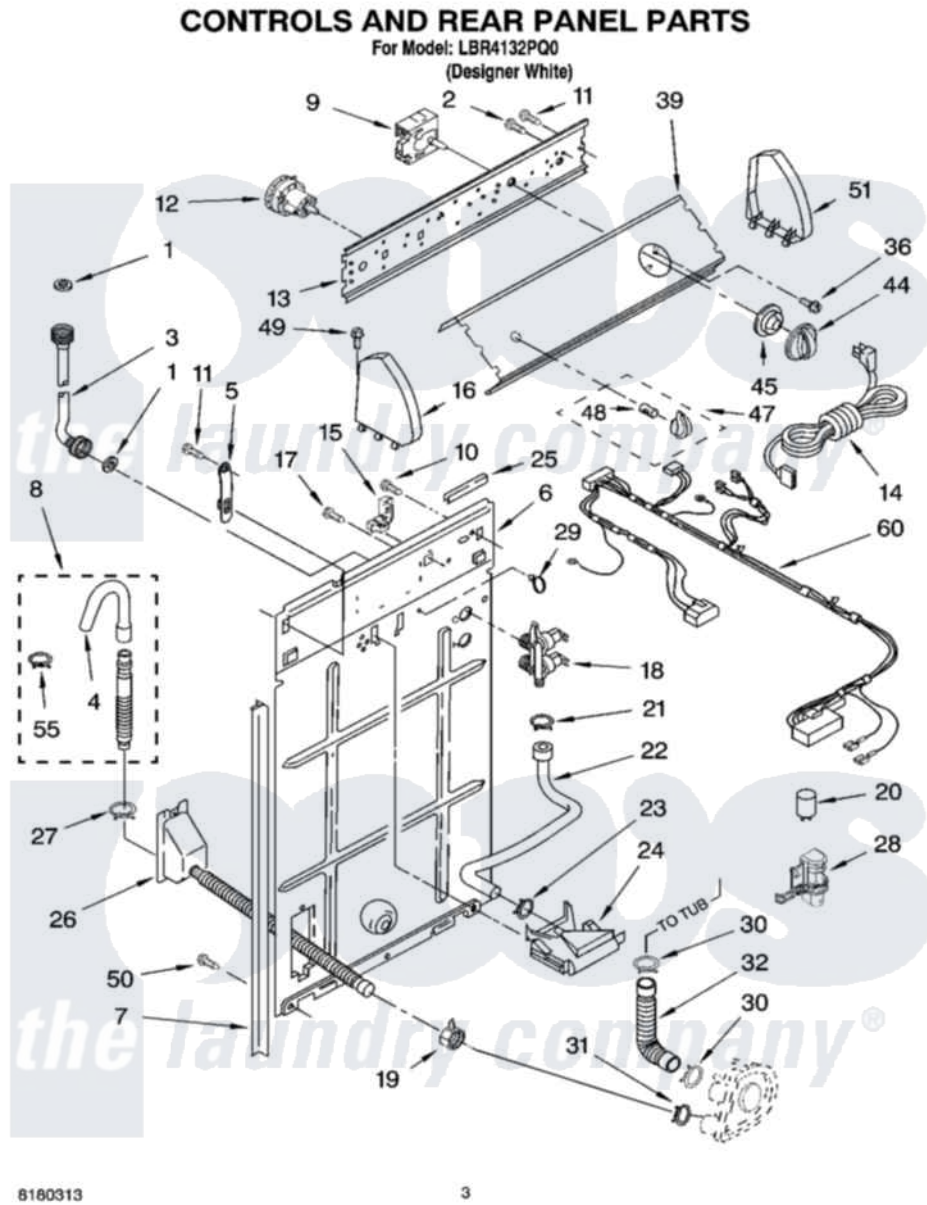

Whirlpool [Residential Whirlpool LBR4132PQ0 Washer Parts](#) Parts Diagram 02 - CONTROL AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3400073			Screw, Ground
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	3357976			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8546681			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366849	W10339228	Switch-WL
13	3948814		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	9740848		Screw, Mixing Valve Mounting
18	3955673	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	661606	8572717	Capacitor, Motor Start
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	3347034		Break, Vacuum
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8318046		Clip, Capacitor
29	8559320		Restraint, Hose
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
36	3400818		Screw, Timer Mounting
39	3956546		Panel, Console
44	8544943		Knob, Timer
45	8544947		Dial, Timer
47	8544935		Knob, Control
48	8536939		Clip, Knob
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
55	3366913	3357331	Clamp, Drain
60	3957018		Harness, Wiring

