


# Whirlpool LBR4132PQ1 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: LBR4132PQ1  
(Designer White)

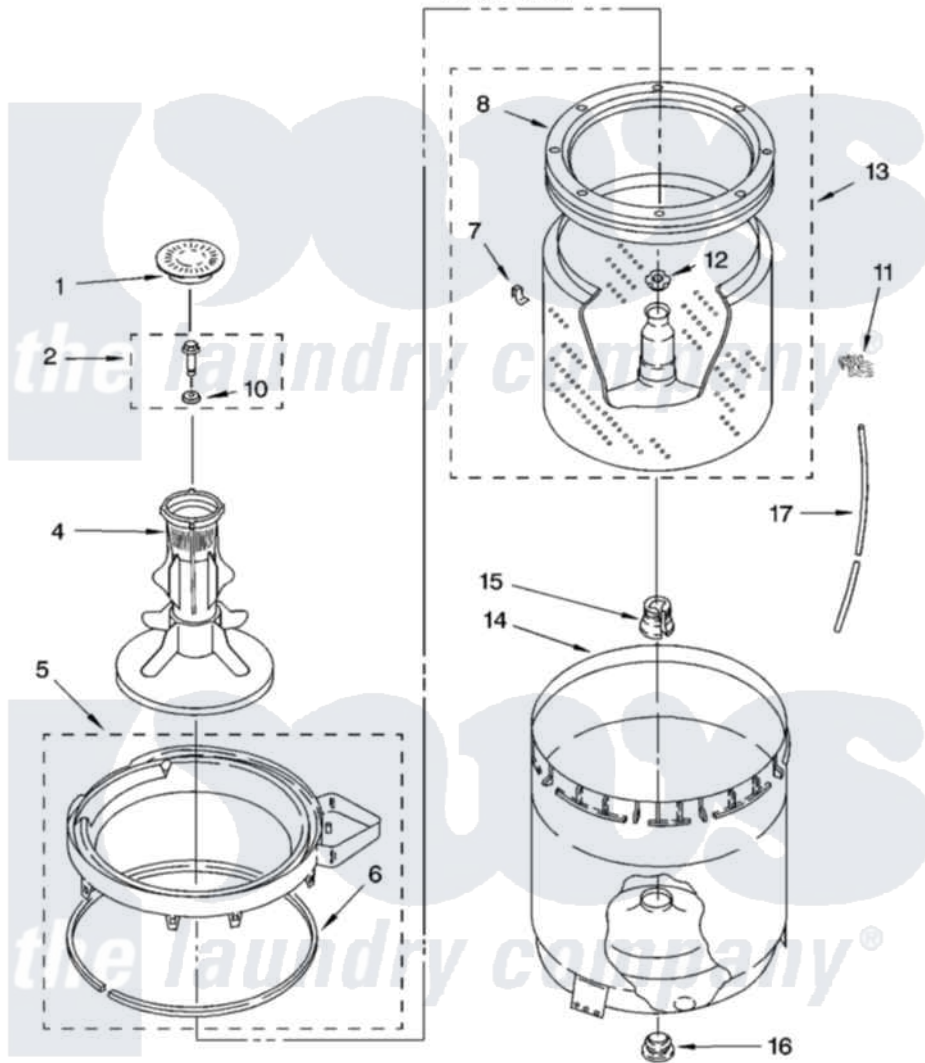

8180589

5

Whirlpool [Residential Whirlpool LBR4132PQ1 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3352483</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
4	<a href="#">63377</a>			Agitator
5	<a href="#">3360611</a>			Tub Ring And Gasket Assembly
6	<a href="#">3359586</a>			Gasket, Tub Ring
7	<a href="#">8519815</a>			Clip, Balance Ring
8	<a href="#">3956205</a>			Balance Ring
10	<a href="#">3949550</a>			Washer
11	<a href="#">2219077</a>			Clip, Pressure Switch Hose
12	<a href="#">21366</a>			Nut, Spanner
13	3956206	<a href="#">3956207</a>		Basket And Balance Ring
14	<a href="#">63125</a>			Tub
15	<a href="#">389140</a>			Tub Block, Basket Drive
16	<a href="#">383727</a>			Gasket, Centerpodt
17	3363657	<a href="#">353244</a>		Hose, Pressure Switch