


# Whirlpool LCE4332PQ1 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: LCE4332PQ1  
(White)

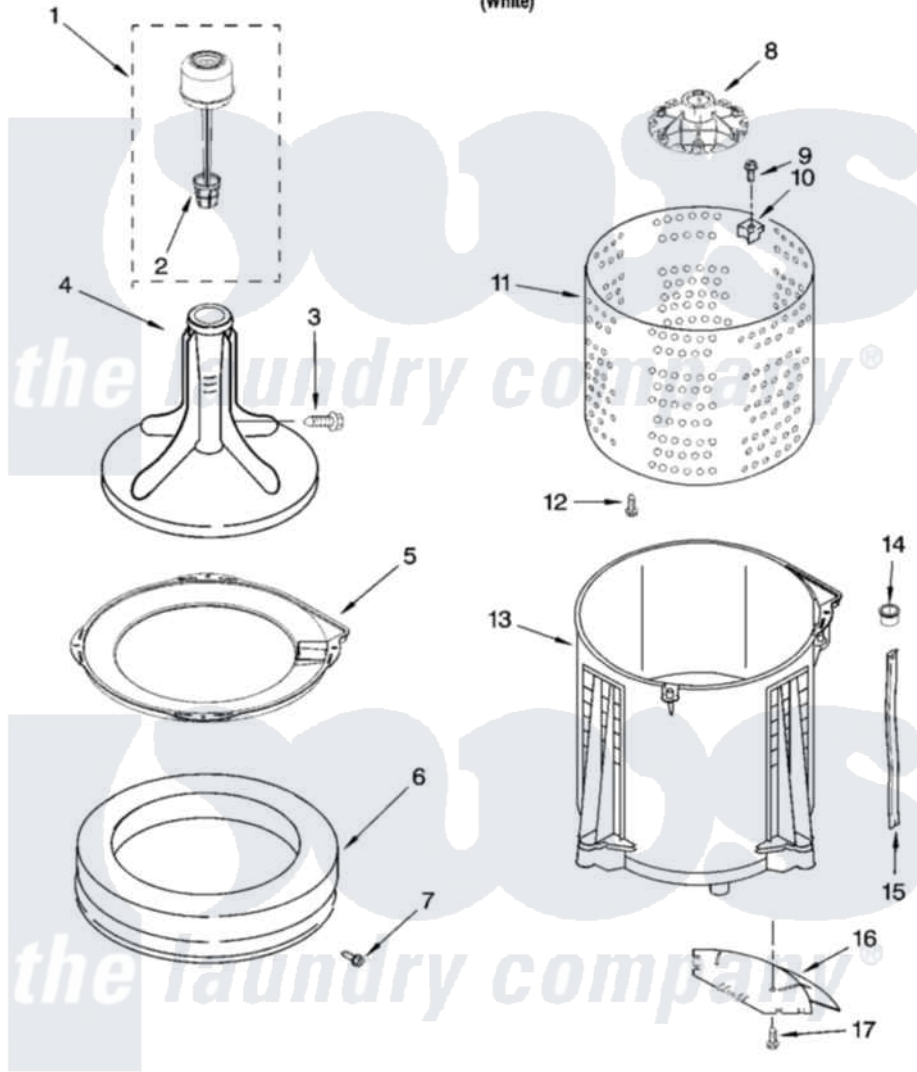

8180597

5

Whirlpool [Residential Whirlpool LCE4332PQ1 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">326018423</a>			Fabric Softener Dispenser Assembly
2	<a href="#">8182228</a>			Filter, Lint
3	<a href="#">8182296</a>			Screw, Agitator
4	<a href="#">8182227</a>			Agitator
5	326000116	<a href="#">326001402</a>		Ring-Tub
6	<a href="#">8182229</a>			Balance Ring
7	8182298	<a href="#">489491</a>		Screw 8-18 X 5/8
8	8182302	<a href="#">285709</a>		Hub
9	8182301	<a href="#">3428430</a>		Screw
10	<a href="#">8182303</a>			Saddle Block
11	<a href="#">8182230</a>			Basket
12	8182300	<a href="#">3934714</a>		Screw
13	<a href="#">326033908</a>			Tub
14	<a href="#">326036378</a>			Sleeve, Tub Overflow
15	<a href="#">326036377</a>			Bag, Tub Overflow
16	<a href="#">326033906</a>			Shield, Tub/Motor

