


Whirlpool LEB6000PQ1 01 - TOP AND CONSOLE PARTS

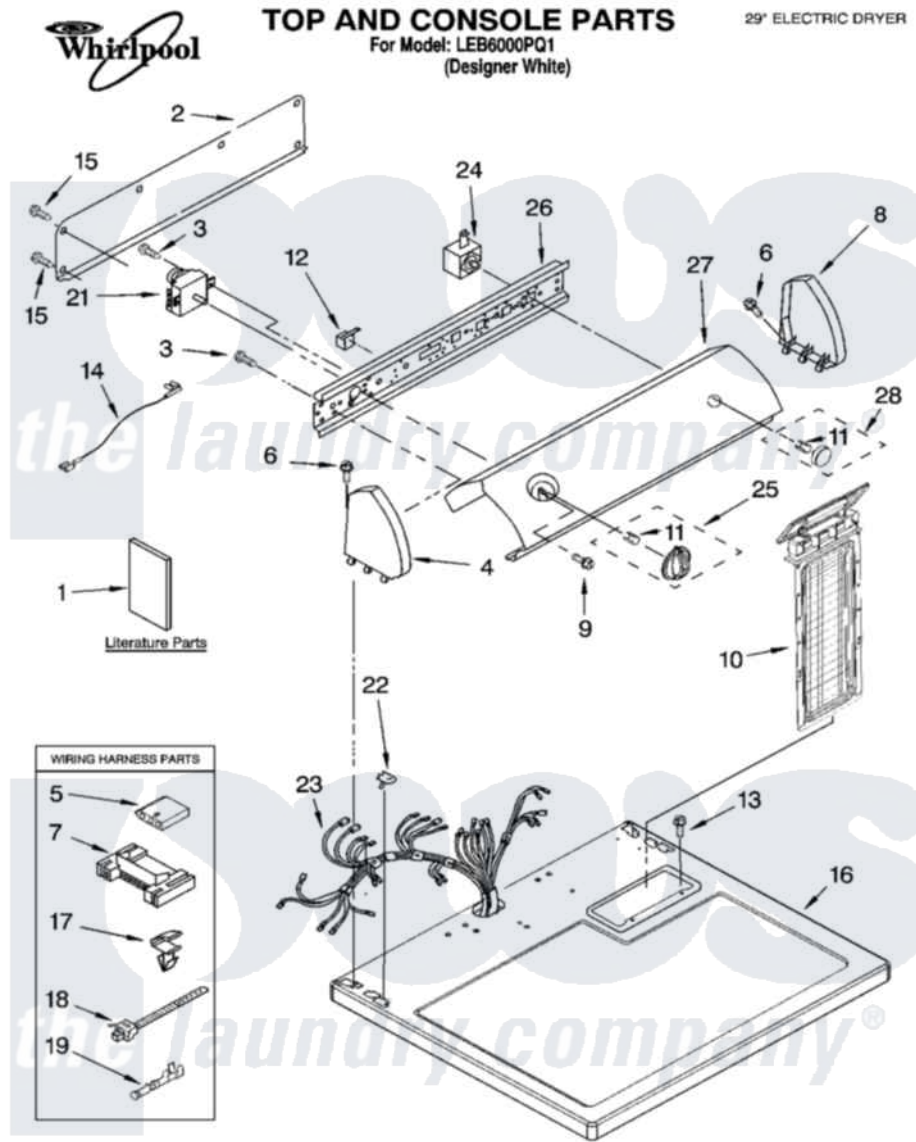

10-05 Litho in U.S.A. (LT)

1

Part No. 8180840

Whirlpool Residential Whirlpool LEB6000PQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578183		Not Available	Use And Care Guide
"	8533770		Not Available	Sheet, Cycle Feature
"	8577188		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274261			Do-It-Yourself Repair Manuals
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap

9	8533951	3400859	Screw, Grounding
10	8557861		Screen, Lint
11	8536939		Clip, Knob
12	694419		Mini-Buzzer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3393814	Not Available	Wire, Jumper (Black)
"	3393815	3393812	Wire, Jumper
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	3391249		Cable Tie, Push Mount
19	94614		Terminal
21	8299778		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299867	W10450292	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8544955		Timer Knob Assembly
26	8271418		Bracket, Control
27	8545963		Panel, Control
28	8544939		Knob, Push-To-Start

