


Whirlpool LEC9000PW1 02 - TOP AND CONSOLE PARTS

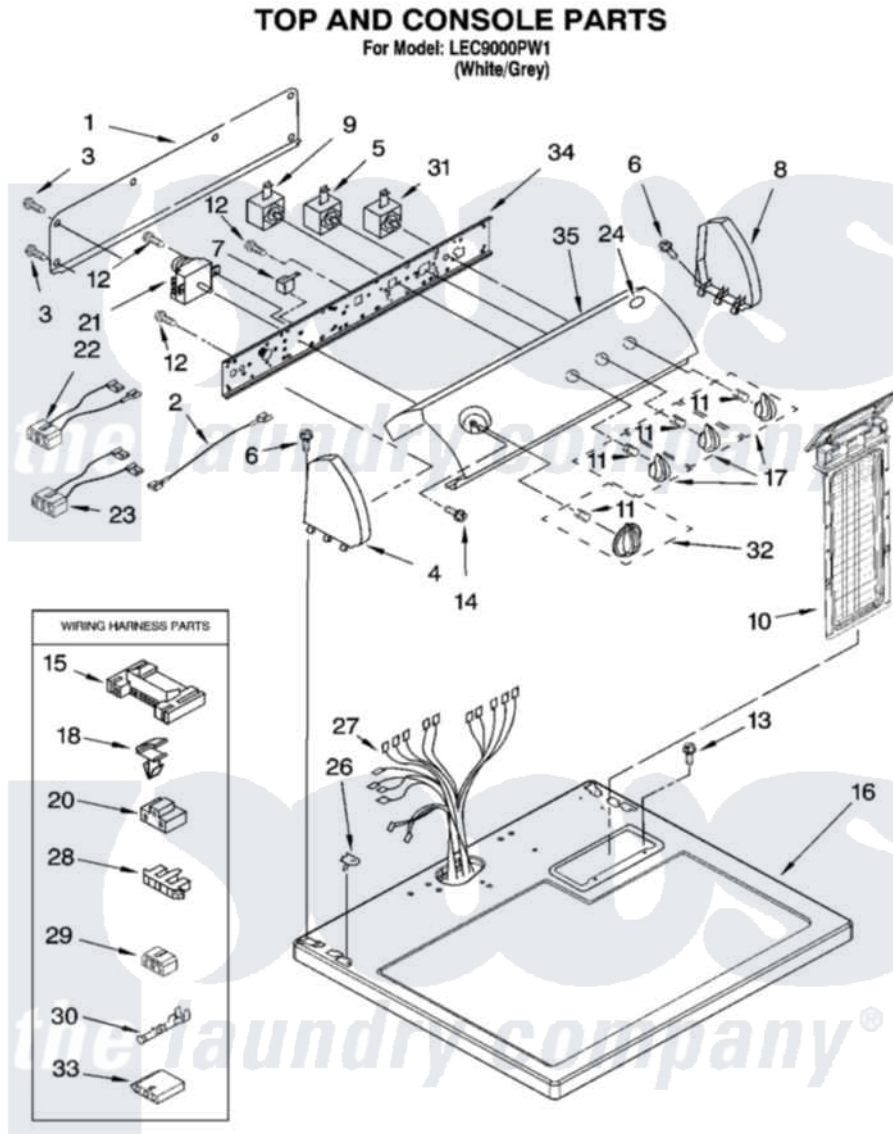

Whirlpool [Residential Whirlpool LEC9000PW1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3405156			Switch, Rotary
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3395683			Receptacle, Multi-Terminal

16	8557930	8563985	Top
17	8544937		Knob, Control
18	3394427		Clip-Harness
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
24	3400985		Medallion
26	357213		Nut, Push-In
27	8299873	8576503	Harness, Wiring
28	3397269		Connector, Timer
29	3347243		Block, Disconnect
30	94614		Terminal
31	3398095		Switch, Push-To-Start
32	8544957		Timer Knob Assembly
33	3936144		Do-It-Yourself Repair Manuals
34	8544895		Bracket, Control
35	8557475		Panel, Control

