


Whirlpool LEN2000KQ1 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

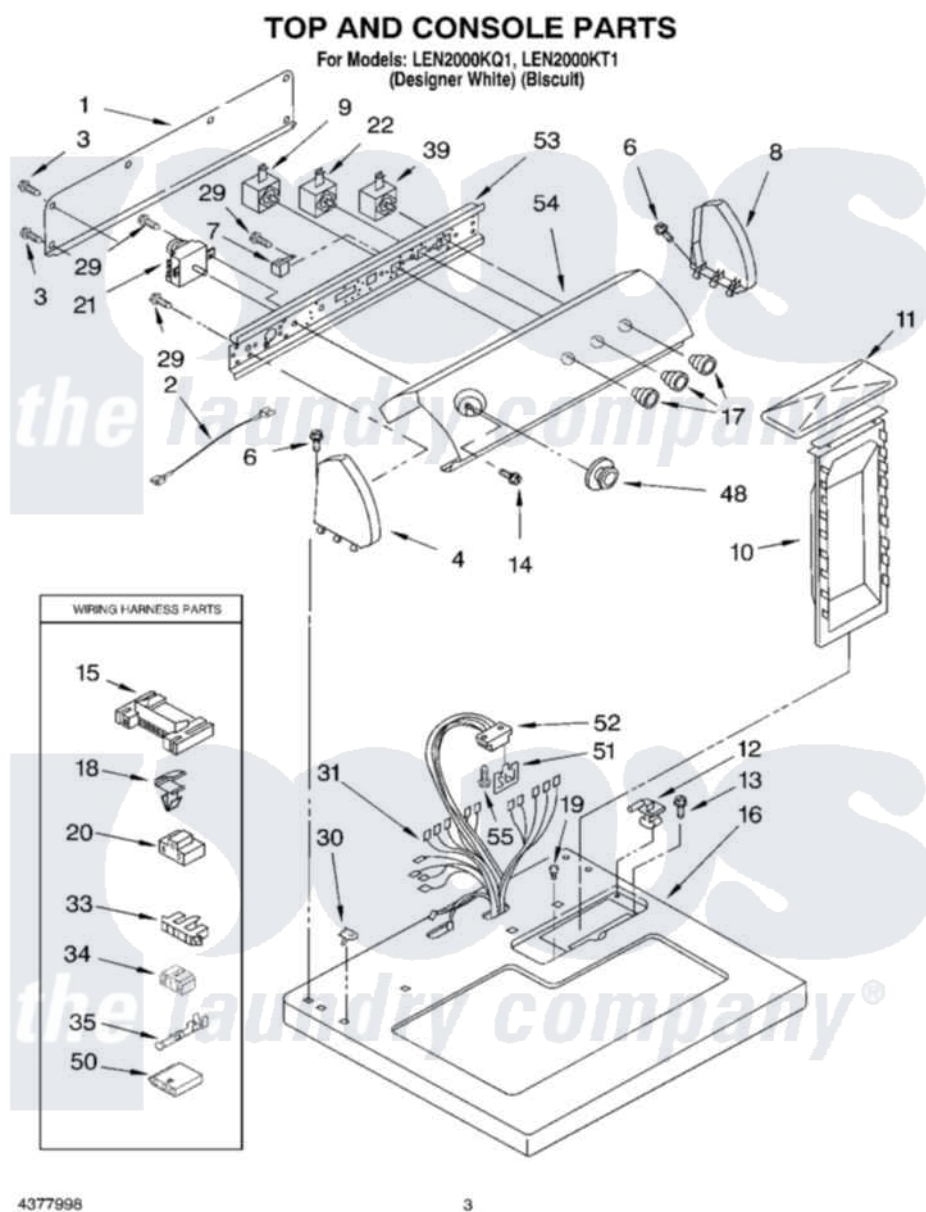

Whirlpool [Residential Whirlpool LEN2000KQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	8530152			Switch, Temperature
10	349639			HANdle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
"	8283380			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH

"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	8271339	3957799	Knob, Control
"	8271348	3957797	Knob, Push-To-Start
18	3394427		Clip-Harness
19	297535	17258	Bumper
20	3401144		Connector
21	3406725		Timer Assembly
22	3405154		Switch Rotary
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299889	8576506	Harness, Wiring
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
48	8312687	3957754	Timer Knob Assembly
"	8271404	3957755	Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
51	3390537	8558178	Control, Electronic
52	3391885		Connector, Edge
53	8271418		Bracket, Control
54	3977865		Panel, Control
"	3977866		Panel, Control
55	343641	681414	Screw, 10AB X 1/2
"	N/A		Not Available
"	3406839		ACCESSORY PARTS
"	8522199		Dry Rack Assembly
"	8522199		Accessory Parts
"	279948	4392065	Kit, Dryer Repair
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

the laundry company[®]