


Whirlpool LEN2000LG1 02 - TOP AND CONSOLE PARTS

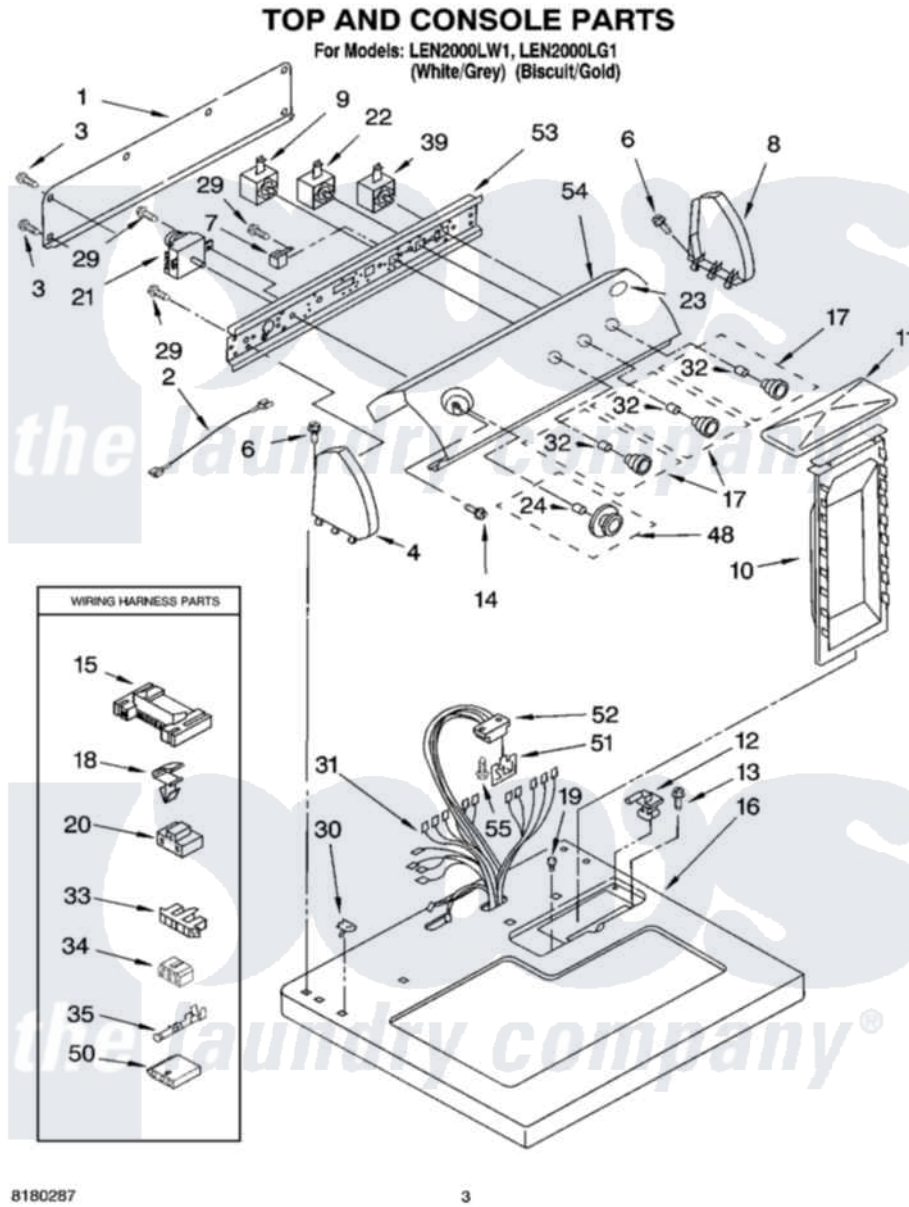

Whirlpool Residential Whirlpool LEN2000LG1 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	8530152			Switch, Temperature
10	349639			HANdle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
"	8283380			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
				Screw, For Mtn. Service

13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	8538957		Knob, Control
"	8538958		Knob, Control
18	3394427		Clip-Harness
19	297535	17258	Bumper
20	3401144		Connector
21	3406725		Timer Assembly
22	3405154		Switch Rotary
23	3955775	8303811	Badge, Assembly
24	688805		Clip, Spring Knob
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299889	8576506	Harness, Wiring
32	8536939		Clip, Knob
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
48	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
51	3390537	8558178	Control, Electronic
52	3391885		Connector, Edge
53	8271418		Bracket, Control
54	8532619		Panel, Control
"	8532620		Panel, Control
55	343641	681414	Screw, 10AB X 1/2

