


Whirlpool LEN2000PW0 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Models: LEN2000PW0, LEN2000PG0
(White/Grey) (Biscuit/Gold)

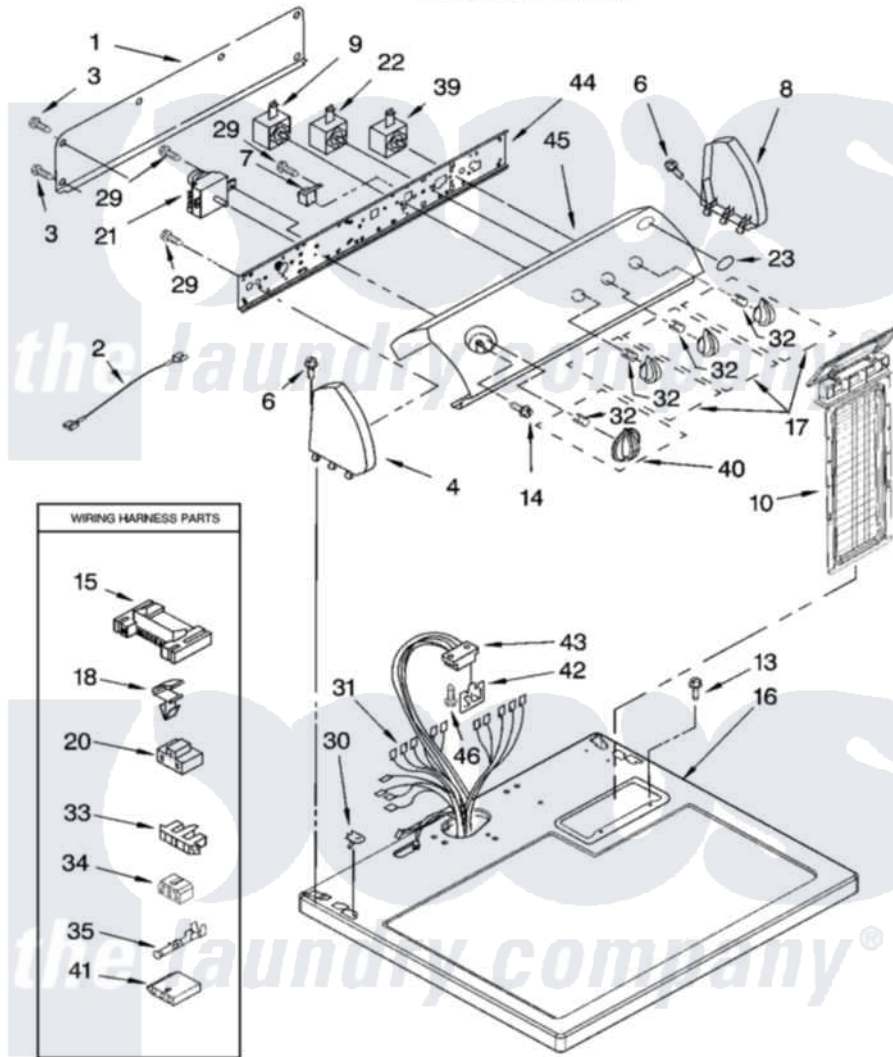

8180370

3

Whirlpool Residential Whirlpool LEN2000PW0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	8530152			Switch, Temperature
10	8557857			Screen, Lint
"	8557858			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding
15	3395683			Receptacle, Multi-Terminal
16	8557930	8563985		Top

"	8557931	8563986	Top
17	8544937		Knob, Control
"	8544938		Knob, Control
18	3394427		Clip-Harness
20	3401144		Connector
21	3406725		Timer Assembly
22	3405154		Switch Rotary
23	3400985		Medallion
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299889	8576506	Harness, Wiring
32	8536939		Clip, Knob
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
40	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
41	3936144		Do-It-Yourself Repair Manuals
42	3390537	8558178	Control, Electronic
43	3391885		Connector, Edge
44	8544895		Bracket, Control
45	8545988		Panel, Control
"	8545989		Panel, Control
46	343641	681414	Screw, 10AB X 1/2

the laundry company[®]

the laundry company[®]